



Delta PLC/HMI Cable Selection Guide



Delta PLC/HMI Cable Selection Guide

Revision History

Version	Revision	Date
First version	The first version is published.	2015/11/13

Send Quote Requests to info@automatedpt.com

Call +1(800)985-6929 To Order or Order Online At Deltaacdrives.com

Delta PLC/HMI Cable Selection Guide

Table of Contents

Preface	I
Chapter 1 Cables for PLC Programming and Serial Communication	1-1
1.1 DVP-ES2/EX2 Series	1-3
1.2 DVP-ES/EX Serie	1-5
1.3 DVP-EC3 Series.....	1-6
1.4 DVP-SS2 Series.....	1-9
1.5 DVP-SX Series	1-10
1.6 DVP-SX2 Series.....	1-11
1.6.1 DVP-SX2 Series PLCs.....	1-11
1.6.2 DVP-SX2 Series PLCs and Communication Modules	1-12
1.7 DVP-SV2 Series.....	1-13
1.7.1 DVP-SV2 Series PLCs.....	1-13
1.7.2 DVP-SV2 Series PLCs and Communication Modules	1-14
1.8 DVP-SA2 Series.....	1-15
1.8.1 DVP-SA2 Series PLCs.....	1-15
1.8.2 DVP-SA2 Series PLCs and Communication Modules	1-16
1.9 DVP-SE Series Series	1-17
1.9.1 DVP-SE Series PLCs	1-17
1.9.2 DVP-SE Series PLCs and Communication Modules	1-18
1.10 DVP-EH3 Series	1-19
1.10.1 DVP-EH3 Series PLCs	1-19
1.10.2 DVP-EH3 Series PLCs and Function Cards	1-20
1.10.3 DVP-EH3 Series PLCs and Communication Modules	1-21
1.11 DVP-PM Series	1-22
1.11.1 DVP-PM Series PLCs	1-22
1.11.2 DVP-PM Series PLCs and Function Cards	1-23
1.12 DVP-MC Series.....	1-24
1.13 DVP Series PLCs and the Delta Machine Vision System.....	1-25
1.14 AH500 Series.....	1-26
1.14.1 CPUs (AHCPU5XX-EN)	1-26
1.14.2 AHCPU5XX-EN and Communication Modules	1-27
1.14.3 AHCPU5XX-EN and the Delta Machine Vision System	1-28

1.14.4	CPUs (AHCPU5XX-RS2)	1-29
1.14.5	AHCPU5XX-RS2 and Communication Modules	1-30
1.14.6	AHCPU5XX-RS2 and the Delta Machine Vision System.....	1-31
1.14.7	Motion Control	1-32
1.15	AS300 Series.....	1-33
1.15.1	AS300 Series PLCs.....	1-33
1.15.2	AS300 Series PLCs and Function Cards	1-34
1.15.3	AS300 Series PLCs and the Delta Machine Vision System.....	1-35
1.16	TP Series	1-36
1.17	DOP-B Series.....	1-43
1.18	DOP-W Series.....	1-57
1.19	DOP Series HMIs and the Delta Machine Vision System (RS-232)	1-59
1.20	DOP Series HMIs and the Delta Machine Vision System (Ethernet).....	1-60
1.21	Cable Models	1-61
1.22	Descriptions of Cable Models.....	1-80
	 Chapter 2 Extension Cables for I/O Modules.....	2-1
2.1	DVP Series Slim PLCs.....	2-2
2.1.1	DVP32SM11N.....	2-2
2.1.2	DVP32SN11TN	2-2
2.2	AH500 Series	2-3
2.2.1	AH32AM10N-5B.....	2-3
2.2.2	AH32AM10N-5C.....	2-3
2.2.3	AH64AM10N-5C.....	2-4
2.2.4	AH32AN02T-5B	2-5
2.2.5	AH32AN02P-5B	2-5
2.2.6	AH32AN02T-5C	2-6
2.2.7	AH32AN02P-5C	2-6
2.2.8	AH64AN02T-5C	2-7
2.2.9	AH64AN02P-5C	2-8
2.2.10	AH20MC-5A	2-9
2.2.11	AH10EMC-5A/AH10DMC-5A/AH10CMC-5A/AH10PMC-5A	2-9
2.2.12	AH10PM-5A	2-10
2.2.13	AH15PM-5A	2-10
2.2.14	AH04HC-5A	2-11
2.2.15	AH500 Series Main Backplanes	2-12
2.3	AS300 Series.....	2-13
2.3.1	AS332T-A/AS332P-A/AS324MT-A	2-13

2.3.2	AS32AM10N-A.....	2-13
2.3.3	AS32AN02T-A.....	2-14
2.3.4	AS64AM10N-A.....	2-14
2.3.5	AS64AN02T-A.....	2-15
2.4	Cable Models	2-15
2.5	Descriptions of Cable Models	2-26
Chapter 3 Motion Control Cables.....		3-1
3.1	CANopen Motion Control Cables.....	3-2
3.1.1	DVP-MC Series (DVP10MC11T)	3-2
3.1.2	DVP-PM Series.....	3-3
3.2	DMCNET Motion Control Cables	3-4
3.2.1	AH20MC-5A	3-4
3.3	EtherCAT Motion Control Cables	3-6
3.3.1	AH10EMC-5A.....	3-6
3.4	Cable Models	3-7
3.5	Descriptions of Cable Models	3-9
Chapter 4 Networking Cables		4-1
4.1	CANopen Communication	4-2
4.1.1	Applicable CANopen Models	4-2
4.1.2	Specifications Related to CANopen Communication	4-3
4.1.3	Terminator	4-6
4.2	PROFIBUS DP Communication	4-8
4.2.1	Applicable PROFIBUS DP Models.....	4-9
4.2.2	Specifications Related to PROFIBUS DP Communication	4-9
4.3	DeviceNet Communication	4-11
4.3.1	Applicable DeviceNet Models.....	4-11
4.3.2	Specifications Related to DeviceNet	4-12
4.3.3	Terminator	4-14
Appendix A Cable Table.....		A-1
A.1	Cable Table	A-2
Appendix B USB Driver.....		B-1
B.1	Installing the UC-PRG020-12A/IFD6500 Driver	B-2

Preface

Delta PLC/HMI Cable Selection Guide helps users rapidly get the information about the cables suitable to be applied among the communication interfaces of numerous PLCs/HMIs. Cables are classified into four types in this manual. They are cables for PLC programming and serial communication, extension cables for I/O modules, motion control cables, and networking cables. These four types of cables are introduced in Chapter 1~Chapter 4 in detail. The cable models introduced and related descriptions are listed in Appendix A for reference.

Delta PLC/HMI Cable Selection Guide

MEMO

II



Chapter 1 Cables for PLC Programming and Serial Communication

Table of Contents


1.1 DVP-ES2/EX2 Series.....	1-3
1.2 DVP-ES/EX Series.....	1-5
1.3 DVP-EC3 Series.....	1-6
1.4 DVP-SS2 Series.....	1-9
1.5 DVP-SX Series	1-10
1.6 DVP-SX2 Series	1-11
1.6.1 DVP-SX2 Series PLCs.....	1-11
1.6.2 DVP-SX2 Series PLCs and Communication Modules	1-12
1.7 DVP-SV2 Series	1-13
1.7.1 DVP-SV2 Series PLCs.....	1-13
1.7.2 DVP-SV2 Series PLCs and Communication Modules	1-14
1.8 DVP-SA2 Series	1-15
1.8.1 DVP-SA2 Series PLCs.....	1-15
1.8.2 DVP-SA2 Series PLCs and Communication Modules	1-16
1.9 DVP-SE Series.....	1-17
1.9.1 DVP-SE Series PLCs	1-17
1.9.2 DVP-SE Series PLCs and Communication Modules	1-18
1.10 DVP-EH3 Series.....	1-19
1.10.1 DVP-EH3 Series PLCs	1-19
1.10.2 DVP-EH3 Series PLCs and Function Cards	1-20
1.10.3 DVP-EH3 Series PLCs and Communication Modules	1-21
1.11 DVP-PM Series	1-22
1.11.1 DVP-PM Series PLCs	1-22

Delta PLC/HMI Cable Selection Guide

1.11.2	DVP-PM Series PLCs and Function Cards	1-23
1.12	DVP-MC Series	1-24
1.13	DVP Series PLCs and the Delta Machine Vision System	1-25
1.14	AH500 Series	1-26
1.14.1	CPUs (AHCPU5XX-EN)	1-26
1.14.2	AHCPU5XX-EN and Communication Modules	1-27
1.14.3	AHCPU5XX-EN and the Delta Machine Vision System	1-28
1.14.4	CPUs (AHCPU5XX-RS2)	1-29
1.14.5	AHCPU5XX-RS2 and Communication Modules	1-30
1.14.6	AHCPU5XX-RS2 and the Delta Machine Vision System.....	1-31
1.14.7	Motion Control Modules	1-32
1.15	AS300 Series.....	1-33
1.15.1	AS300 Series PLCs.....	1-33
1.15.2	AS300 Series PLCs and Function Cards	1-34
1.15.3	AS300 Series PLCs and the Delta Machine Vision System.....	1-35
1.16	TP Series.....	1-36
1.17	DOP-B Series.....	1-43
1.18	DOP-W Series.....	1-57
1.19	DOP Series HMIs and the Delta Machine Vision System (RS-232)	1-59
1.20	DOP Series HMIs and the Delta Machine Vision System (Ethernet)	1-60
1.21	Cable Models	1-61
1.22	Descriptions of Cable Models	1-80

1.1 DVP-ES2/EX2 Series


DVP-ES2/EX2 series (DVP16ES200R, DVP16ES200T, DVP20EX200R, DVP20EX200T, DVP24ES200R, DVP24ES200T, DVP30EX200R, DVP30EX200T, DVP32ES200R, DVP32ES200T, DVP32ES211T, DVP40ES200R, DVP40ES200RM, DVP40ES200T, DVP58ES200R, DVP58ES200T, DVP60ES200R, DVP60ES200T)

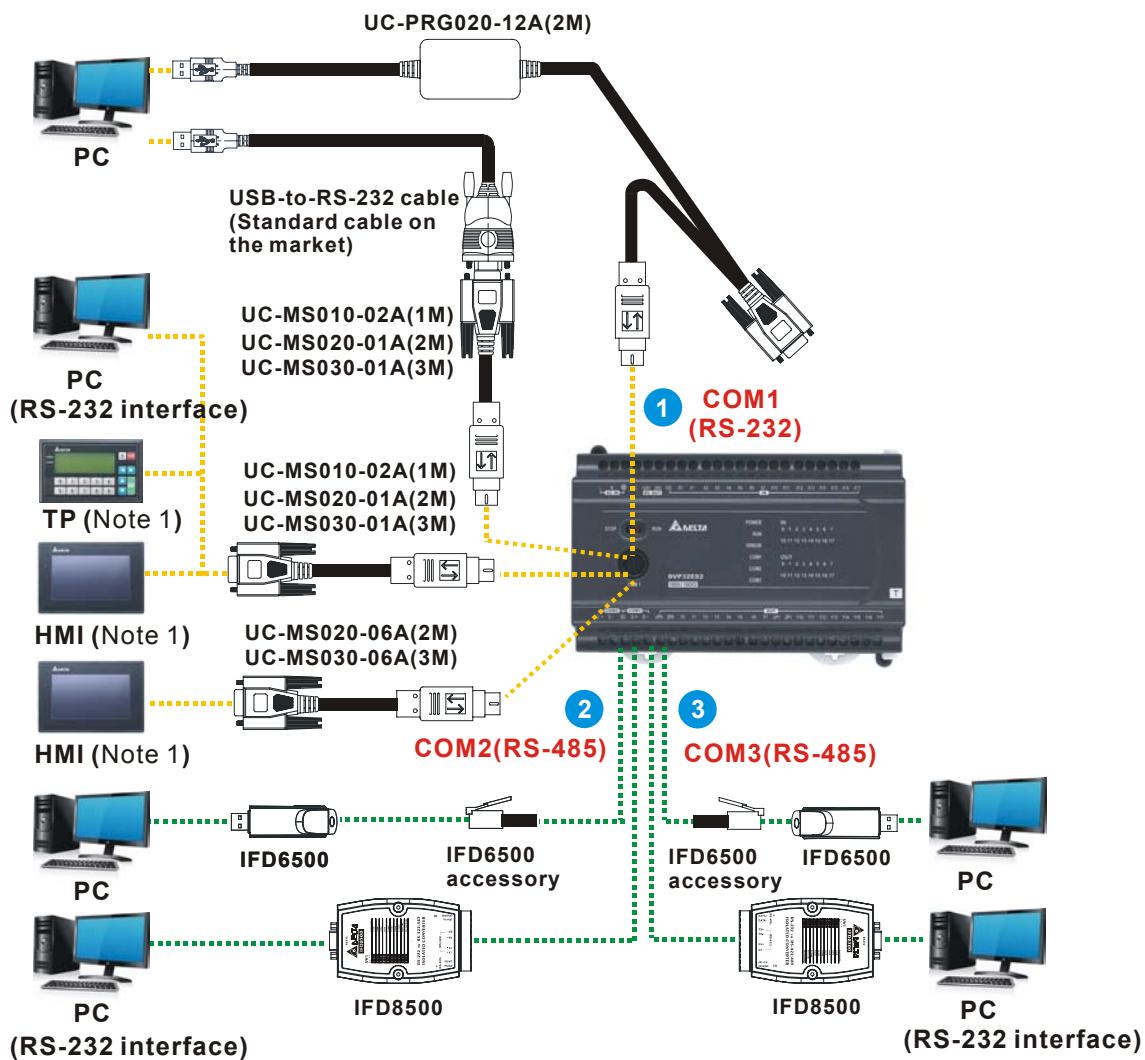

Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

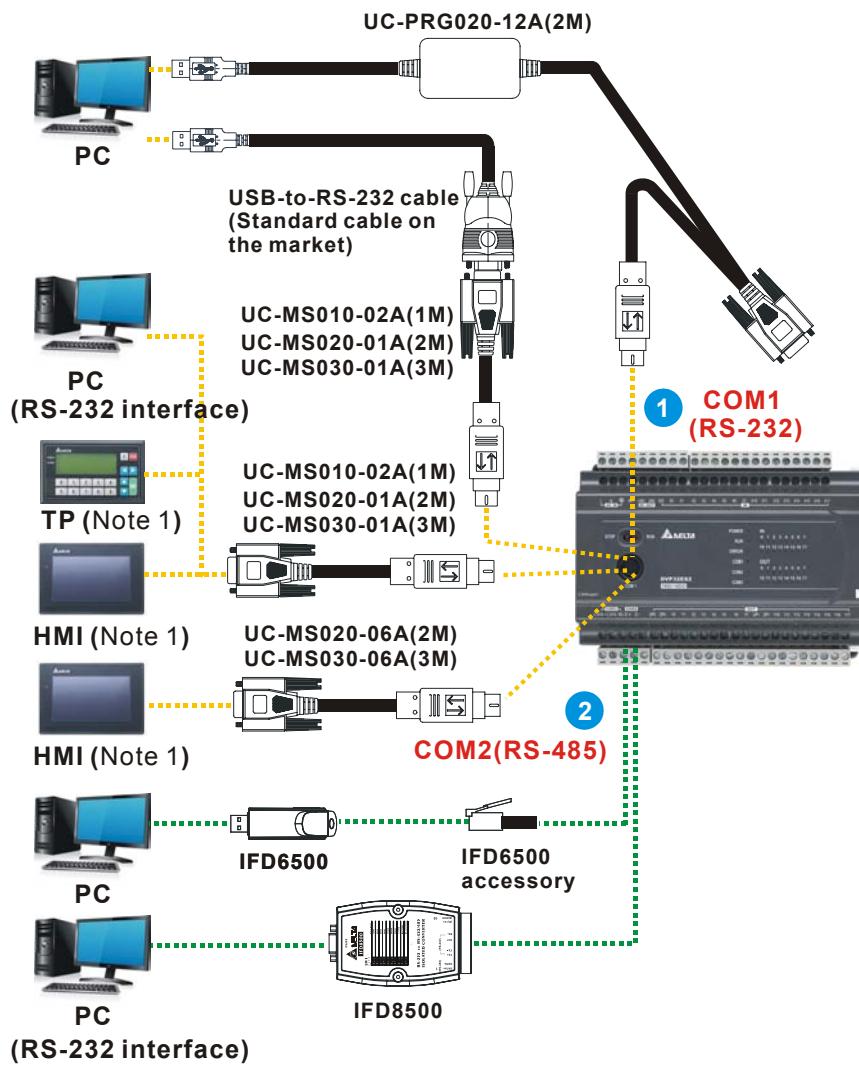
DVP-ES2 series (DVP32ES200RC, DVP32ES200TC)**1**

Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.2 DVP-ES/EX Series

DVP-ES/EX series (DVP14ES00R2, DVP14ES00T2, DVP20EX00R2, DVP20EX00T2, DVP24ES00R2, DVP24ES00T2, DVP30ES00R2, DVP30ES00T2, DVP32ES00R2, DVP32ES00T2, DVP40ES00R2, DVP40ES00T2, DVP60ES00R2, DVP60ES00T2)

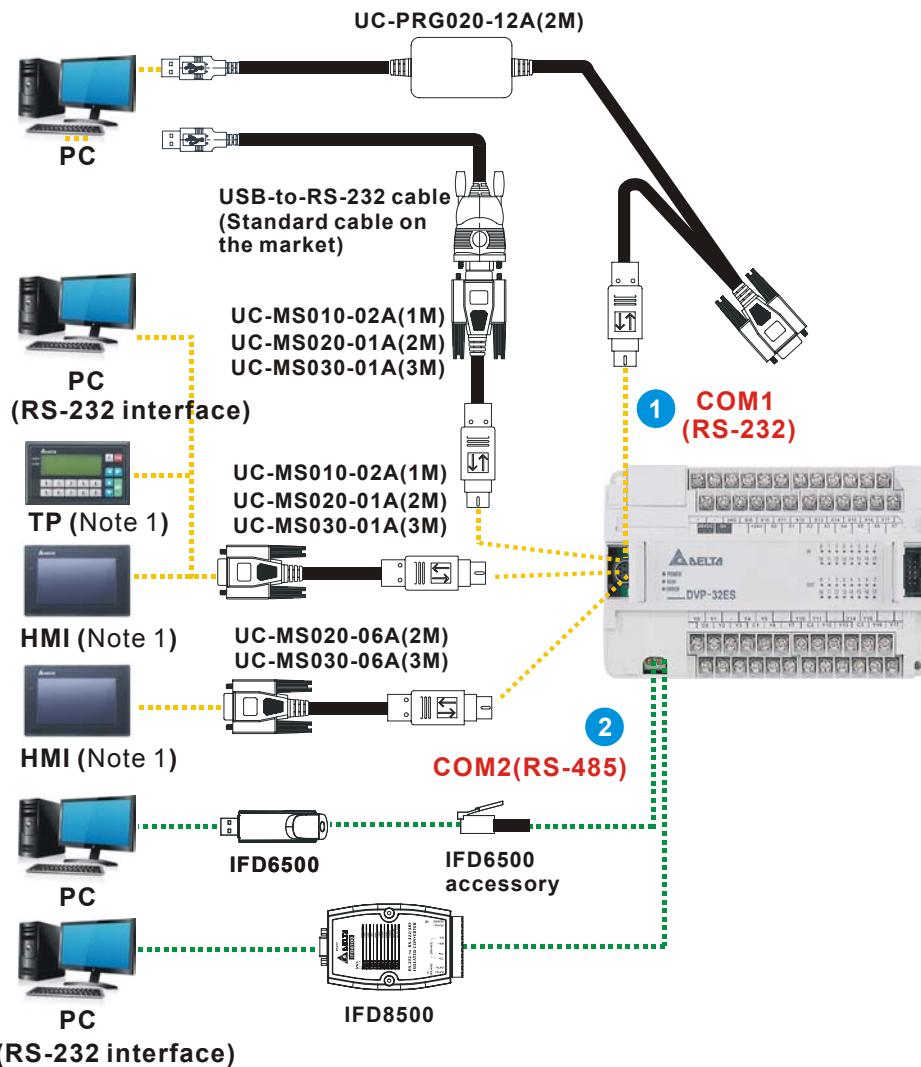


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.3 DVP-EC3 Series

DVP-EC3 series (DVP10EC00R3, DVP10EC00T3, DVP14EC00R3, DVP14EC00T3)

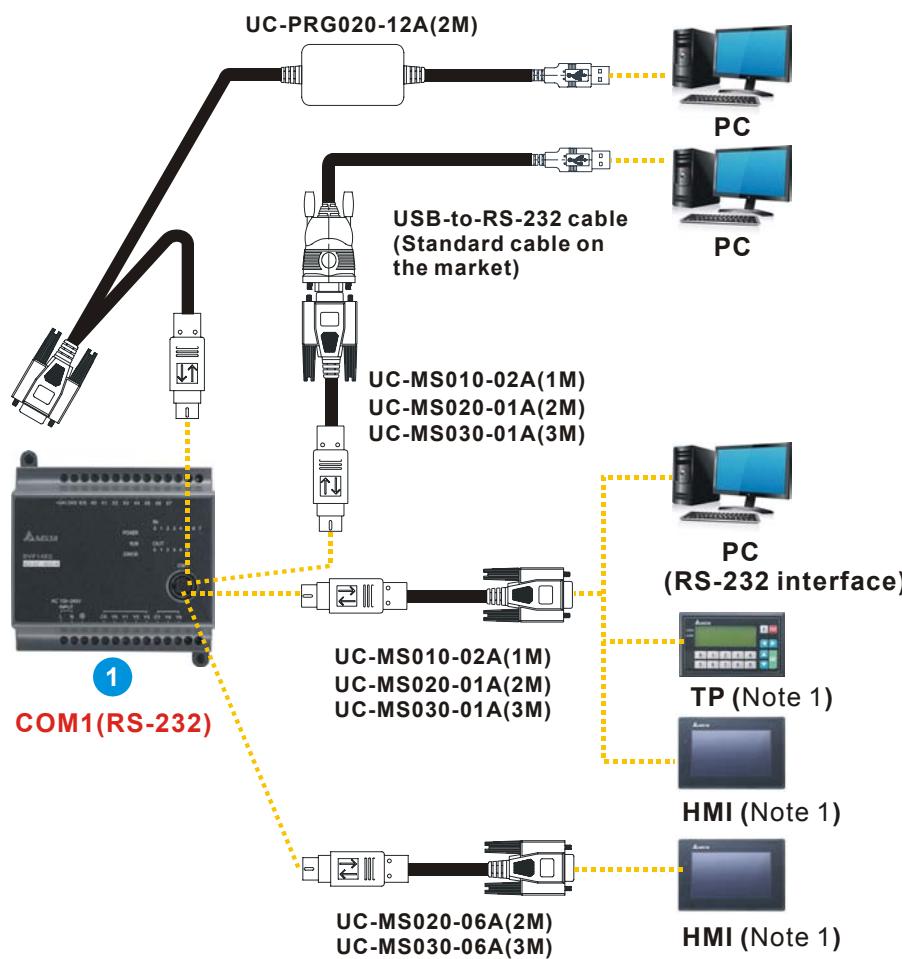


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about **1**, **2**, **3**, etc.

Chapter 1 Cables for PLC Programming and Serial Communication

DVP-EC3 series (DVP16EC00R3, DVP16EC00T3, DVP20EC00R3, DVP20EC00T3, DVP24EC00R3, DVP24EC00T3, DVP30EC00R3, DVP30EC00T3, DVP32EC00R3, DVP32EC00T3)

1

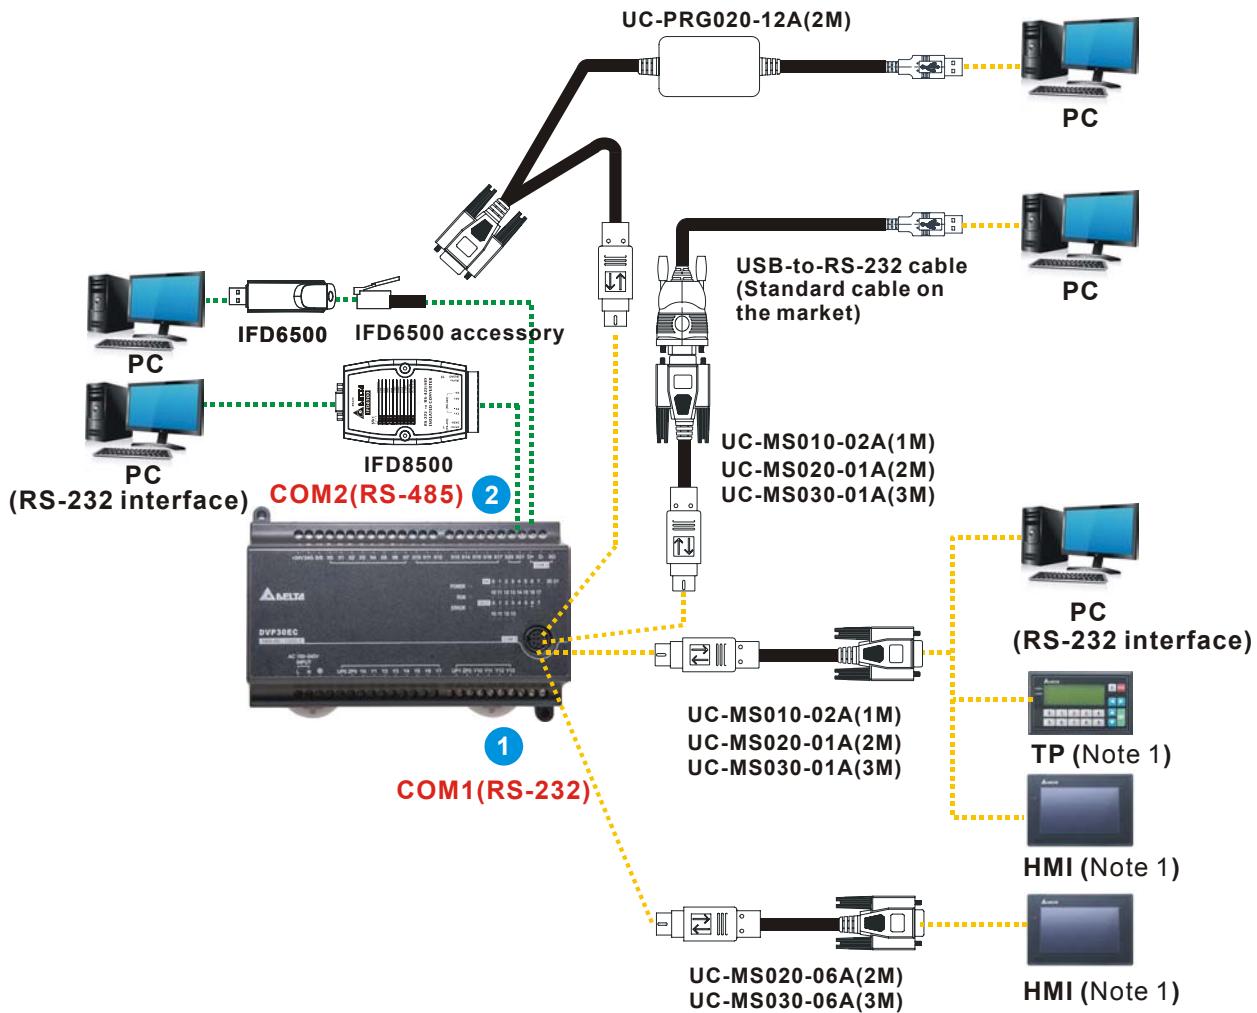


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

DVP-EC3 series (DVP40EC00R3, DVP40EC00T3, DVP48EC00R3, DVP48EC00T3, DVP60EC00R3, DVP60EC00T3)

1

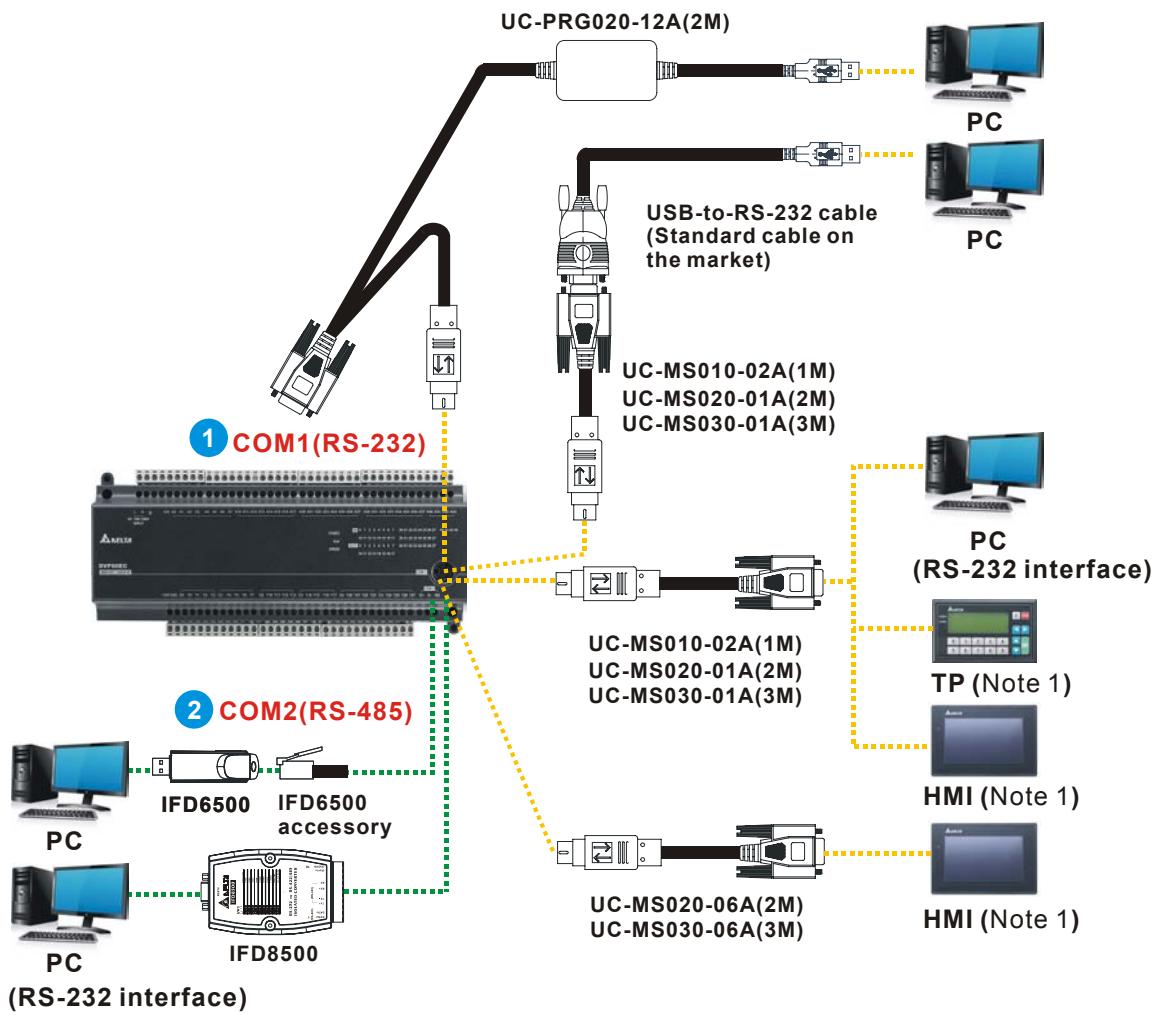


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.4 DVP-SS2 Series

DVP-SS2 series (DVP14SS211R, DVP14SS211T, DVP12SS211S)

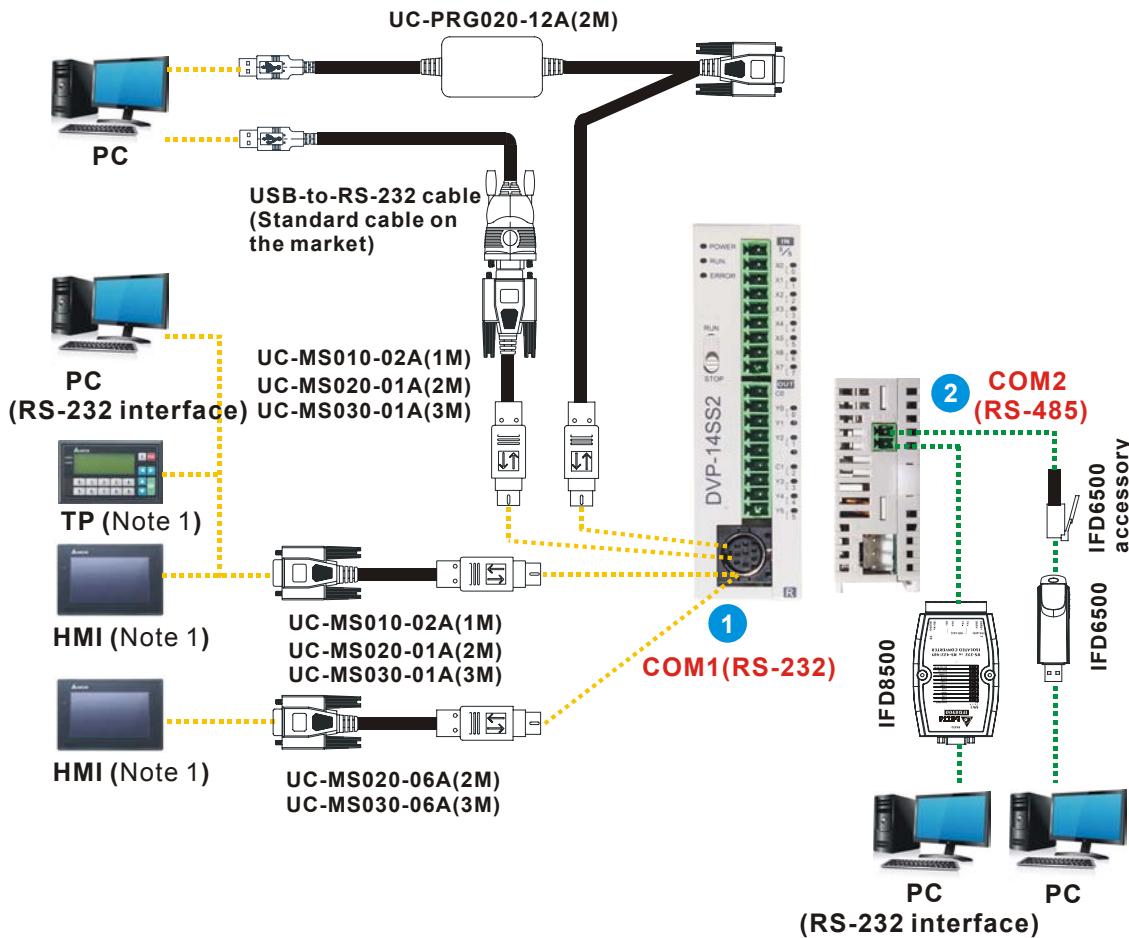


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.5 DVP-SX Series

DVP-SX series (DVP10SX11R, DVP10SX11T)

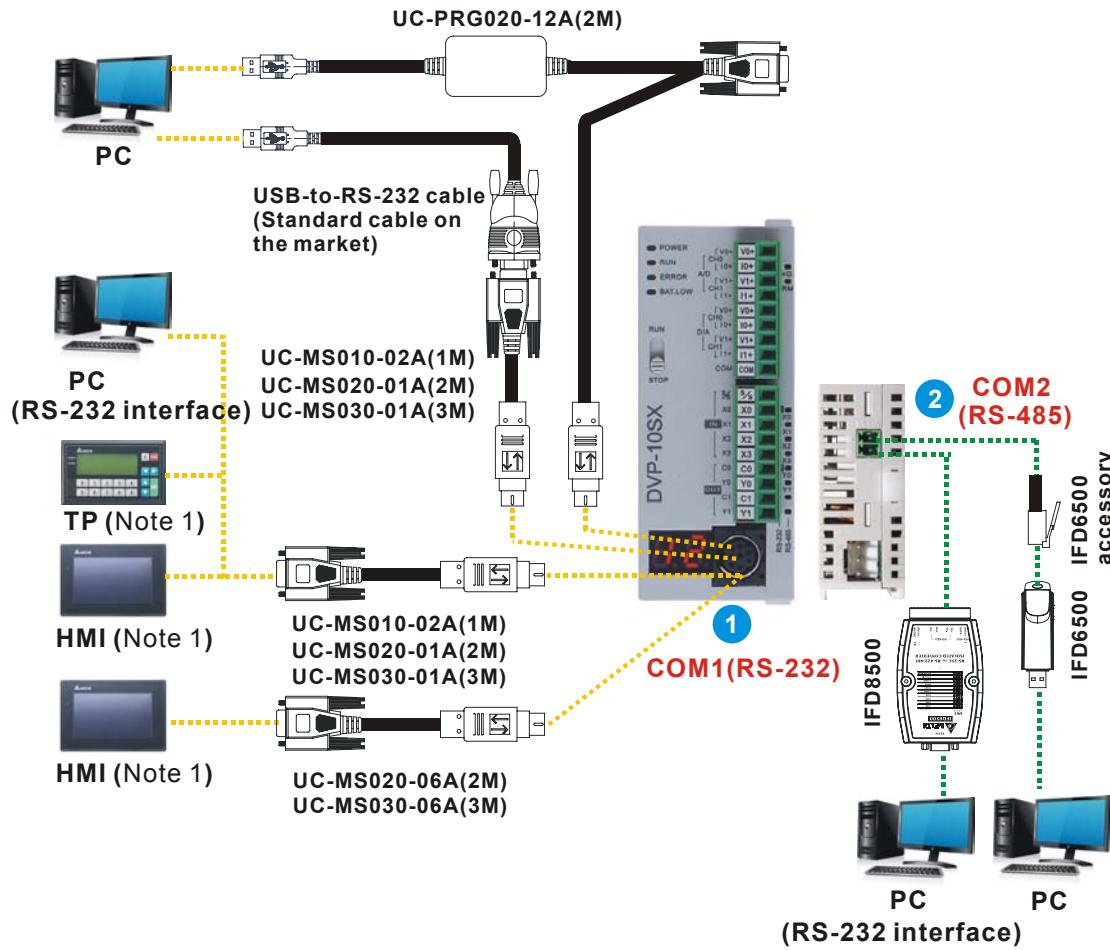


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.6 DVP-SX2 Series

1.6.1 DVP-SX2 Series PLCs

Applicable model: DVP20SX211R, DVP20SX211T, DVP20SX211S

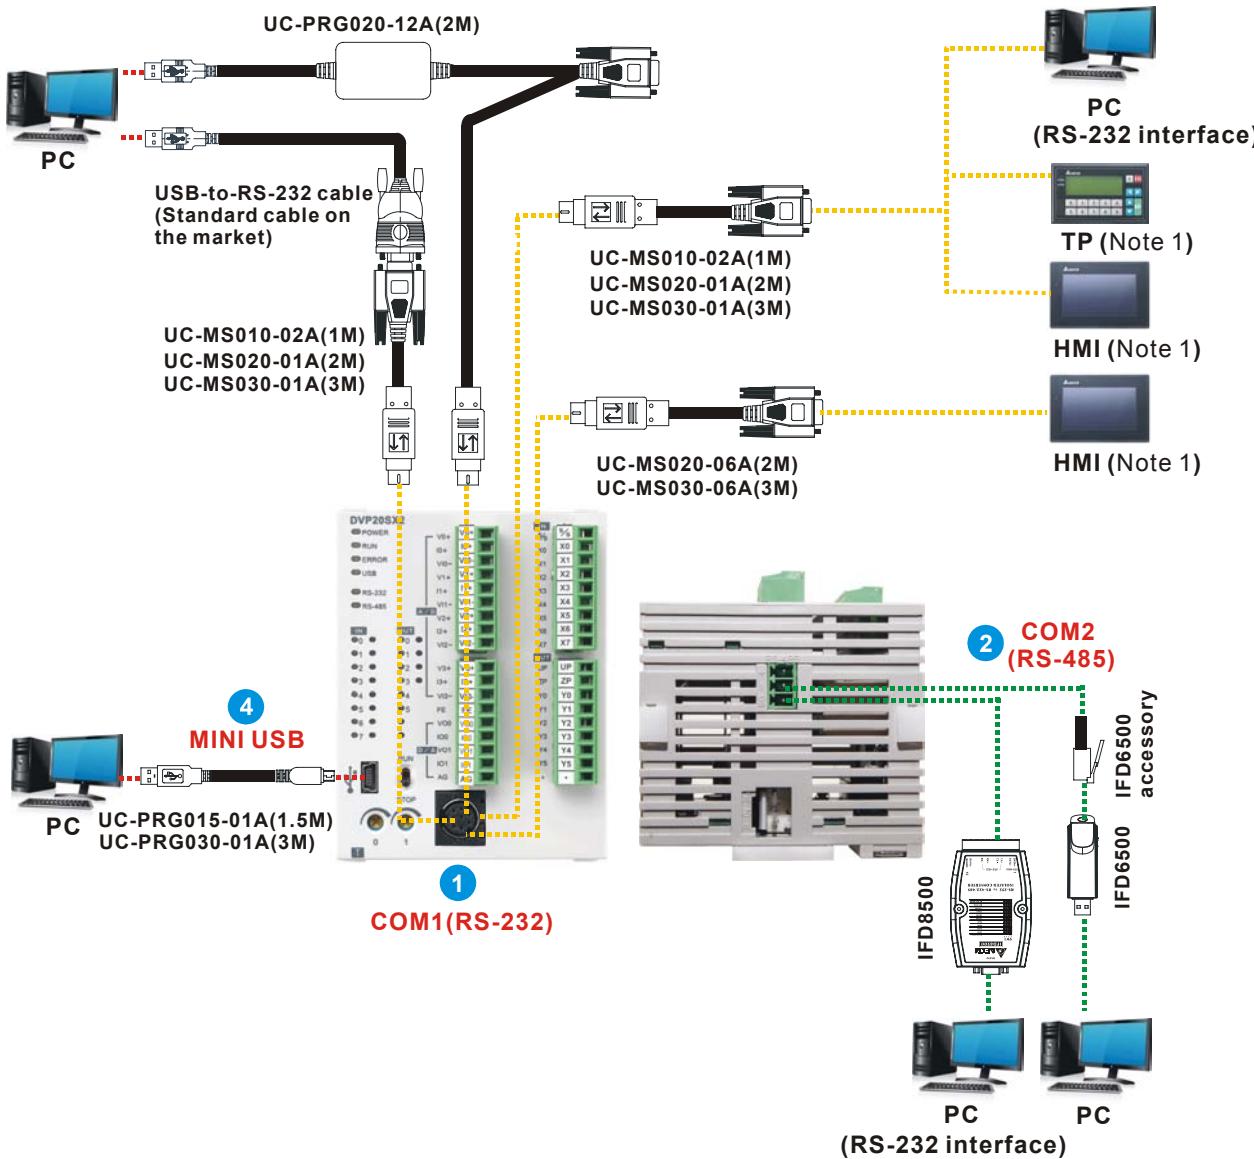


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.6.2 DVP-SX2 Series PLCs and Communication Modules

Applicable model: DVP20SX211R, DVP20SX211T, DVP20SX211S

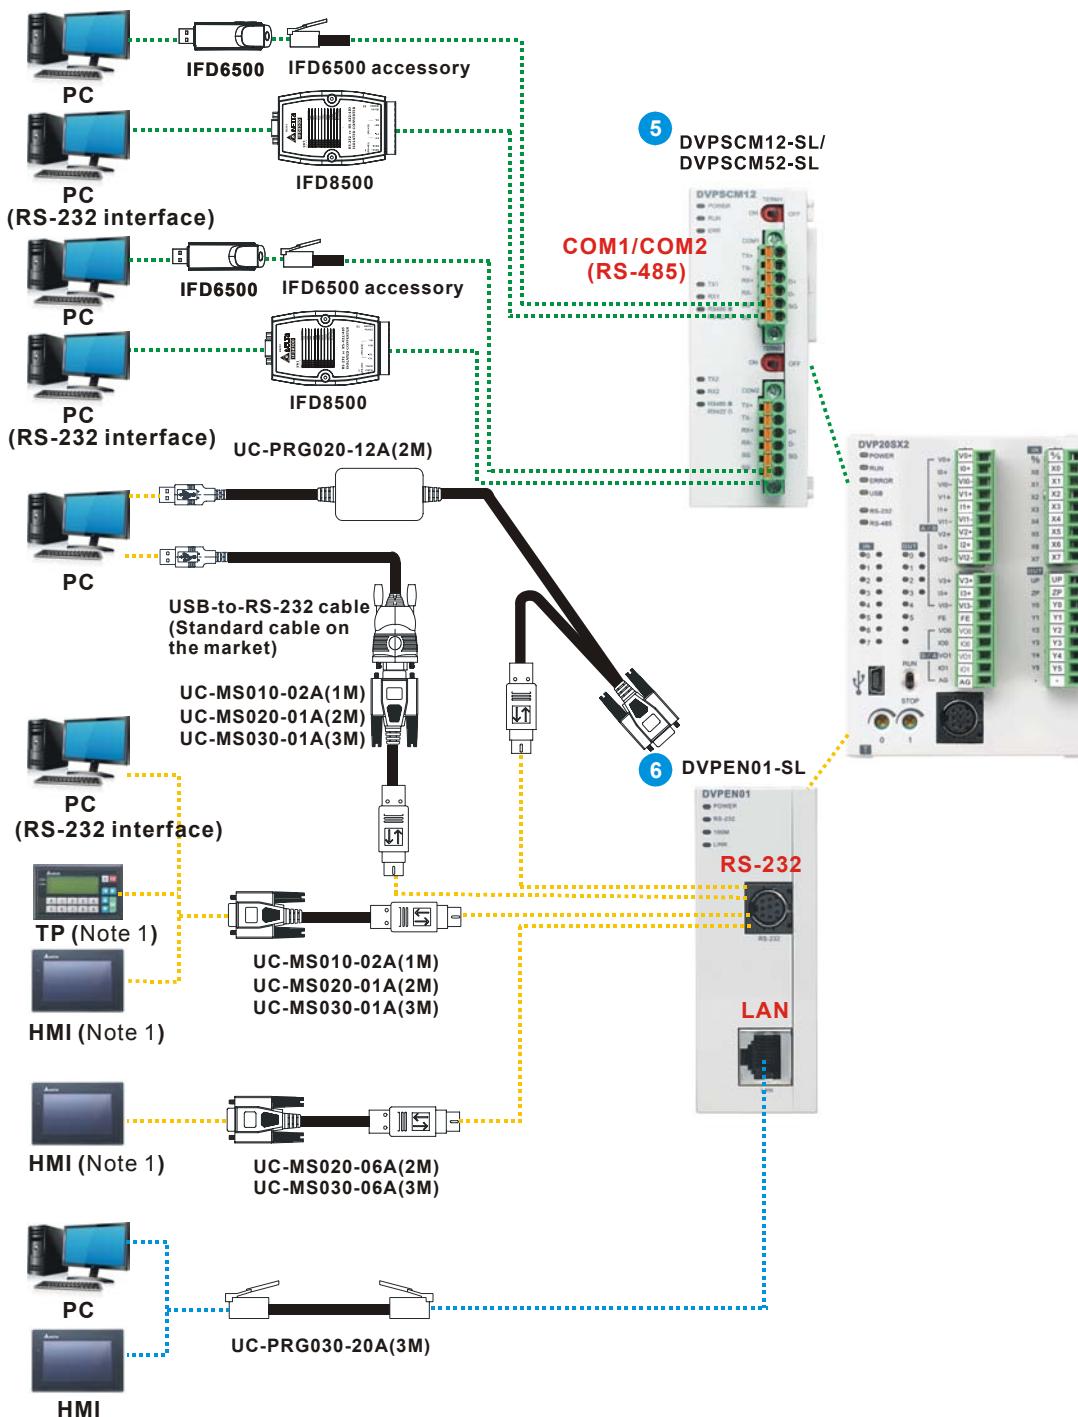


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about 1, 2, 3, etc.

1.7 DVP-SV2 Series

1.7.1 DVP-SV2 Series PLCs

Applicable model: DVP28SV11R2, DVP24SV11T2, DVP28SV11T2, DVP28SV11S2

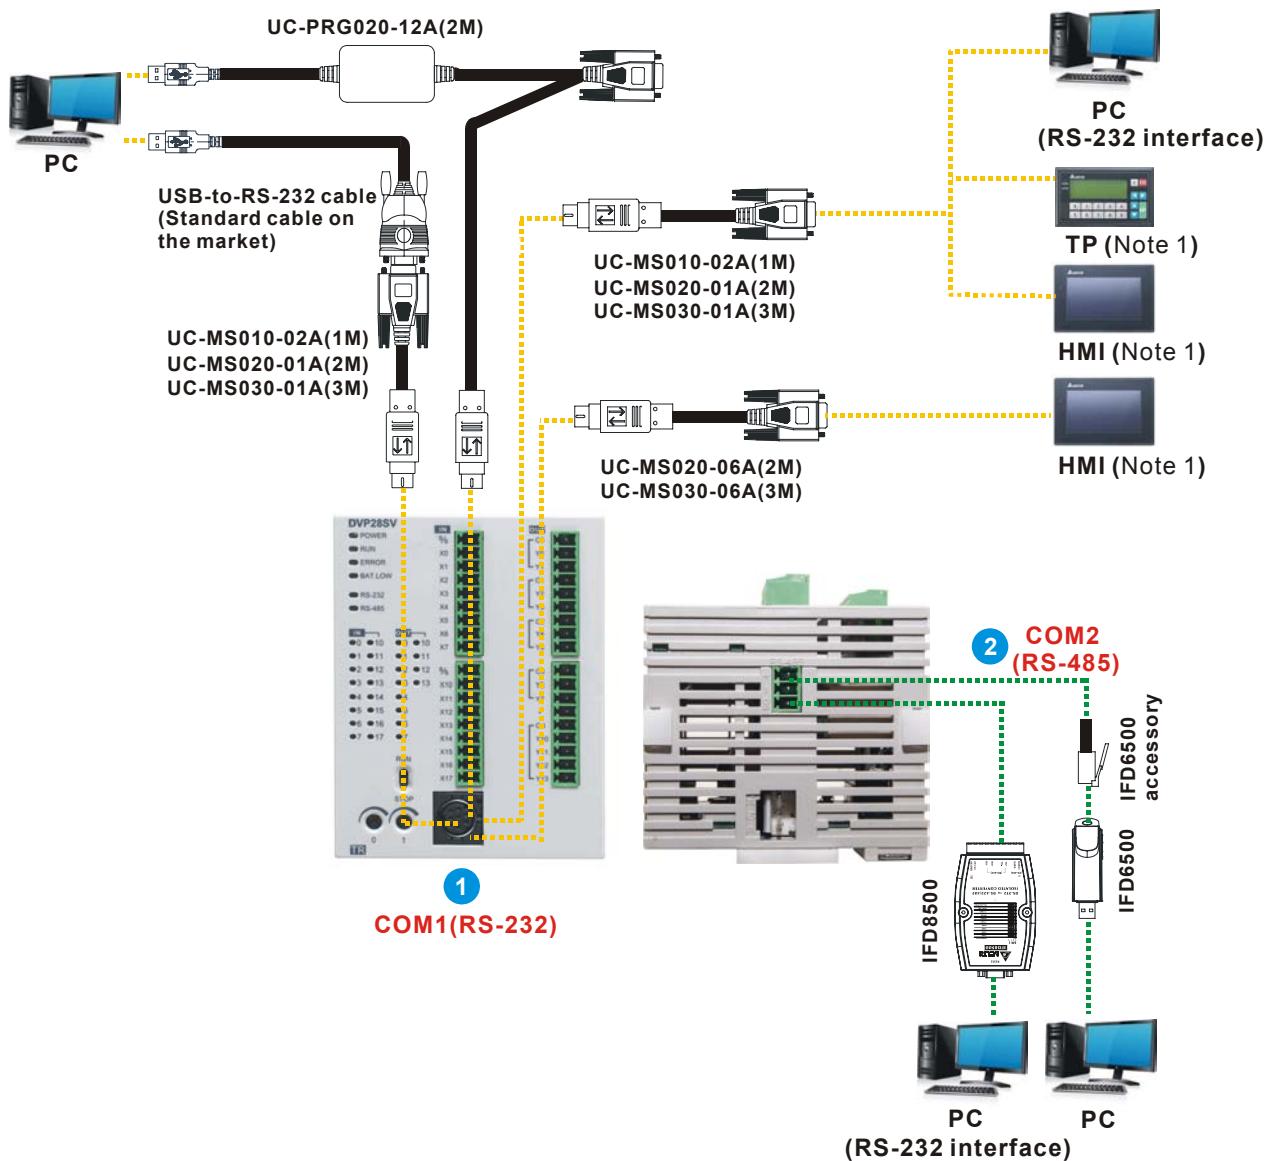


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.7.2 DVP-SV2 Series PLCs and Communication Modules

Applicable model: DVP28SV11R2, DVP24SV11T2, DVP28SV11T2, DVP28SV11S2

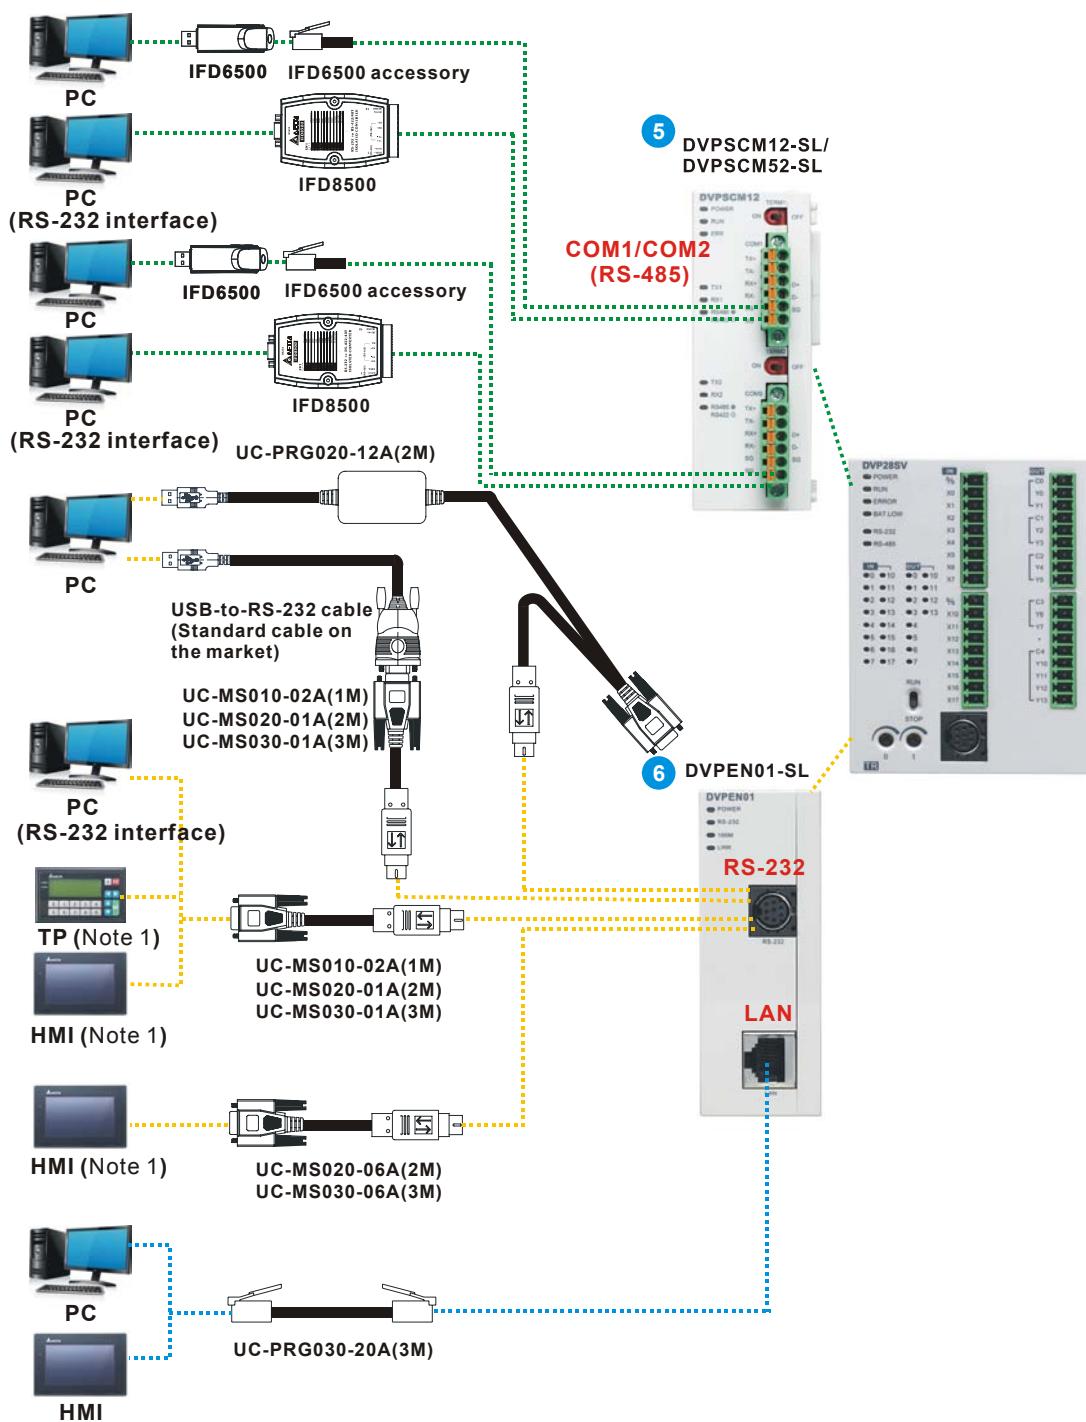


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.8 DVP-SA2 Series

1.8.1 DVP-SA2 Series PLCs

Applicable model: DVP12SA211R, DVP12SA211T

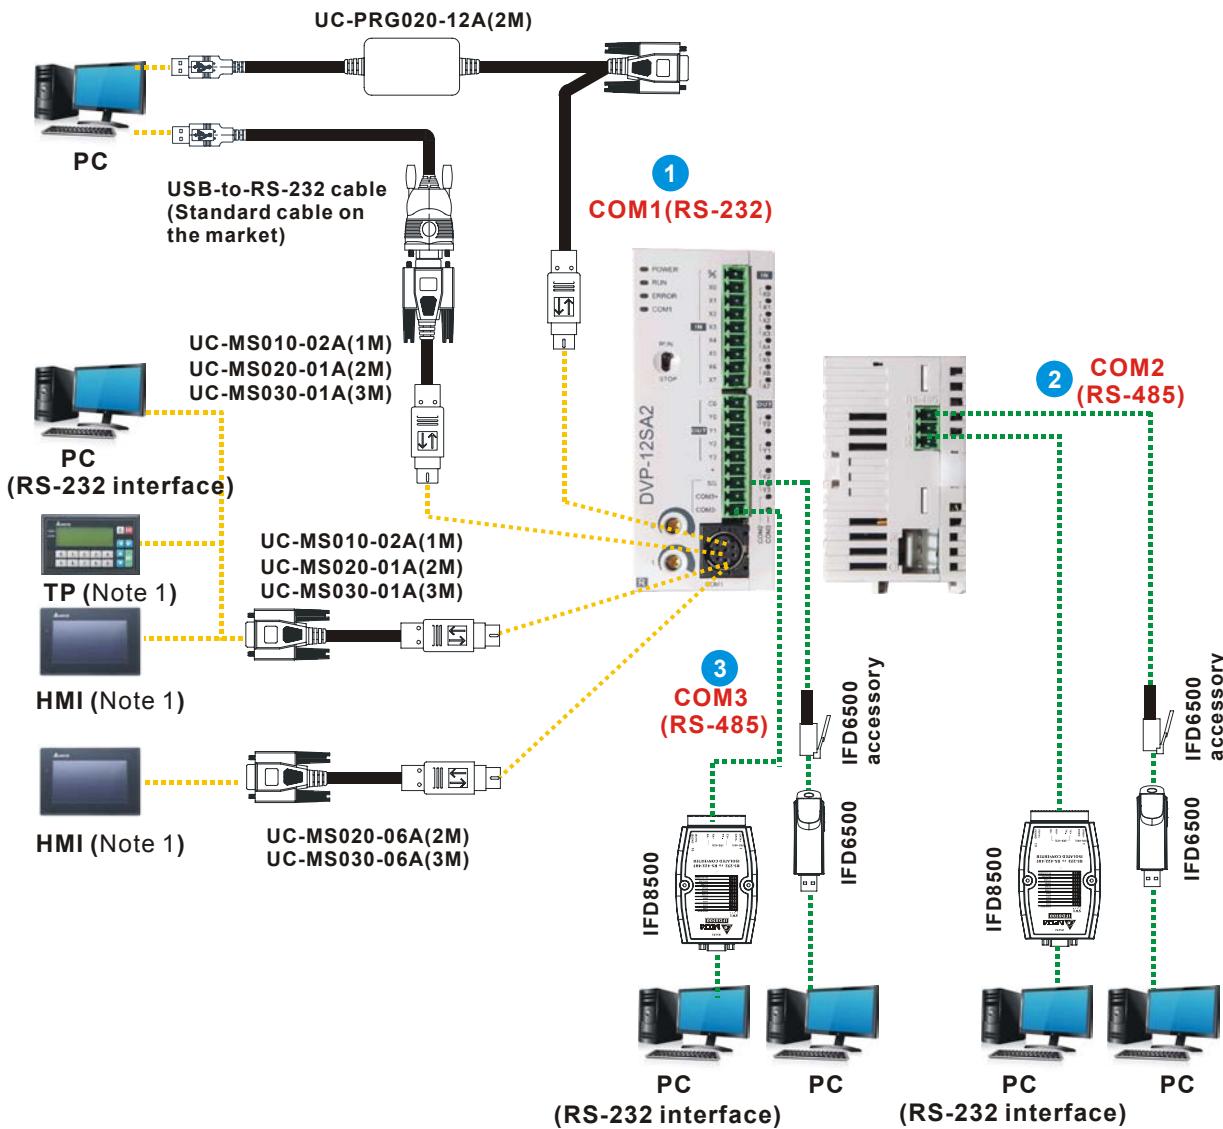


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.8.2 DVP-SA2 Series PLCs and Communication Modules

Applicable model: DVP12SA211R, DVP12SA211T

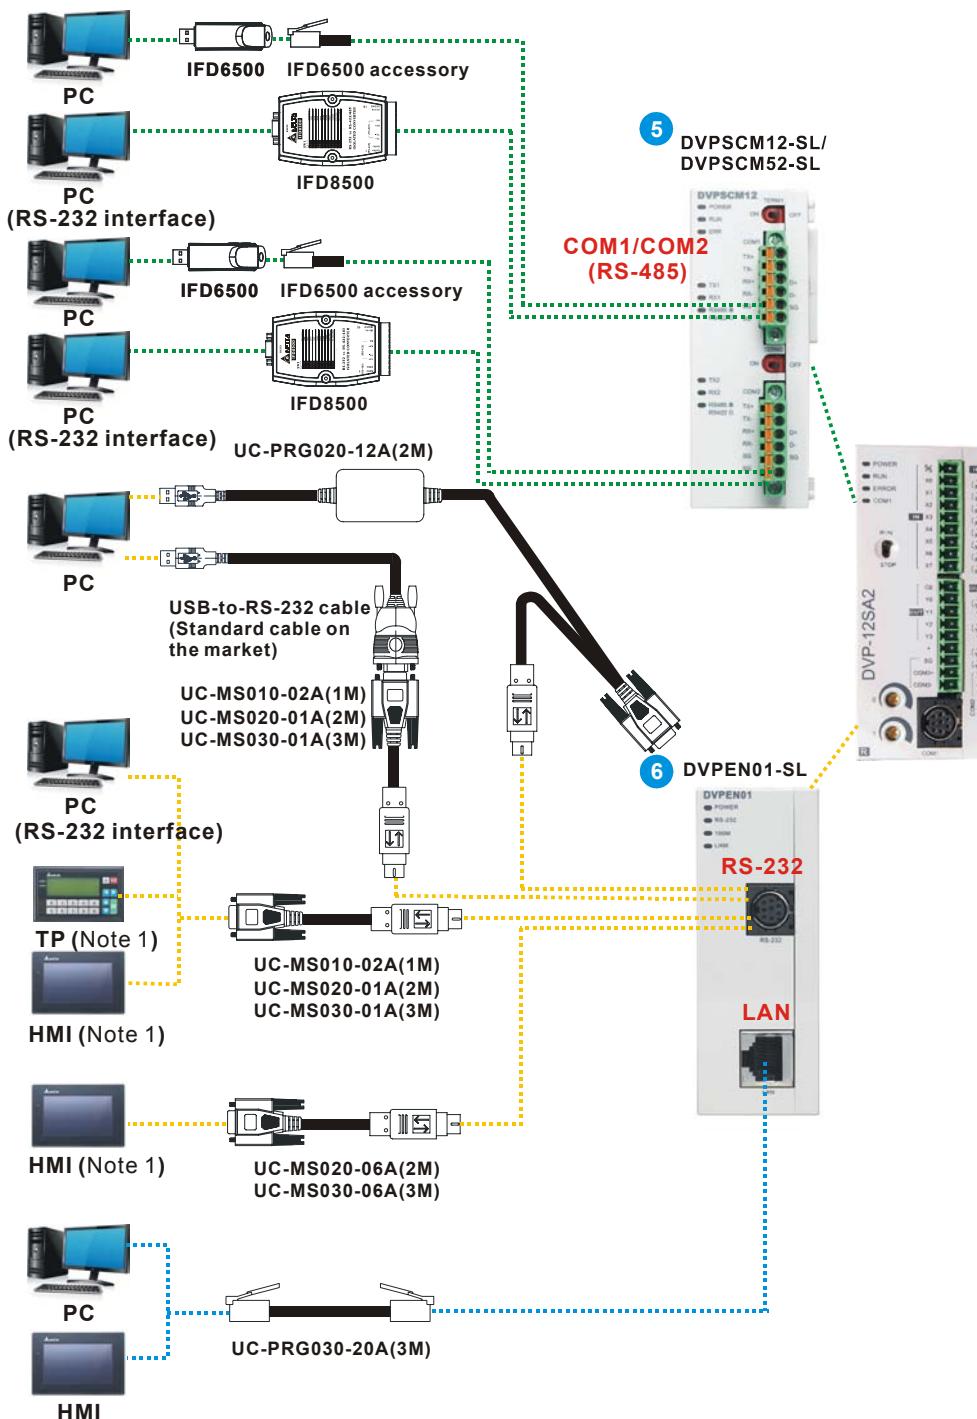


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.9 DVP-SE Series

1.9.1 DVP-SE Series PLCs

Applicable model: DVP12SE11R, DVP12SE11T

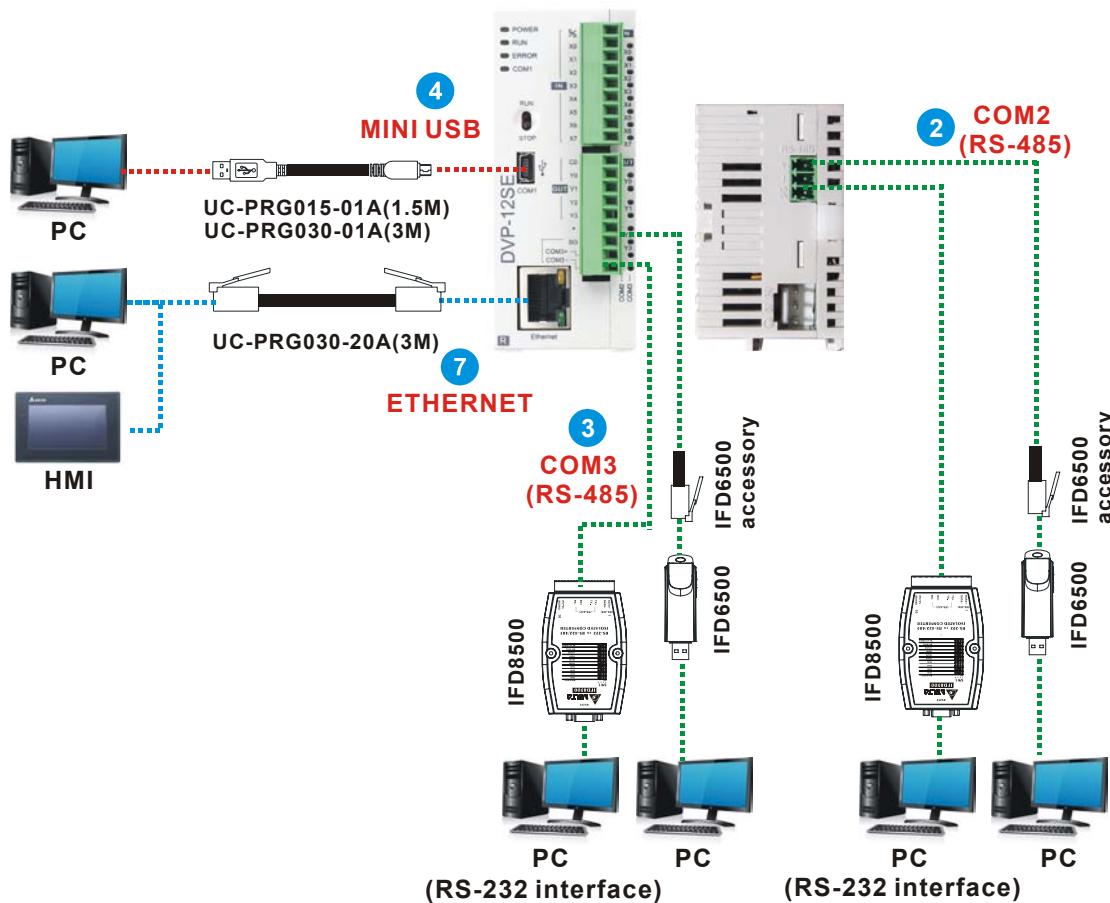


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.9.2 DVP-SE Series PLCs and Communication Modules

1 Applicable model: DVP12SE11R, DVP12SE11T

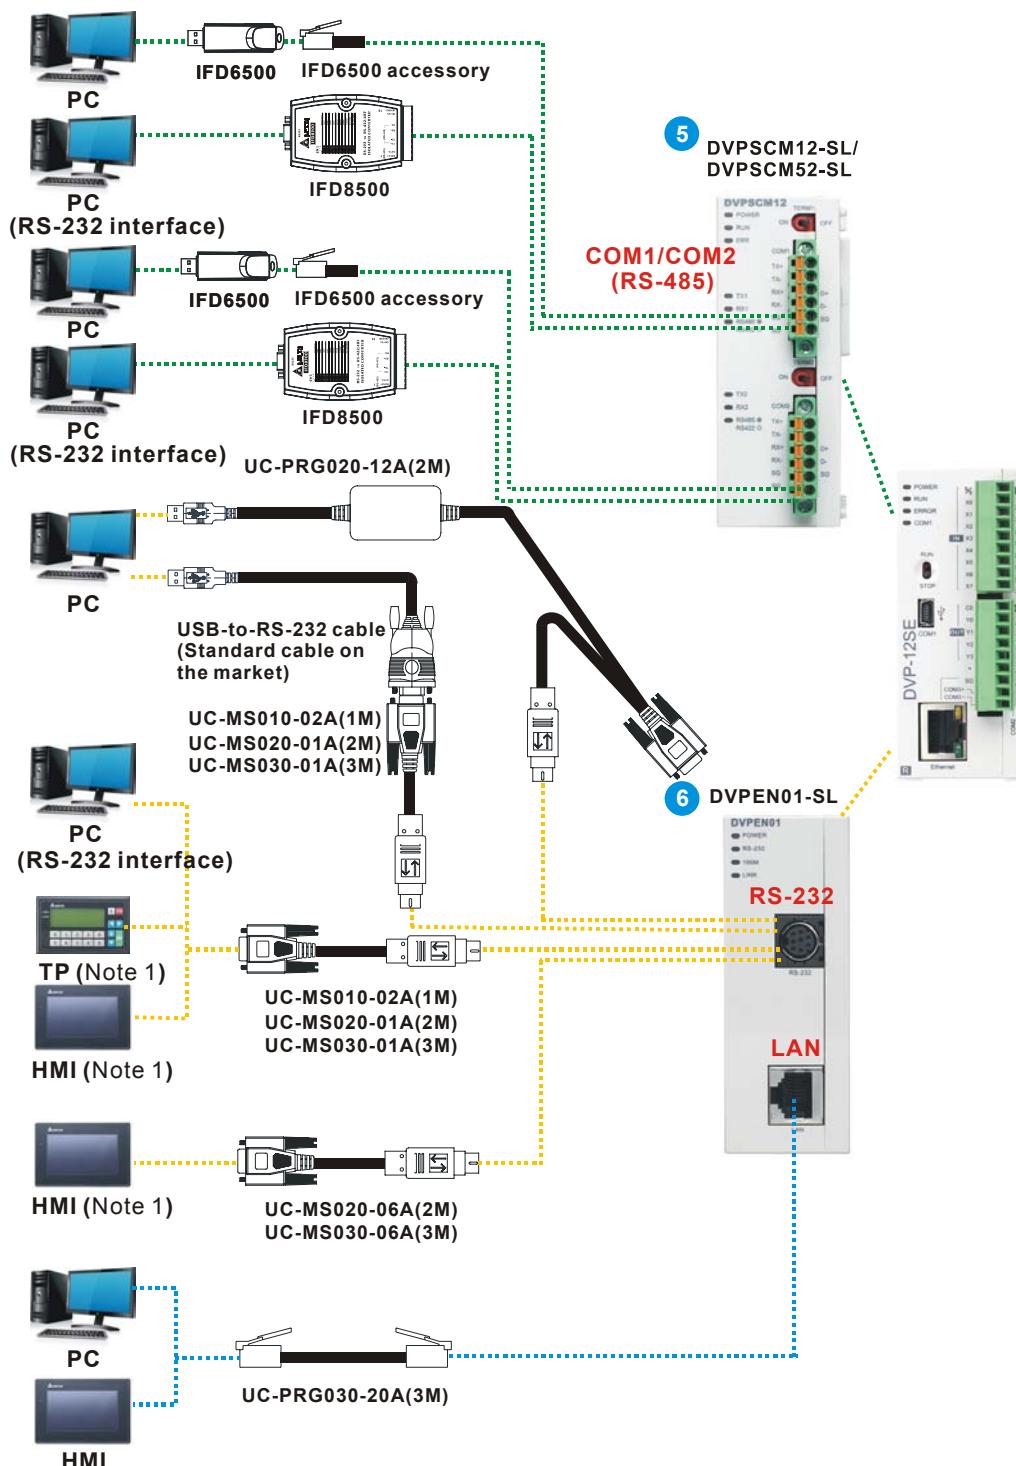


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.10 DVP-EH3 Series

1.10.1 DVP-EH3 Series PLCs

Applicable model: DVP16EH00R3, DVP16EH00T3, DVP20EH00R3, DVP20EH00T3, DVP32EH00M3, DVP32EH00R3, DVP32EH00R3-L, DVP32EH00T3, DVP32EH00T3-L, DVP40EH00R3, DVP40EH00T3, DVP48EH00R3, DVP48EH00T3, DVP64EH00R3, DVP64EH00T3, DVP80EH00R3, DVP80EH00T3

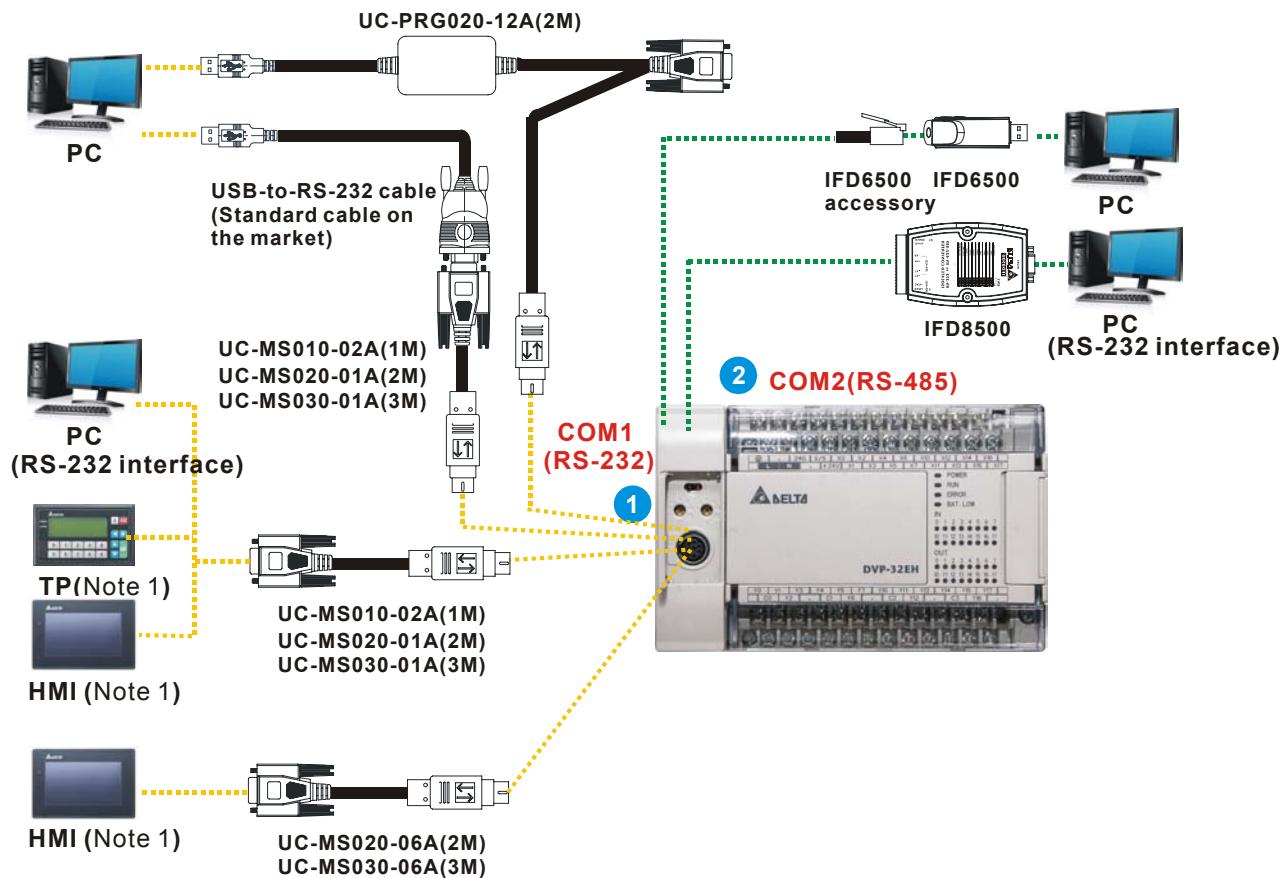


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.10.2 DVP-EH3 Series PLCs and Function Cards

Applicable model: DVP16EH00R3, DVP16EH00T3, DVP20EH00R3, DVP20EH00T3, DVP32EH00M3, DVP32EH00R3, DVP32EH00R3-L, DVP32EH00T3, DVP32EH00T3-L, DVP40EH00R3, DVP40EH00T3, DVP48EH00R3, DVP48EH00T3, DVP64EH00R3, DVP64EH00T3, DVP80EH00R3, DVP80EH00T3

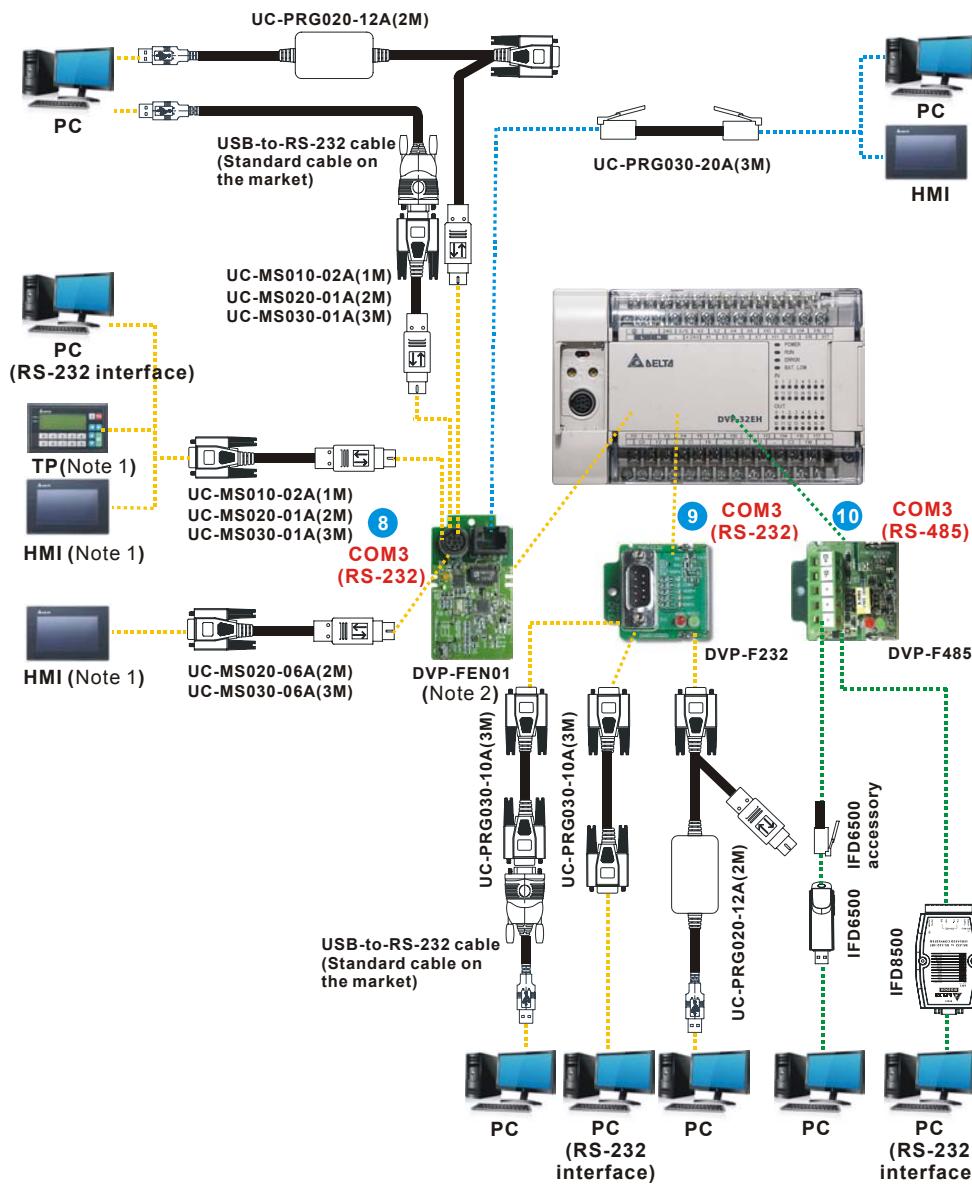


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: DVP-FEN01 is applicable to DVP32EH00M3, DVP32EH00R3, DVP32EH00R3-L, DVP32EH00T3, DVP32EH00T3-L, DVP40EH00R3, DVP40EH00T3, DVP48EH00R3, DVP48EH00T3, DVP64EH00R3, DVP64EH00T3, DVP80EH00R3, and DVP80EH00T3.

Note 3: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.10.3 DVP-EH3 Series PLCs and Communication Modules

Applicable model: DVP32EH00R3-L, DVP32EH00T3-L

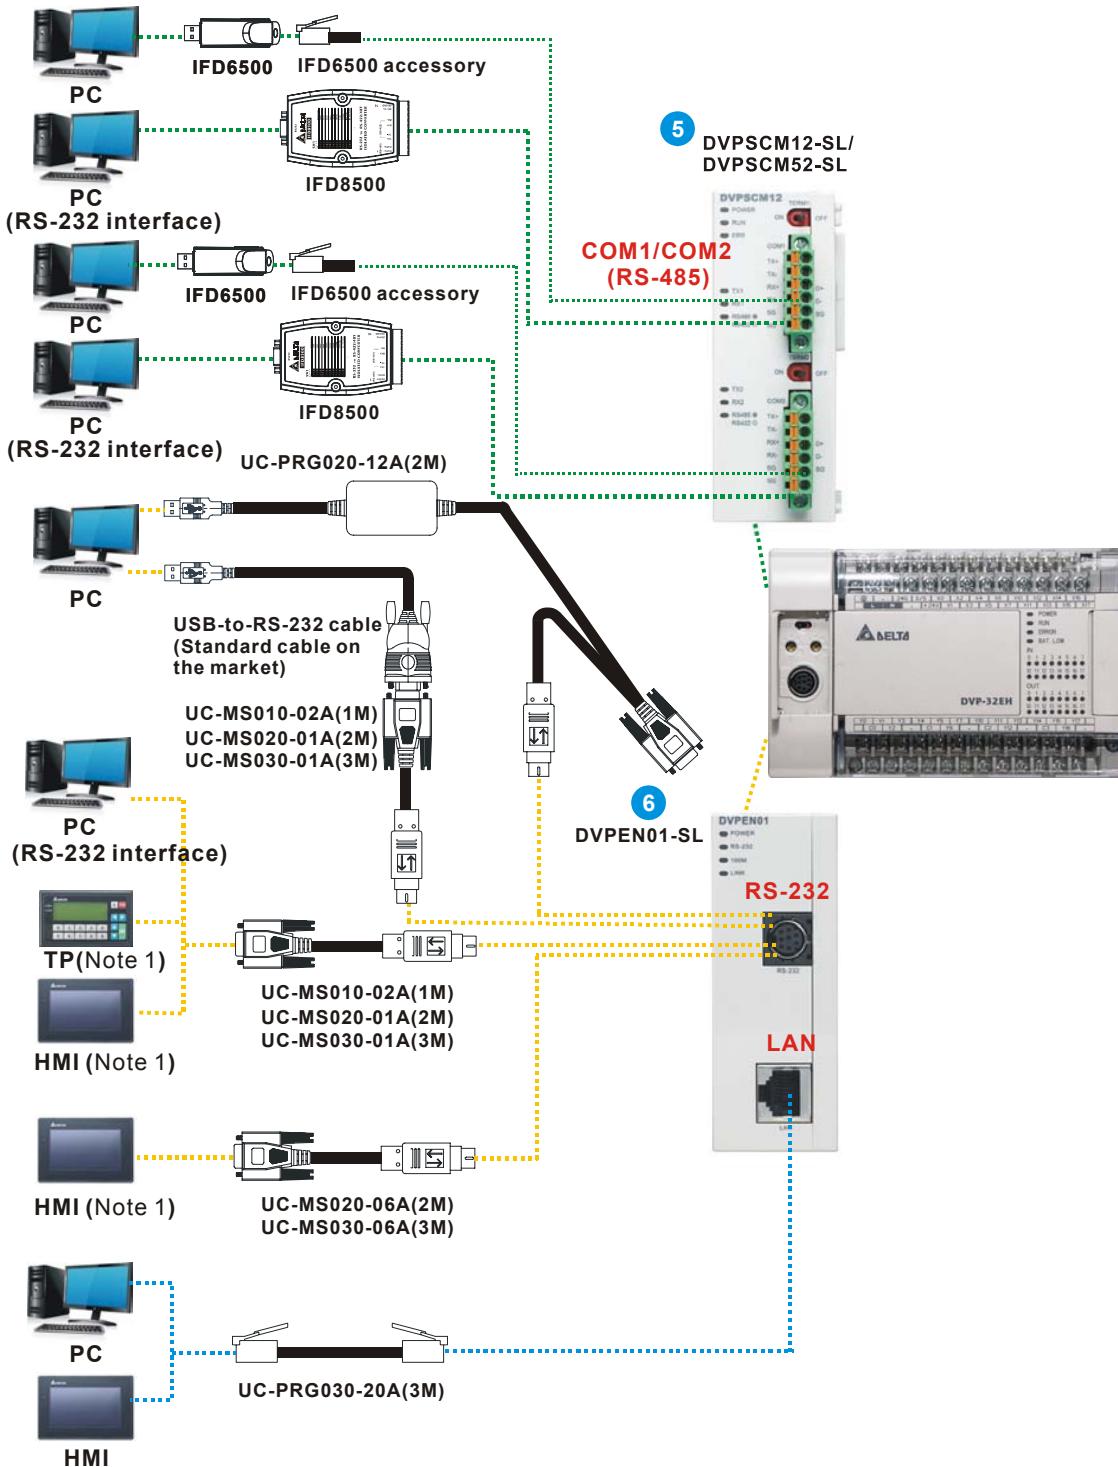


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.11 DVP-PM Series**1.11.1 DVP-PM Series PLCs**

Applicable model: DVP10PM00M, DVP20PM00D, DVP20PM00M

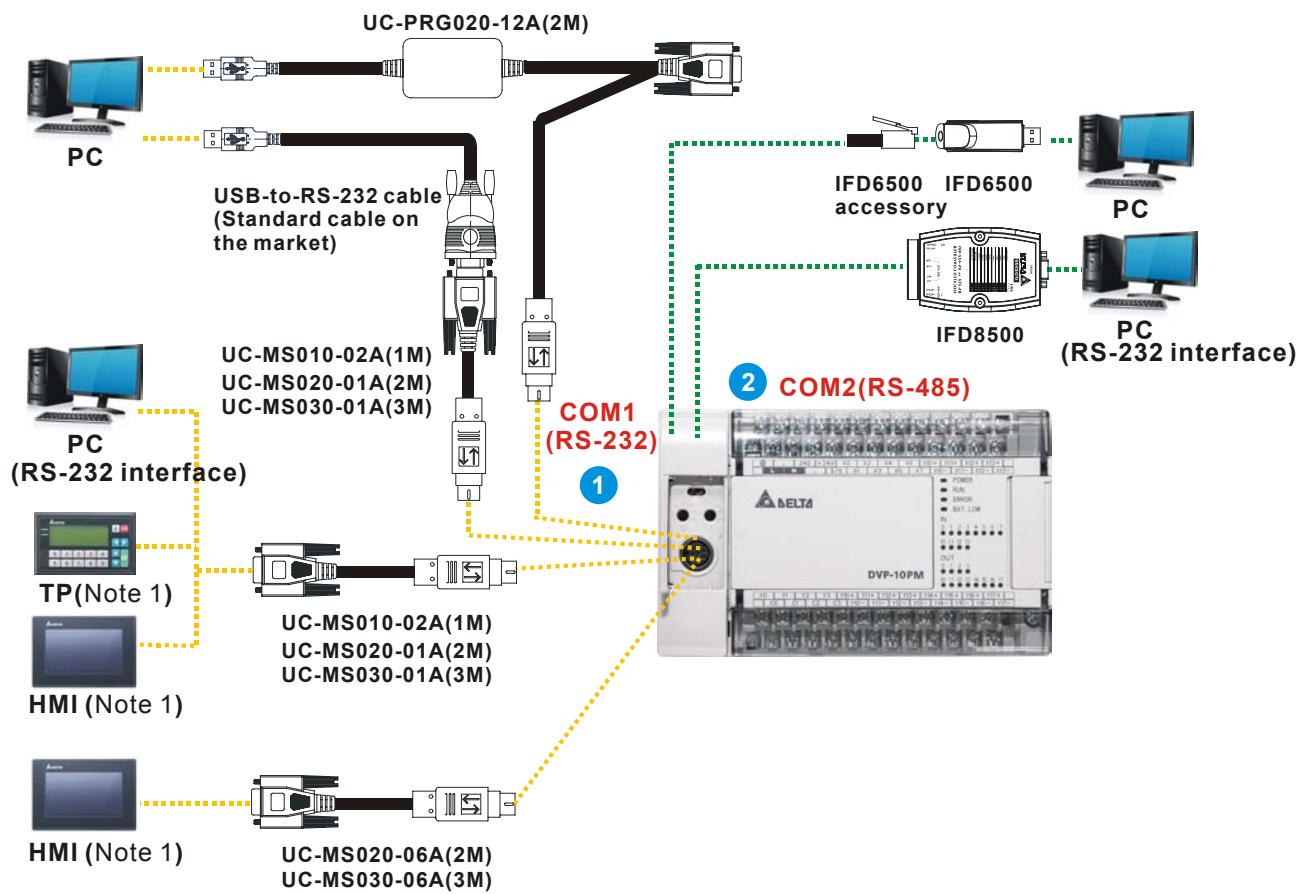


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.11.2 DVP-PM Series PLCs and Function Cards


Applicable model: DVP10PM00M, DVP20PM00D, DVP20PM00M

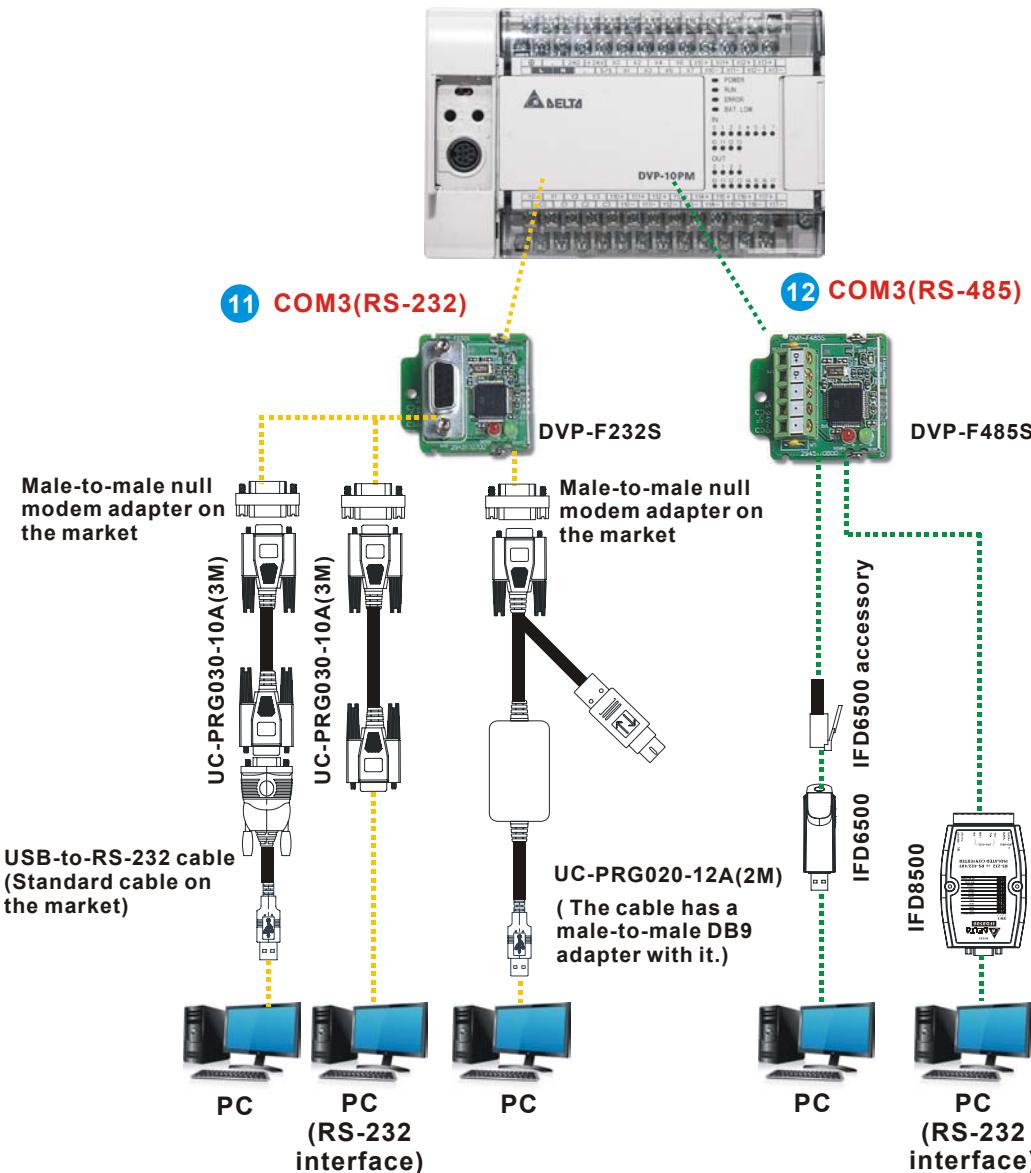

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.12 DVP-MC Series

DVP-MC series (DVP10MC11T)

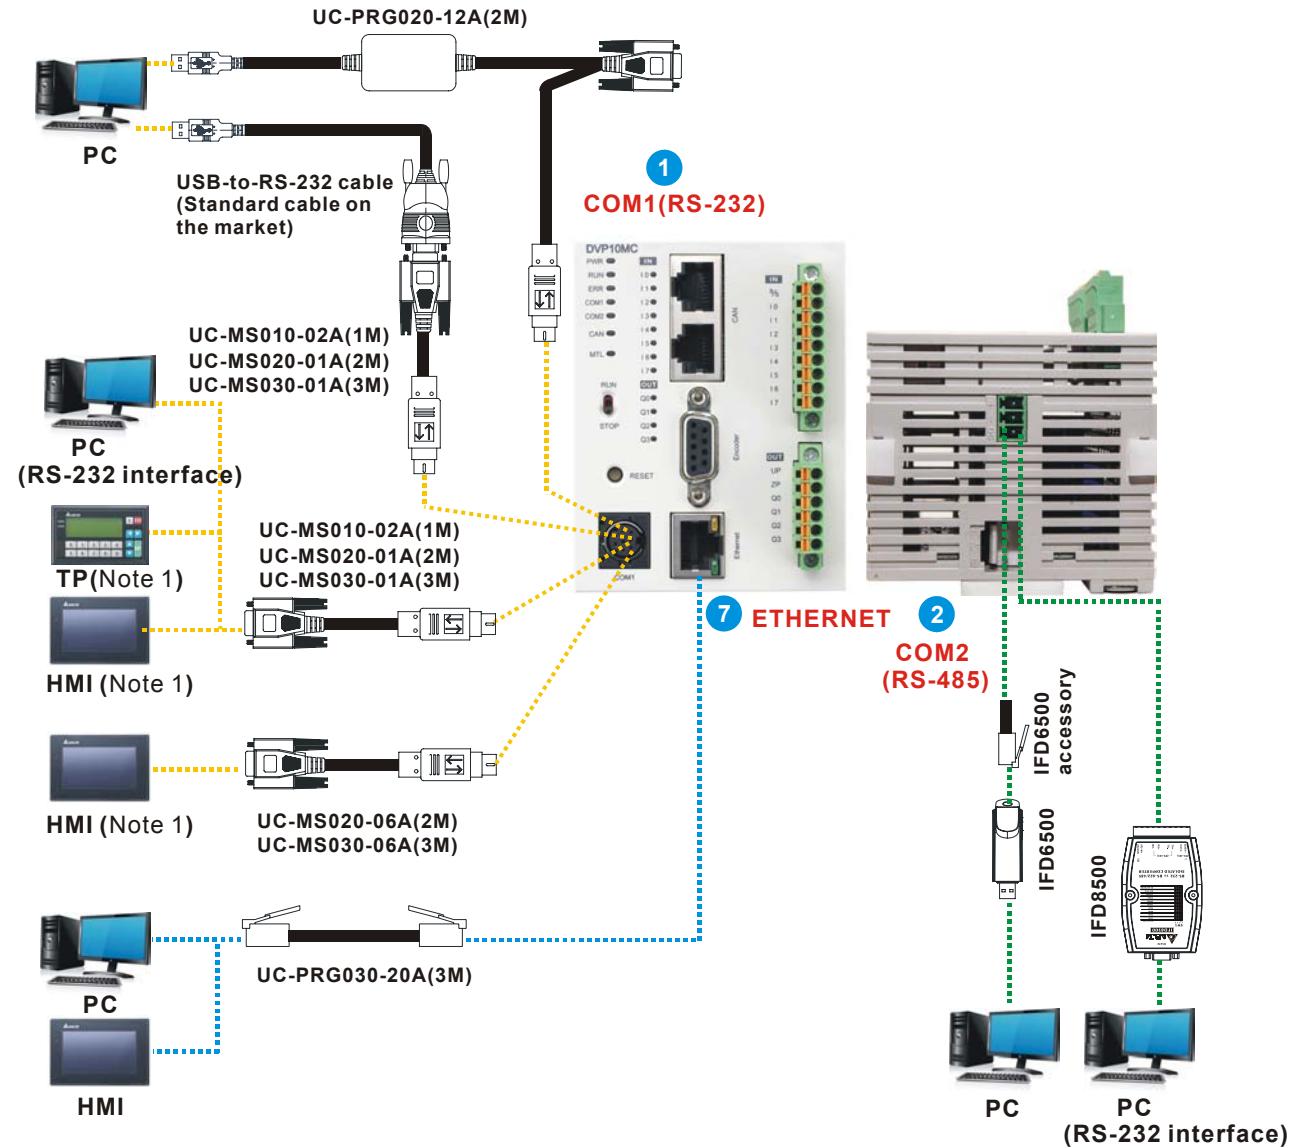


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about **1**, **2**, **3**, etc.

1.13 DVP Series PLCs and the Delta Machine Vision System

Applicable DVP series:

- **DVP-ES2/EX2 series** (DVP16ES200R, DVP16ES200T, DVP20EX200R, DVP20EX200T, DVP24ES200R, DVP24ES200T, DVP30EX200R, DVP30EX200T, DVP32ES200R, DVP32ES200T, DVP32ES211T, DVP40ES200R, DVP40ES200RM, DVP40ES200T, DVP58ES200R, DVP58ES200T, DVP60ES200R, DVP60ES200T, DVP32ES200RC, DVP32ES200TC)
- **DVP-SS2 series** (DVP14SS211R, DVP14SS211T, DVP12SS211S)
- **DVP-SX2 series** (DVP20SX211R, DVP20SX211T, DVP20SX211S)
- **DVP-SV2 series** (DVP28SV11R2, DVP24SV11T2, DVP28SV11T2, DVP28SV11S2)
- **DVP-SA2 series** (DVP12SA211R, DVP12SA211T)
- **DVP-EH3 series** (DVP16EH00R3, DVP16EH00T3, DVP20EH00R3, DVP20EH00T3, DVP32EH00M3, DVP32EH00R3, DVP32EH00R3-L, DVP32EH00T3, DVP32EH00T3-L, DVP40EH00R3, DVP40EH00T3, DVP48EH00R3, DVP48EH00T3, DVP64EH00R3, DVP64EH00T3, DVP80EH00R3, DVP80EH00T3)

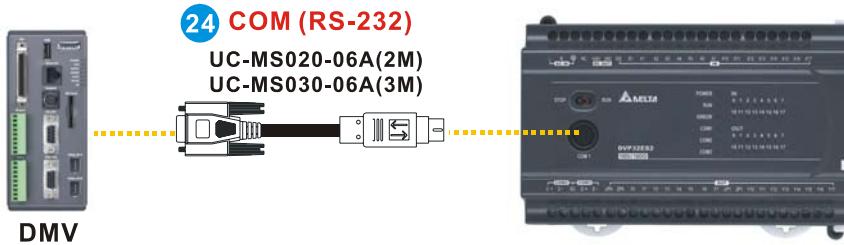


Note: Please refer to section 1.21 for more information about 1, 2, 3, etc.

1.14 AH500 Series

1.14.1 CPUs (AHCPU5XX-EN)

Applicable model: AHCPU500-EN, AHCPU510-EN, AHCPU511-EN, AHCPU520-EN, AHCPU521-EN, AHCPU530-EN, AHCPU531-EN

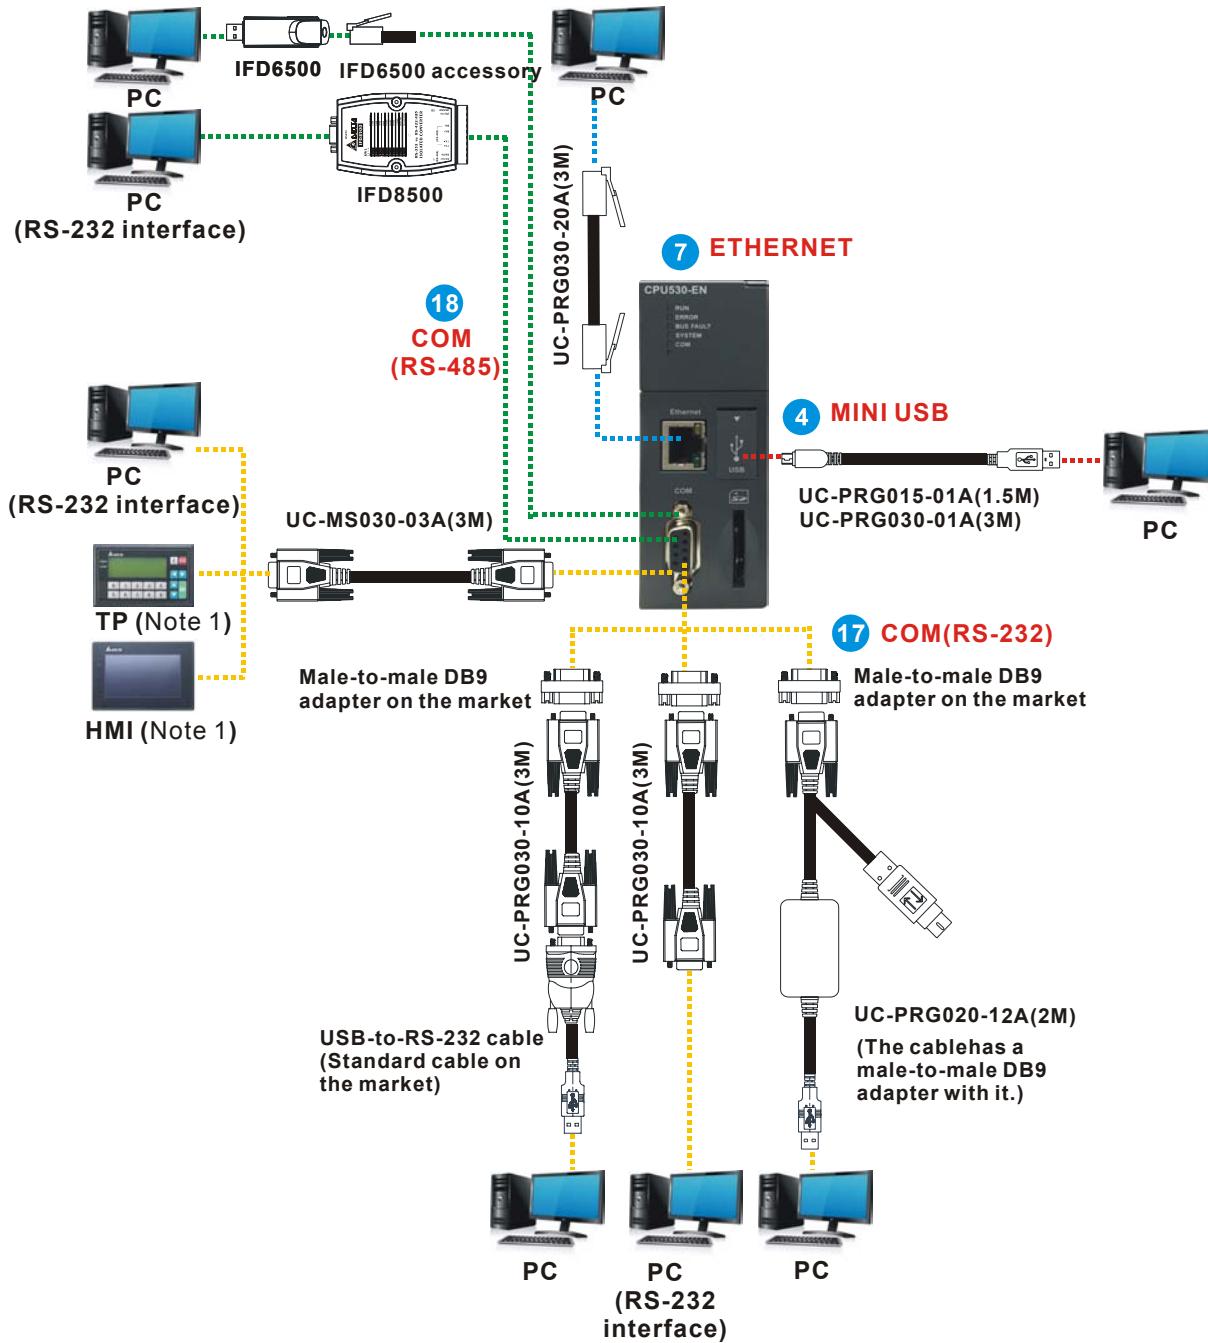


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.14.2 AHCPU5XX-EN and Communication Modules

Applicable model: AHCPU500-EN, AHCPU510-EN, AHCPU511-EN, AHCPU520-EN, AHCPU521-EN, AHCPU530-EN, AHCPU531-EN

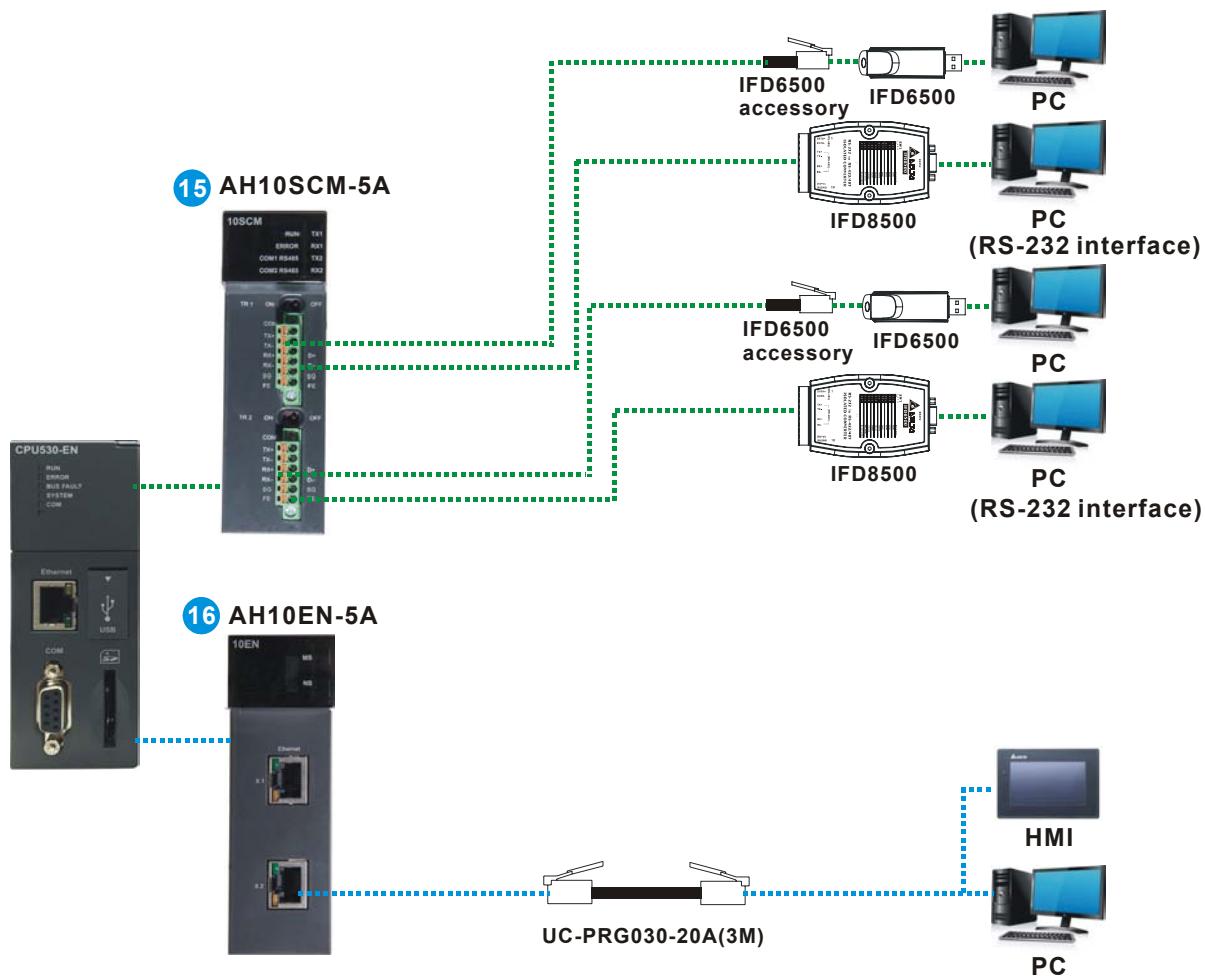


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.14.3 AHCPU5XX-EN and the Delta Machine Vision System


Applicable model: AHCPU500-EN, AHCPU510-EN, AHCPU511-EN, AHCPU520-EN, AHCPU521-EN, AHCPU530-EN, AHCPU531-EN

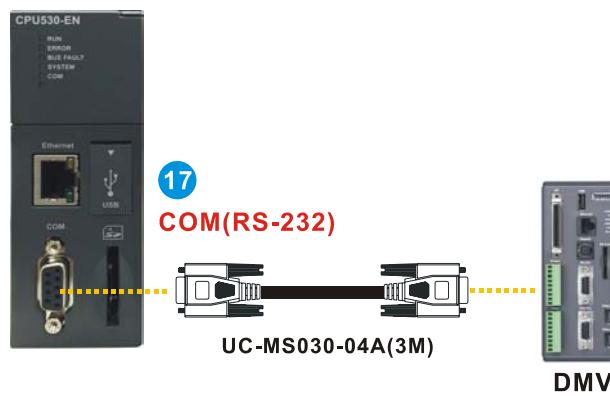

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.14.4 CPUs (AHCPU5XX-RS2)

Applicable model: AHCPU500-RS2, AHCPU510-RS2, AHCPU511-RS2, AHCPU520-RS2, AHCPU530-RS2

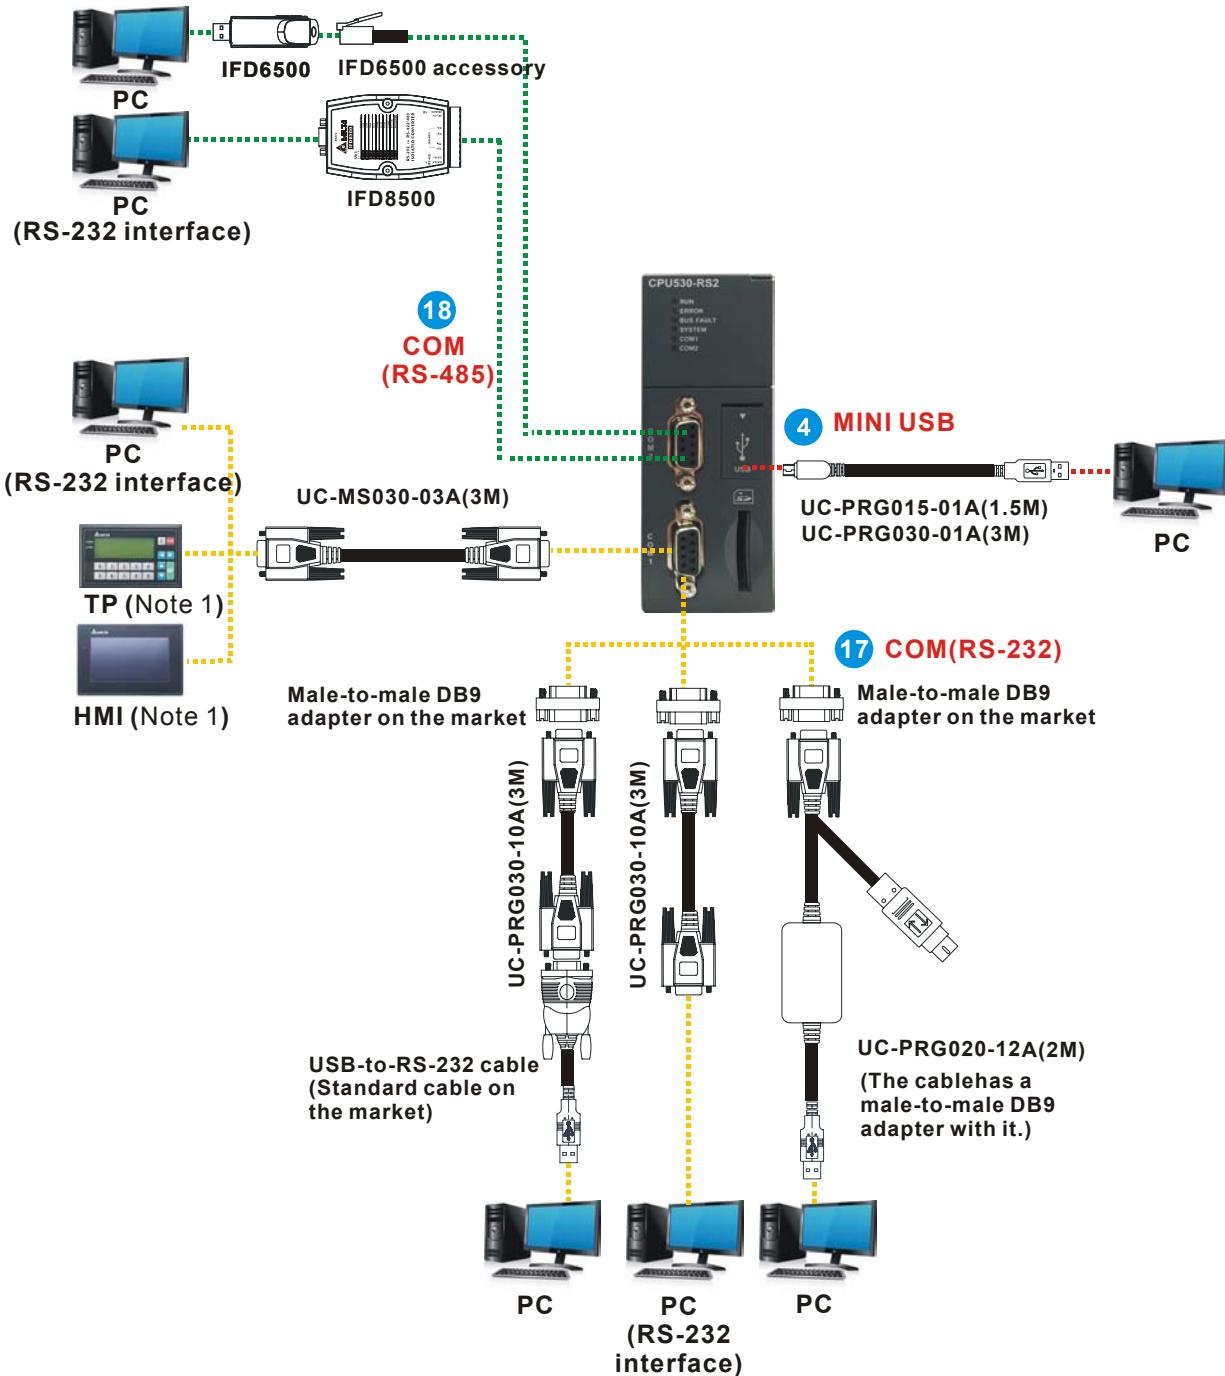


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.14.5 AHCPU5XX-RS2 and Communication Modules


1 Applicable model: AHCPU500-RS2, AHCPU510-RS2, AHCPU511-RS2, AHCPU520-RS2, AHCPU530-RS2

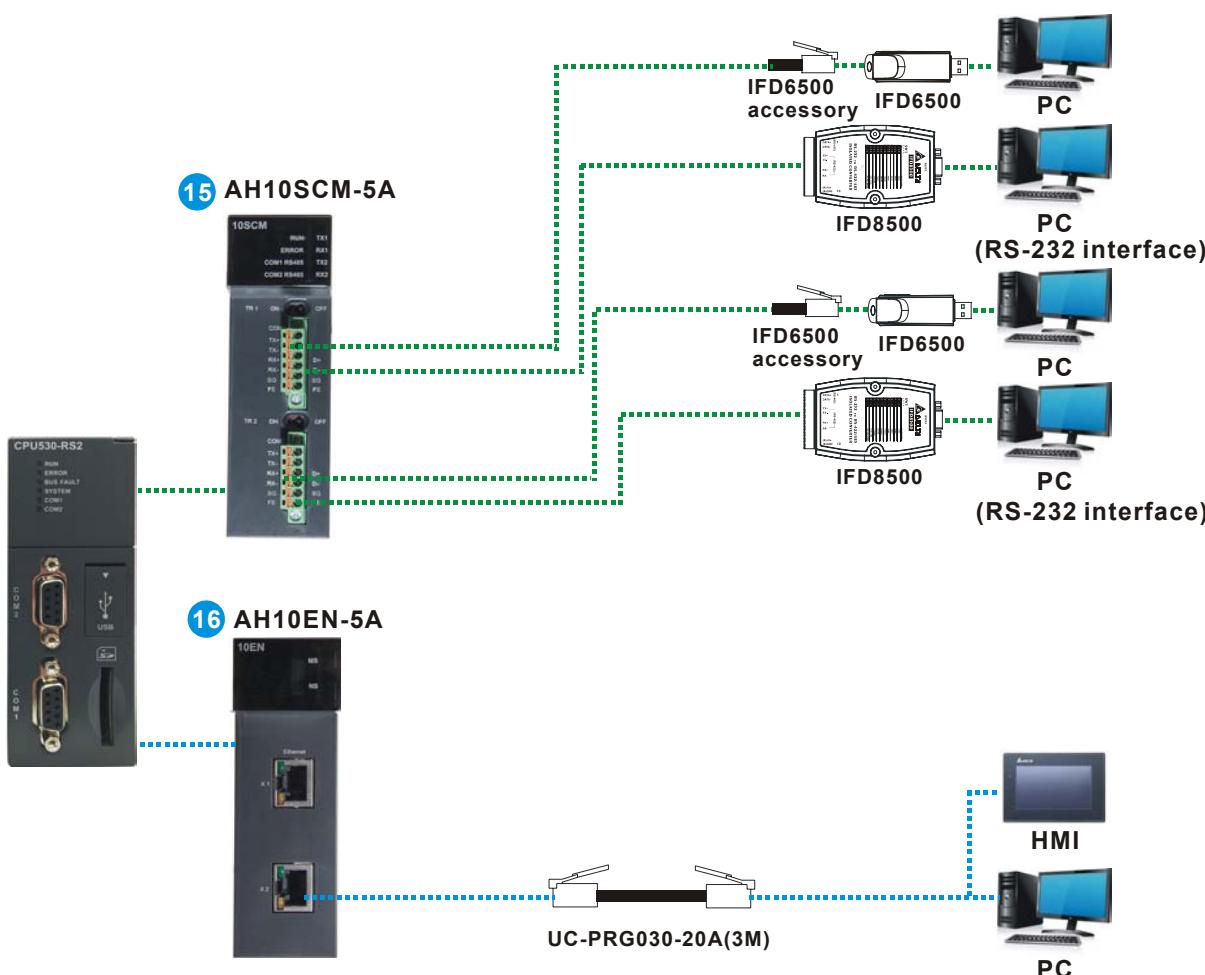

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.14.6 AHCPU5XX-RS2 and the Delta Machine Vision System

Applicable model: AHCPU500-RS2, AHCPU510-RS2, AHCPU511-RS2, AHCPU520-RS2, AHCPU530-RS2

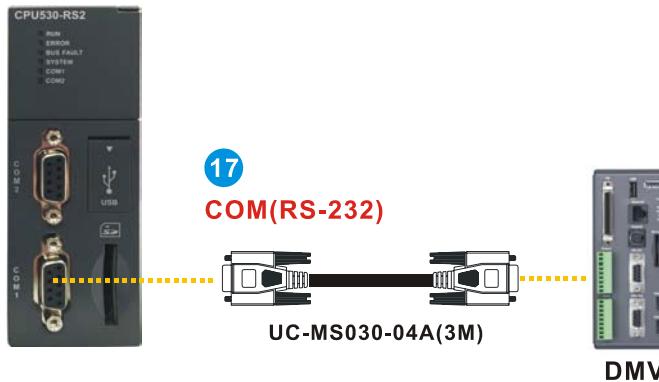


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide


1.14.7 Motion Control Modules

- 1** ● Network type (AH20MC-5A/AH10EMC-5A)

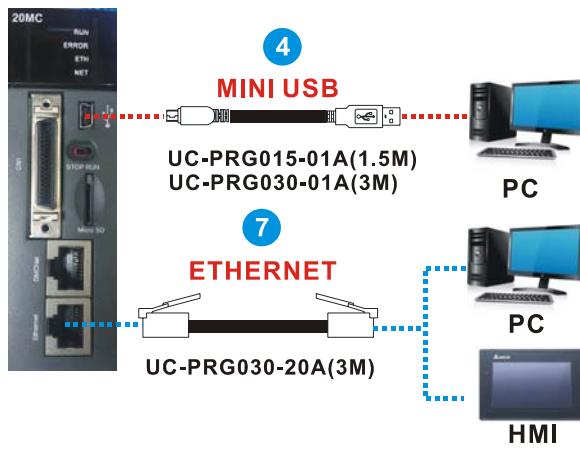

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

- Pulse type (AH10PM-5A/AH15PM-5A)

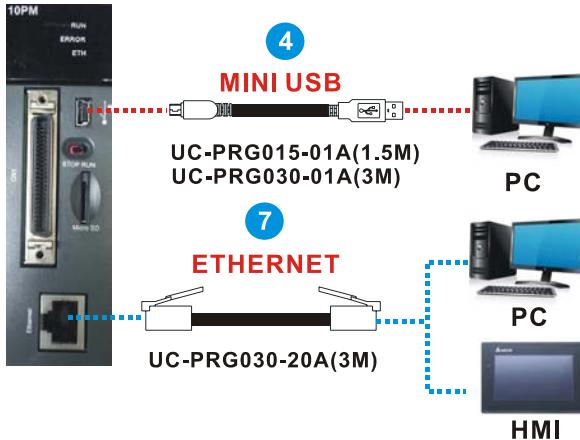


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.15 AS300 Series

1.15.1 AS300 Series PLCs

Applicable model: AS332T-A、AS332P-A、AS324MT-A

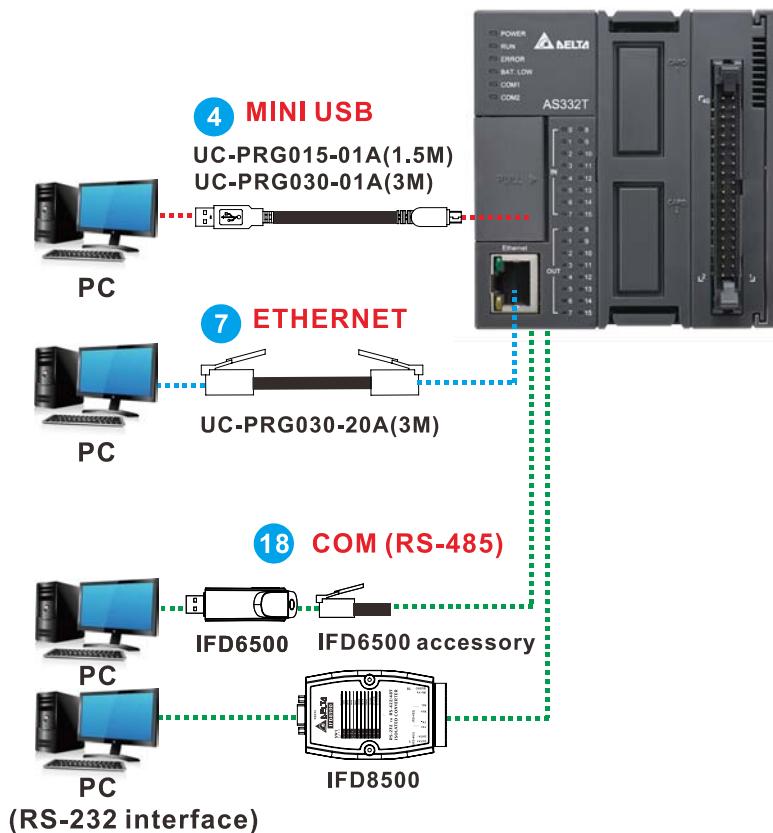


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

1.15.2 AS300 Series PLCs and Function Cards

Applicable model: AS332T-A、AS332P-A、AS324MT-A

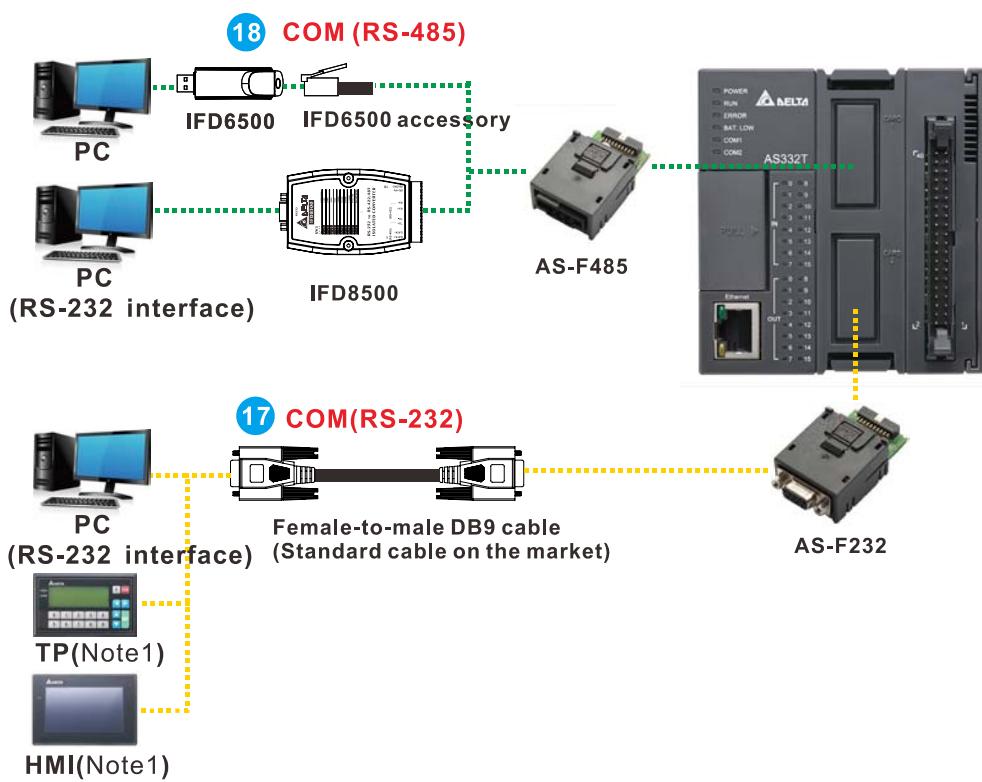


Note 1: Please refer to section 1.16, section 1.17, and section 1.18 for more information about TP/HMI models.

Note 2: Please refer to section 1.21 for more information about **1**, **2**, **3**, etc.

1.15.3 AS300 Series PLCs and the Delta Machine Vision System

Applicable model: AS332T-A、AS332P-A、AS324MT-A

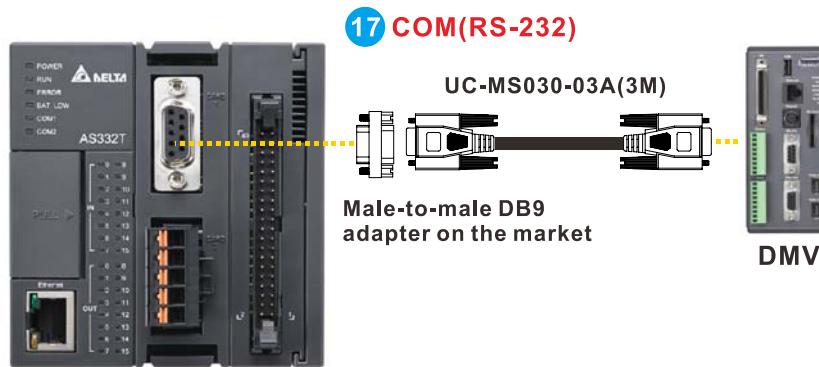


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide


1.16 TP Series

TP series (TP02G-AS1, TP04G-AS2)

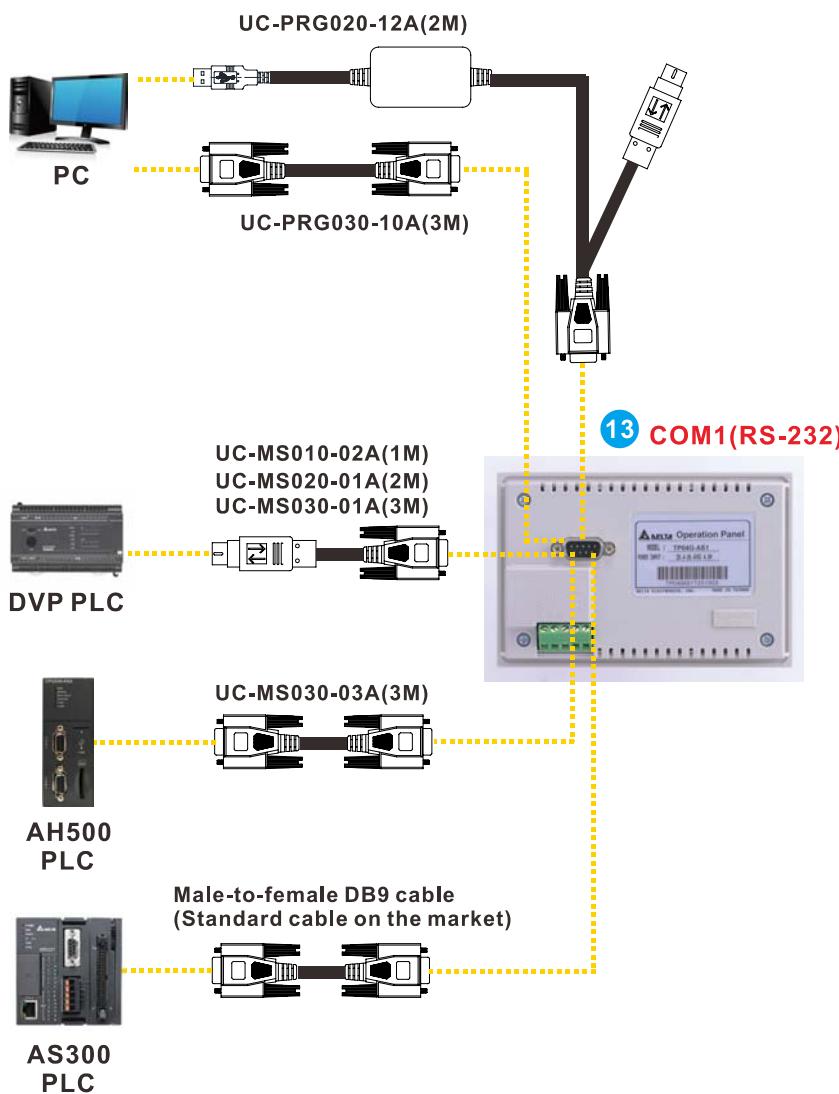

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Chapter 1 Cables for PLC Programming and Serial Communication

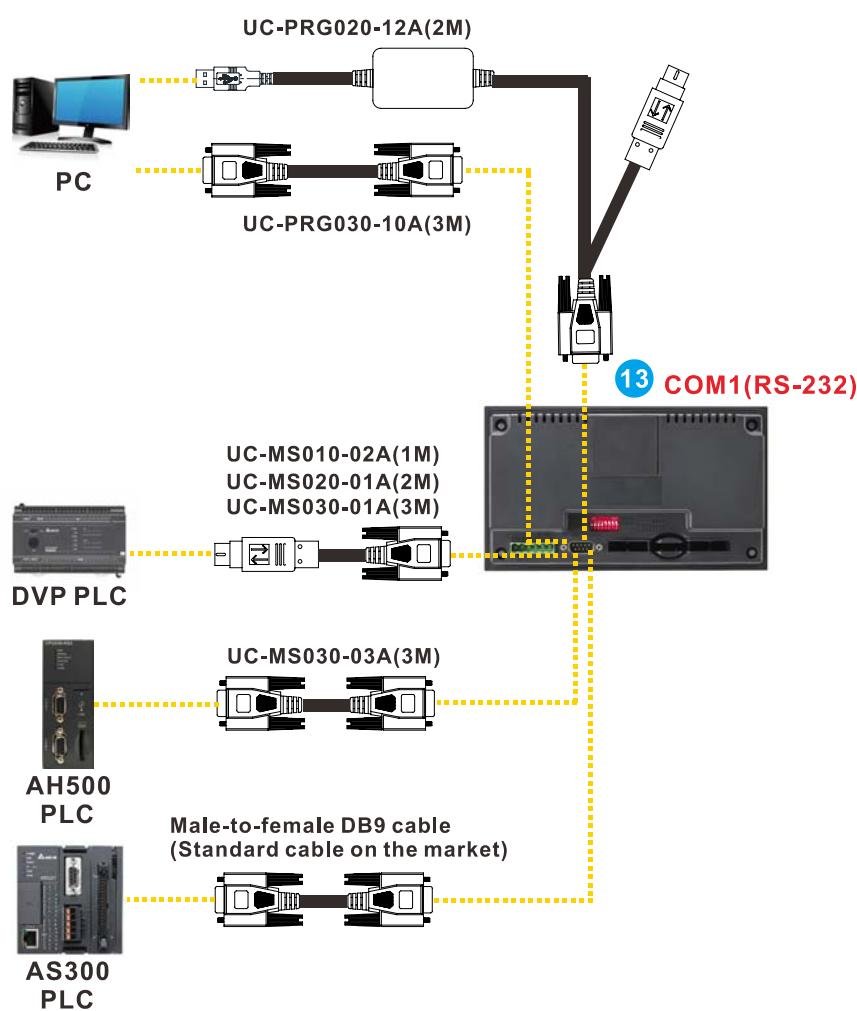
TP series (TP08G-BT2)

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

TP series (TP04G-AL-C, TP04G-AL2)

1

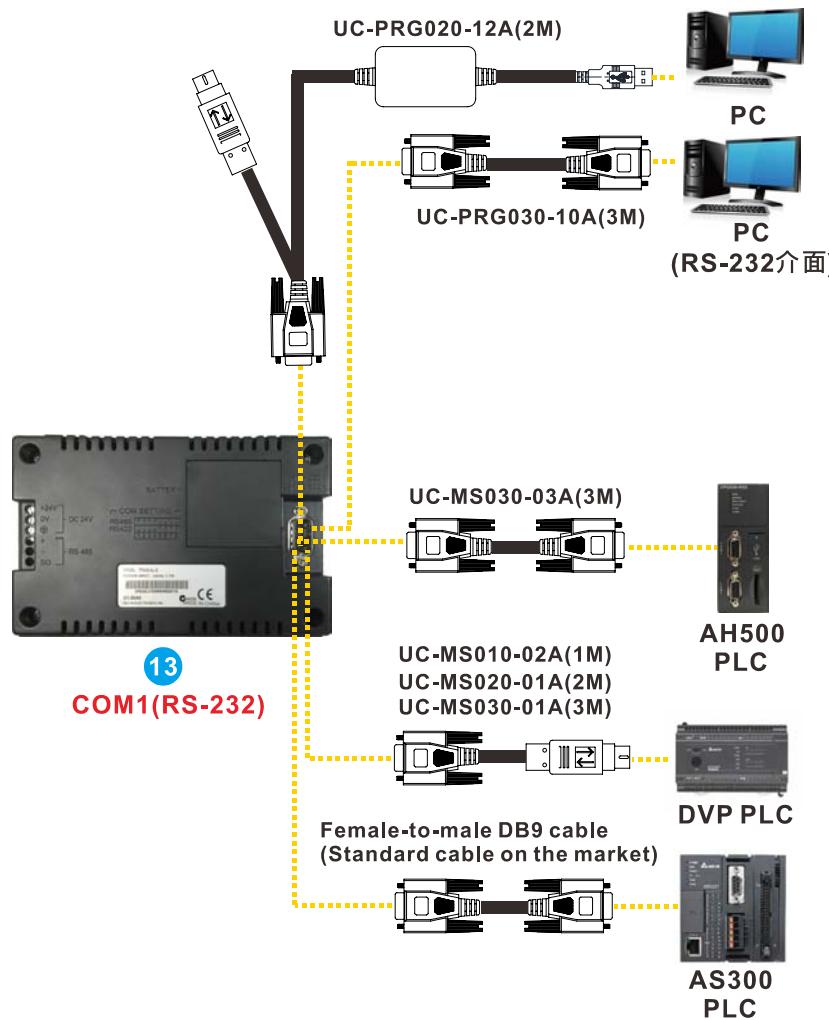


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Chapter 1 Cables for PLC Programming and Serial Communication

TP series (TP04G-BL-C)

1

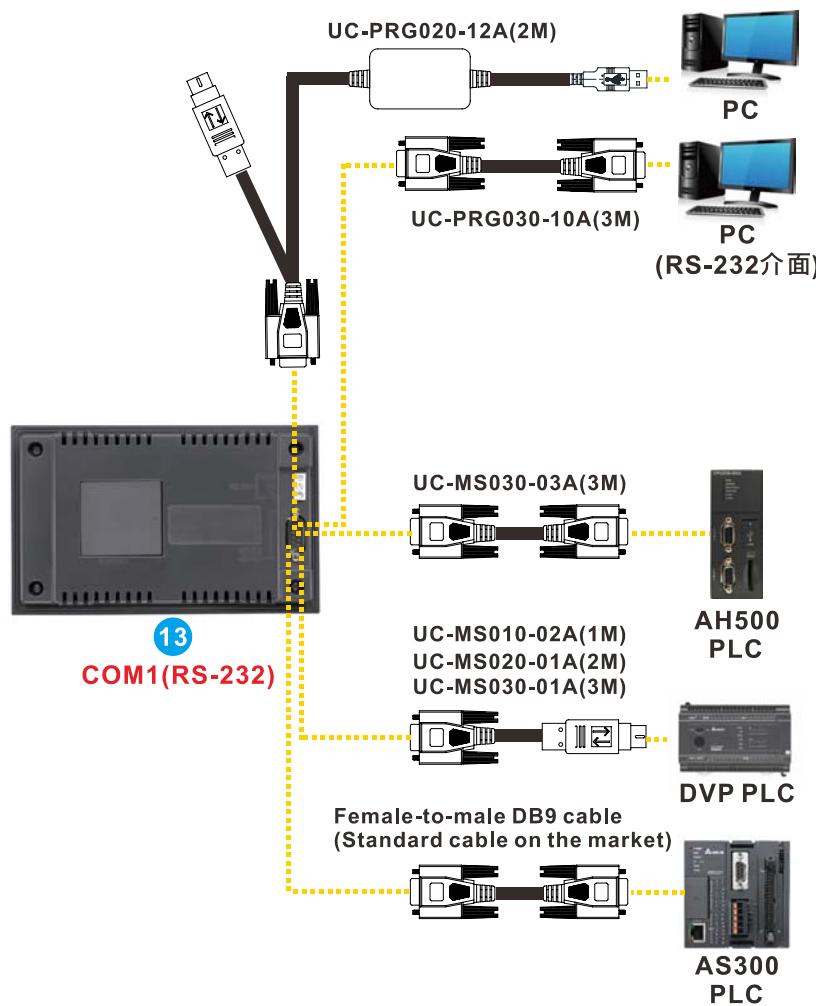


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

TP04P series (TP04P-16TP1R, TP04P-21EX1R, TP04P-32TP1R, TP04P-22XA1R)

1

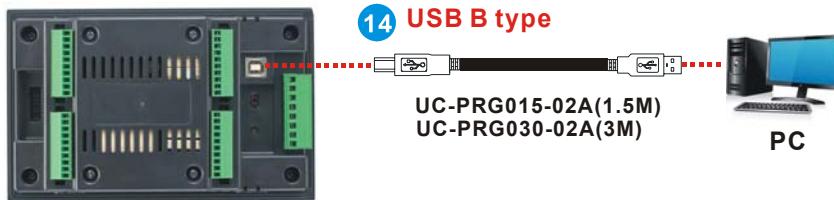


Note: Please refer to section 1.21 for more information about 1, 2, 3, etc.

Chapter 1 Cables for PLC Programming and Serial Communication


TP70P series (TP70P-16TP1R, TP70P-21EX1R, TP70P-22XA1R, TP70P-32TP1R)

1

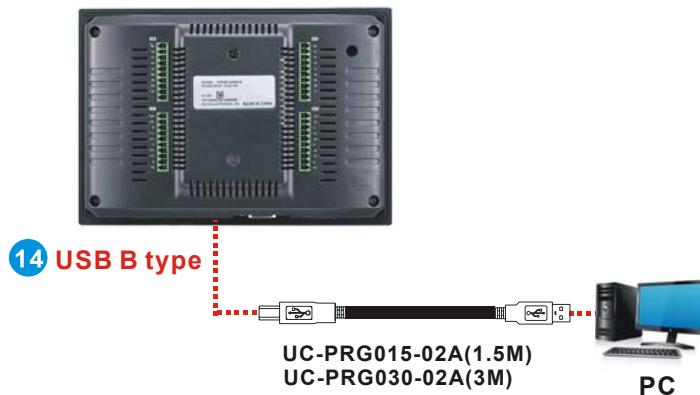

Note: Please refer to section 1.21 for more information about 1, 2, 3, etc.


Delta PLC/HMI Cable Selection Guide

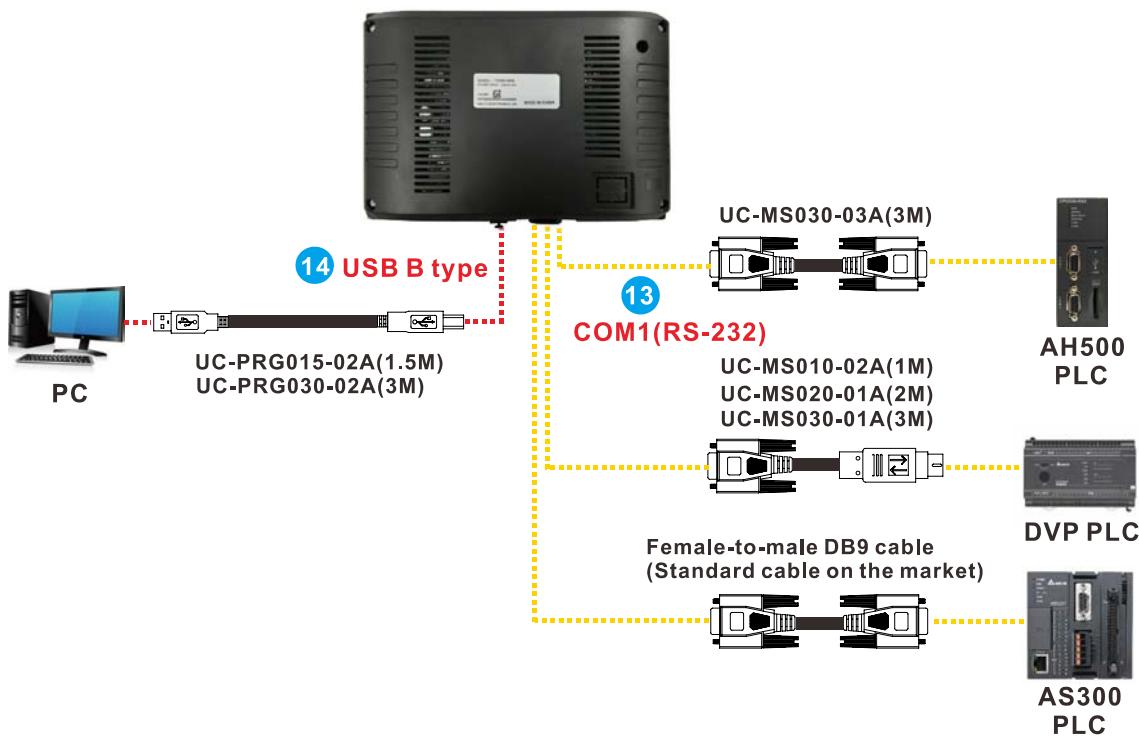TP70P series (TP70P-RM0, TP70P-RM1, TP70P-RM2)**1**

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.17 DOP-B Series

DOP-B series (DOP-B03E211)

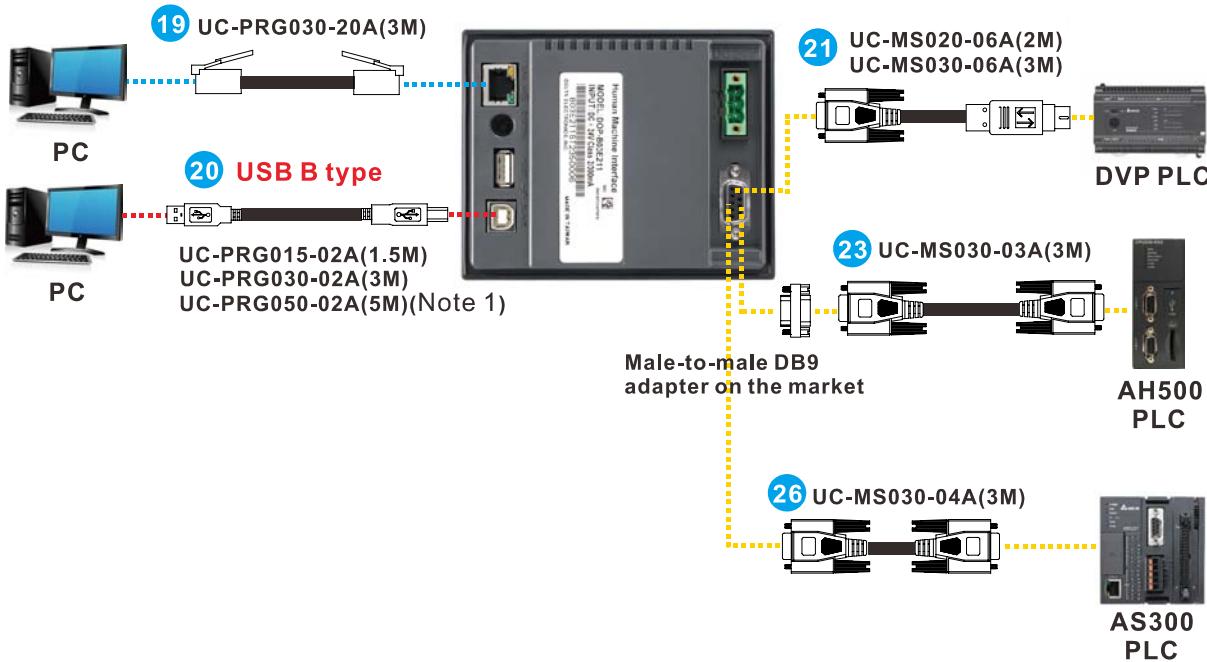


Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

DOP-B series (DOP-B03S210, DOP-B03S211)

1

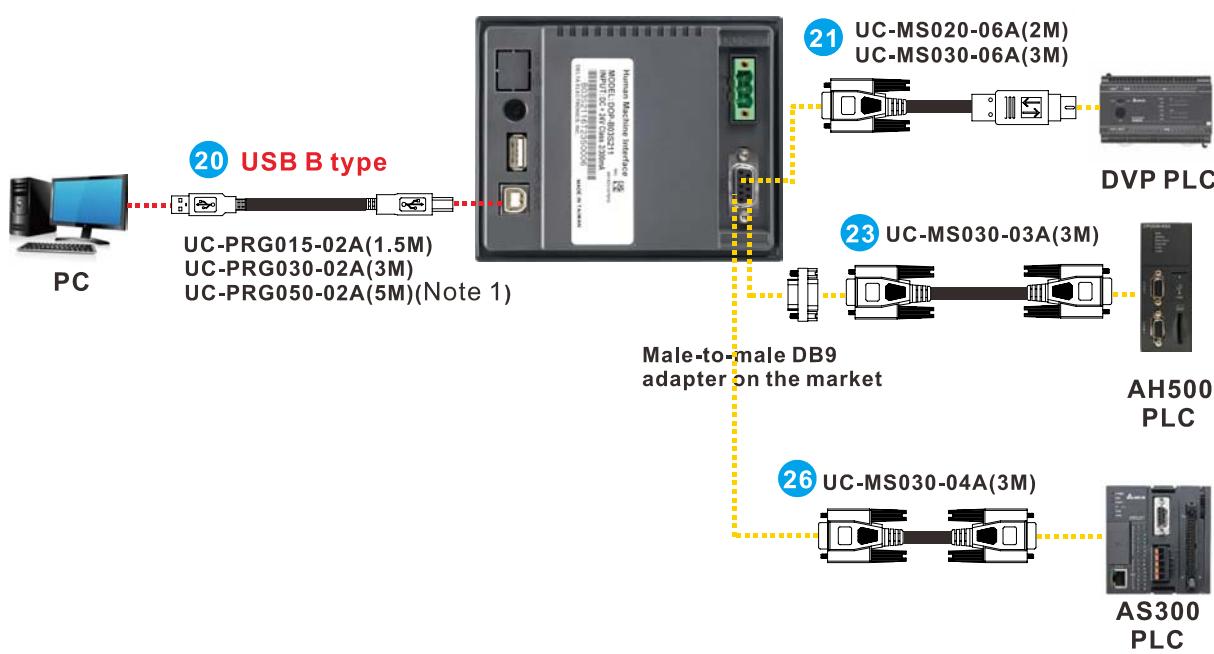


Note1 : UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

DOP-B series (DOP-B05S111)

1

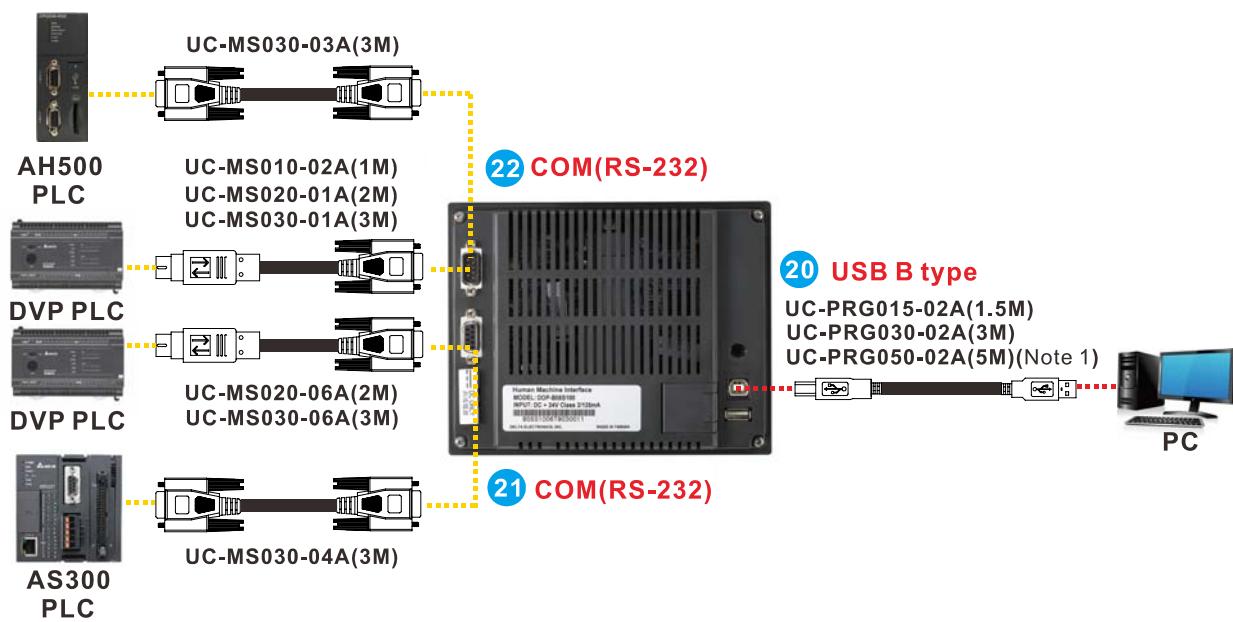


Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

DOP-B series (DOP-B07S410)

1

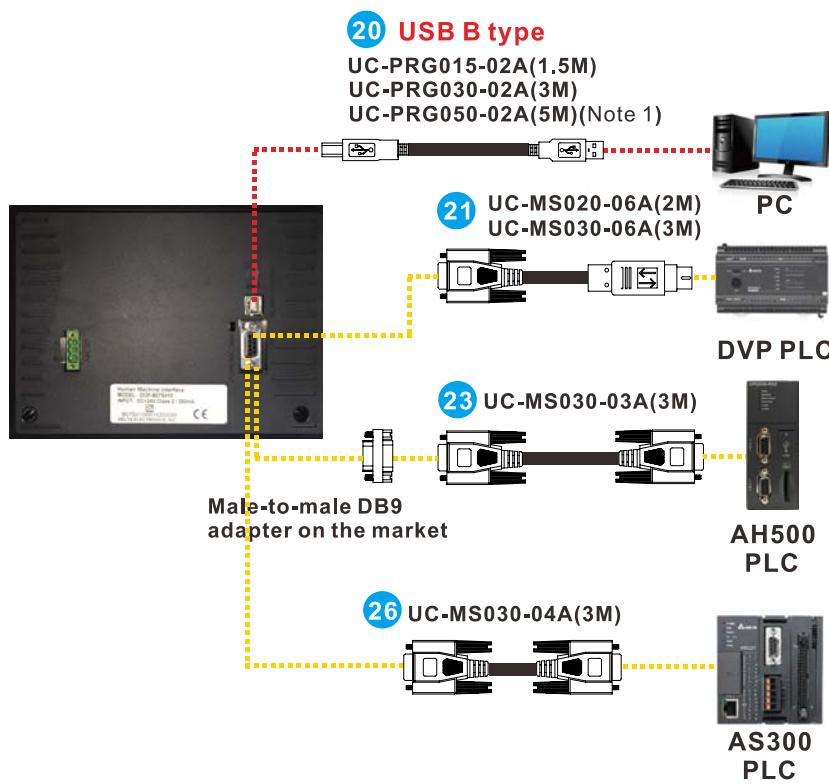


Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Chapter 1 Cables for PLC Programming and Serial Communication


DOP-B series (DOP-B07S411, DOP-B07S401K, DOP-B07S411K, DOP-B07S415, DOP-B07PS415)

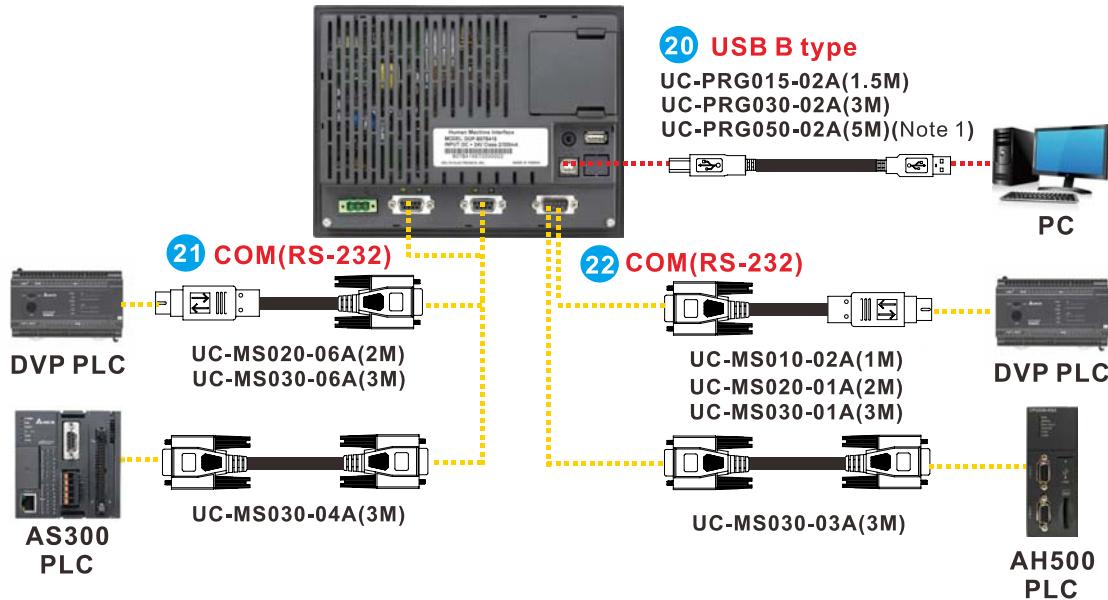

Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.


Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

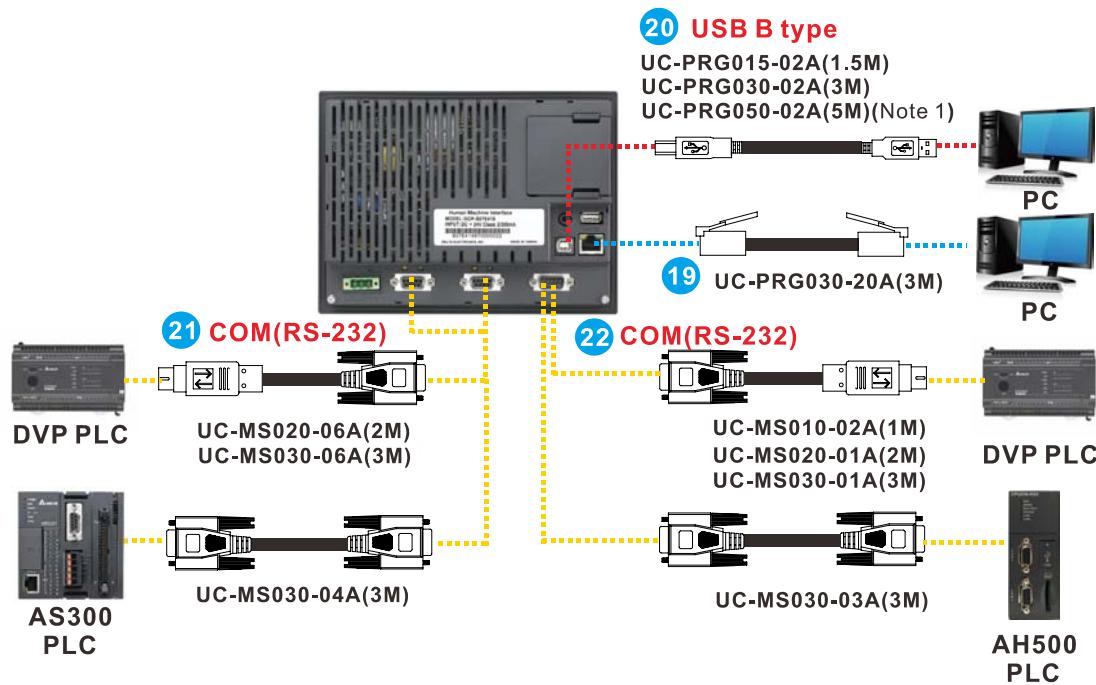DOP-B series (DOP-B07E415)**1**

Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.


Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

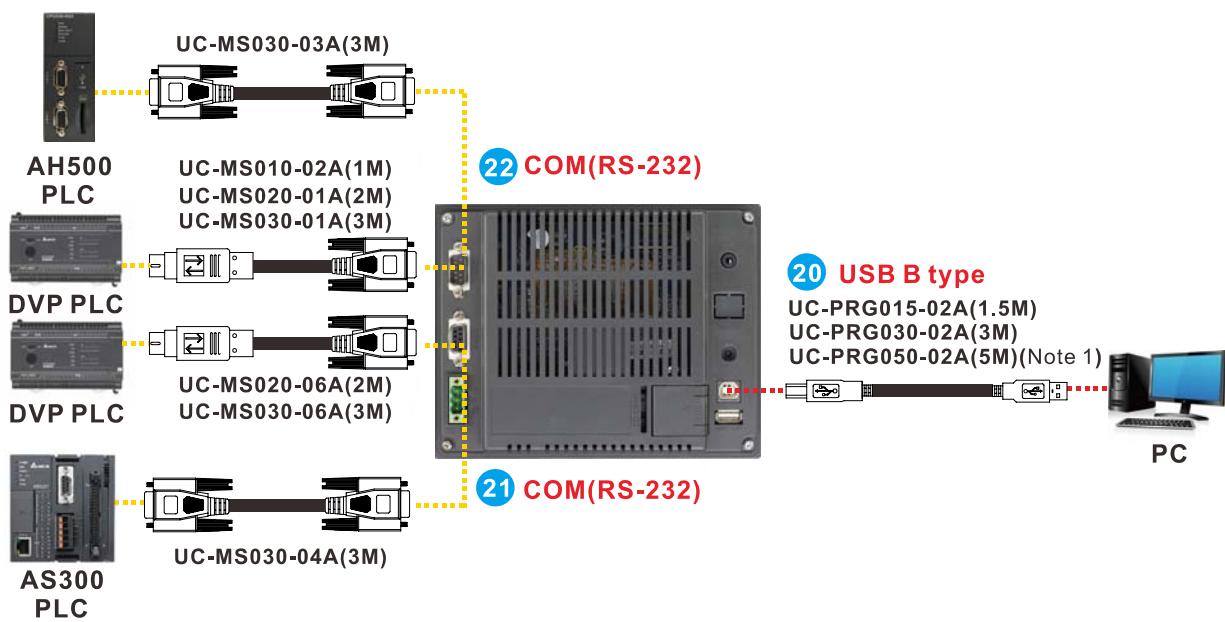DOP-B series (DOP-B07S515, DOP-B07PS515)

Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

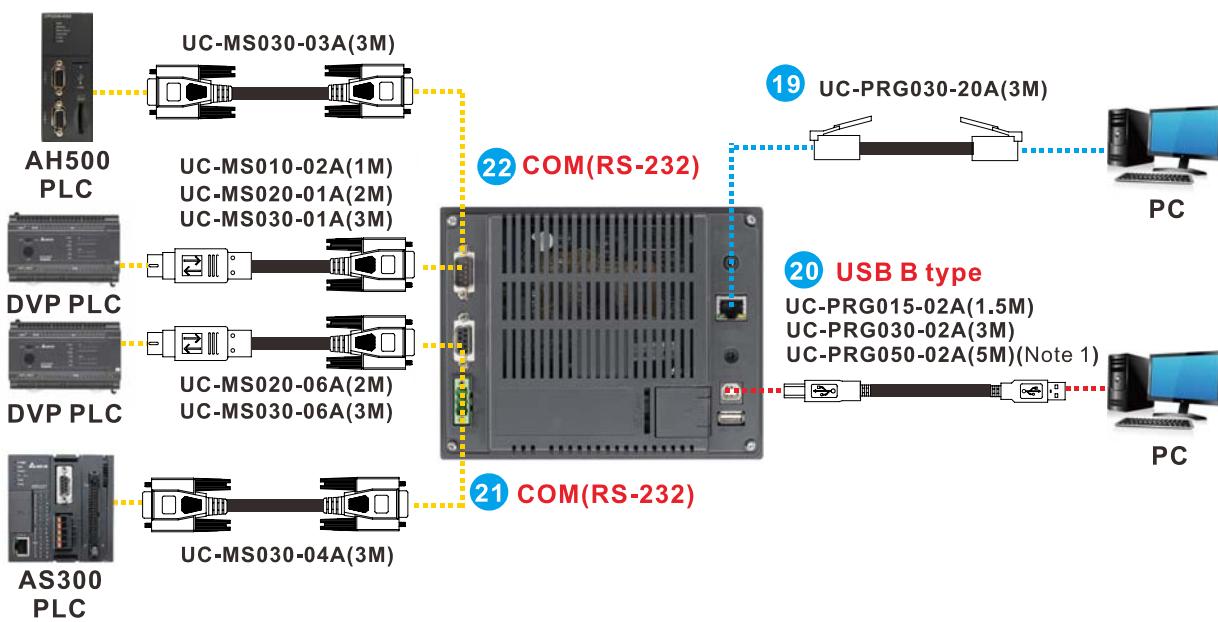DOP-B series (DOP-B07E515)**1**


Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about **1**, **2**, **3**, etc.

Chapter 1 Cables for PLC Programming and Serial Communication

DOP-B series (DOP-B08S515)


1

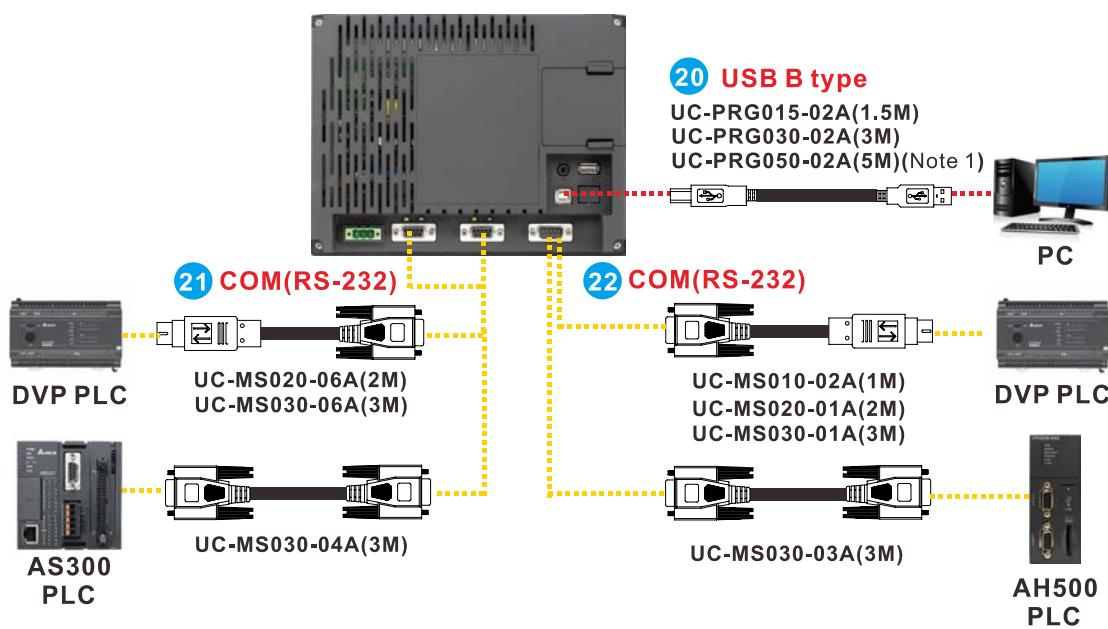

Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

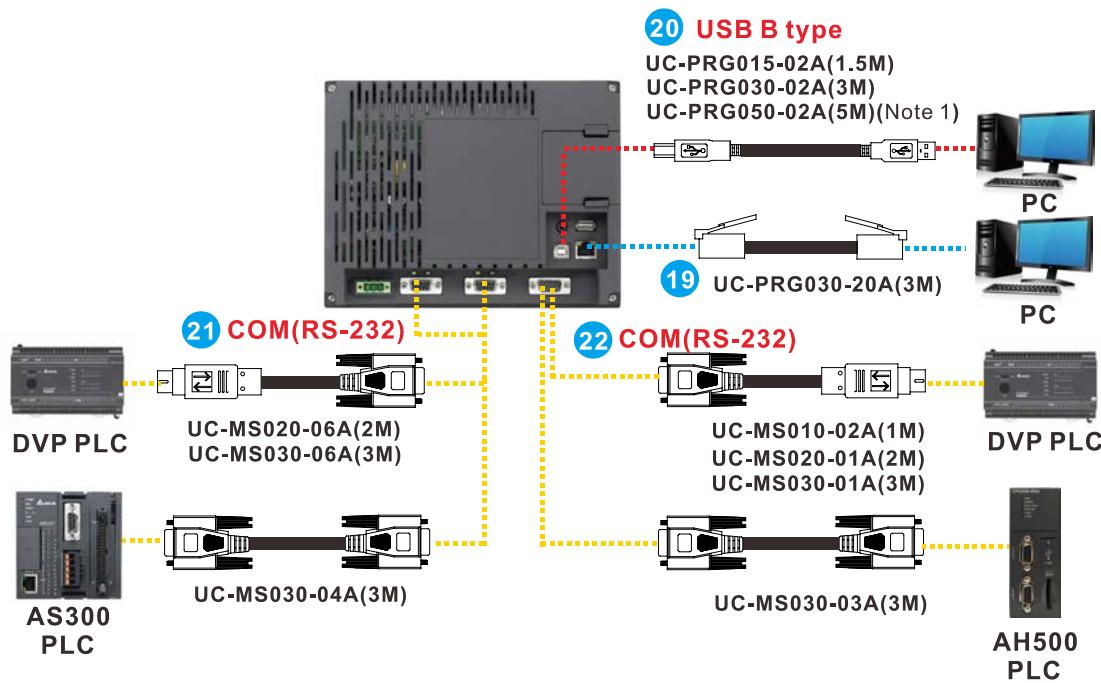DOP-B series (DOP-B08E515)**1**


Note1 : UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Chapter 1 Cables for PLC Programming and Serial Communication

DOP-B series (DOP-B10S411, DOP-B10S615)


1

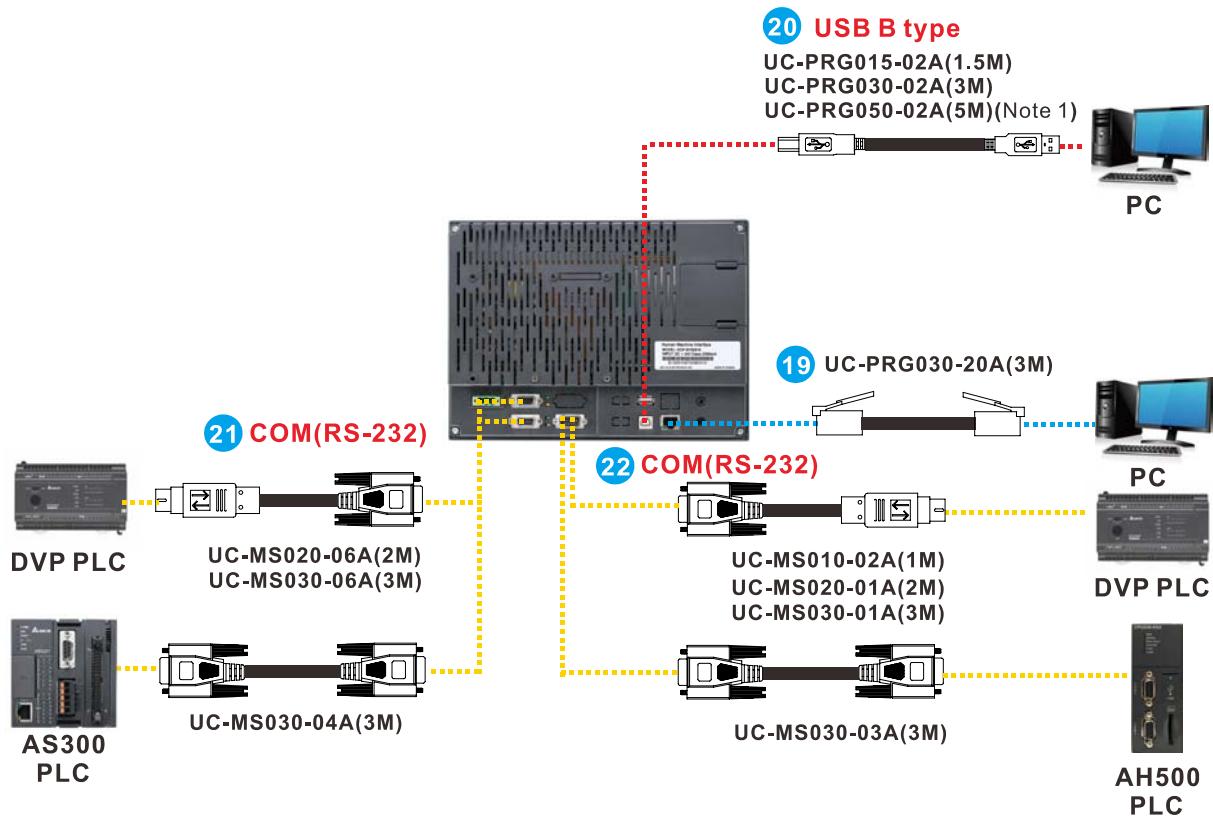

Note1 : UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.


Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

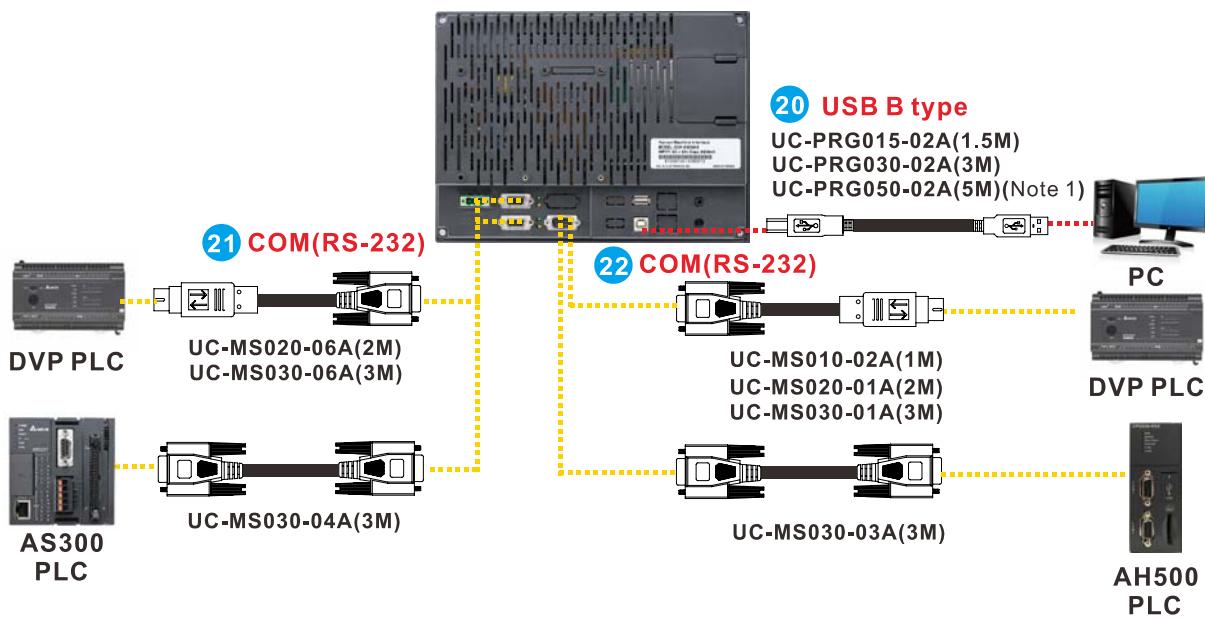DOP-B series (DOP-B10E615)**1**

Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.


Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

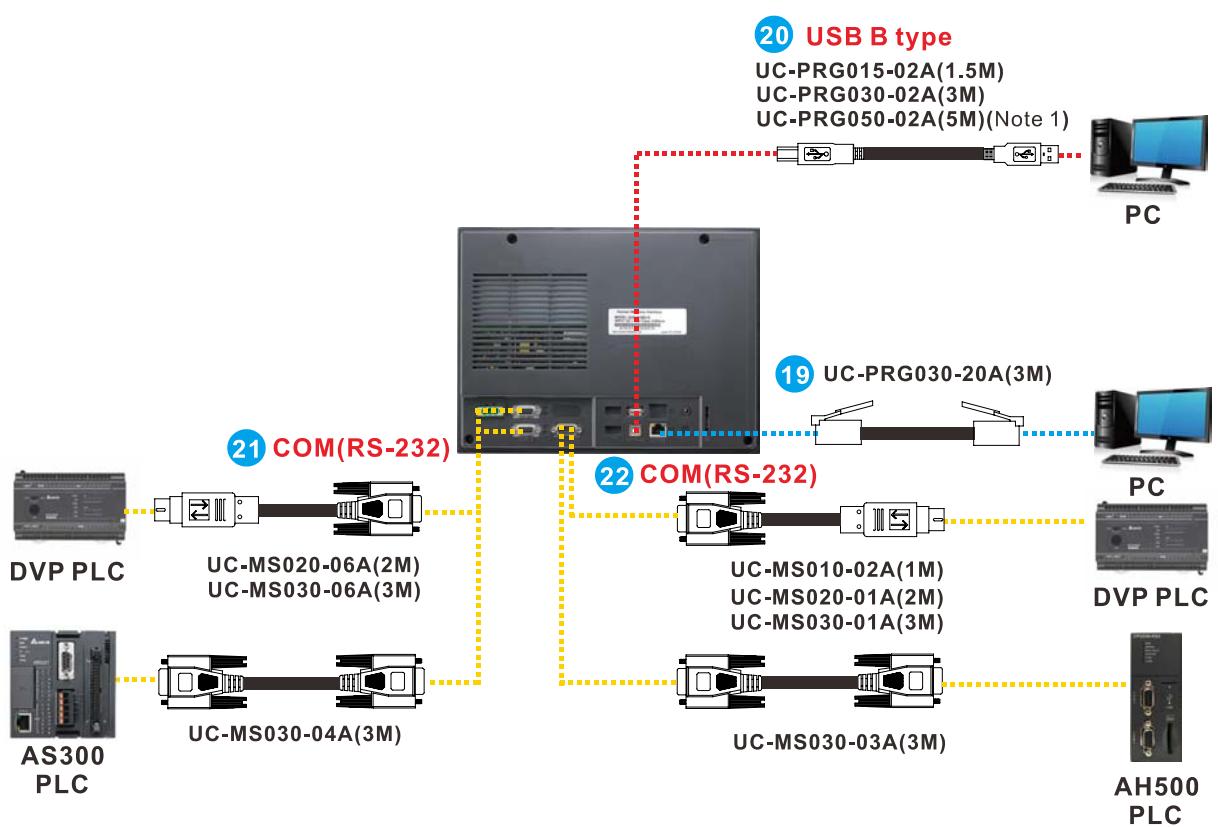DOP-B series (DOP-B10S511, DOP-B10VS511)

Note1 : UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

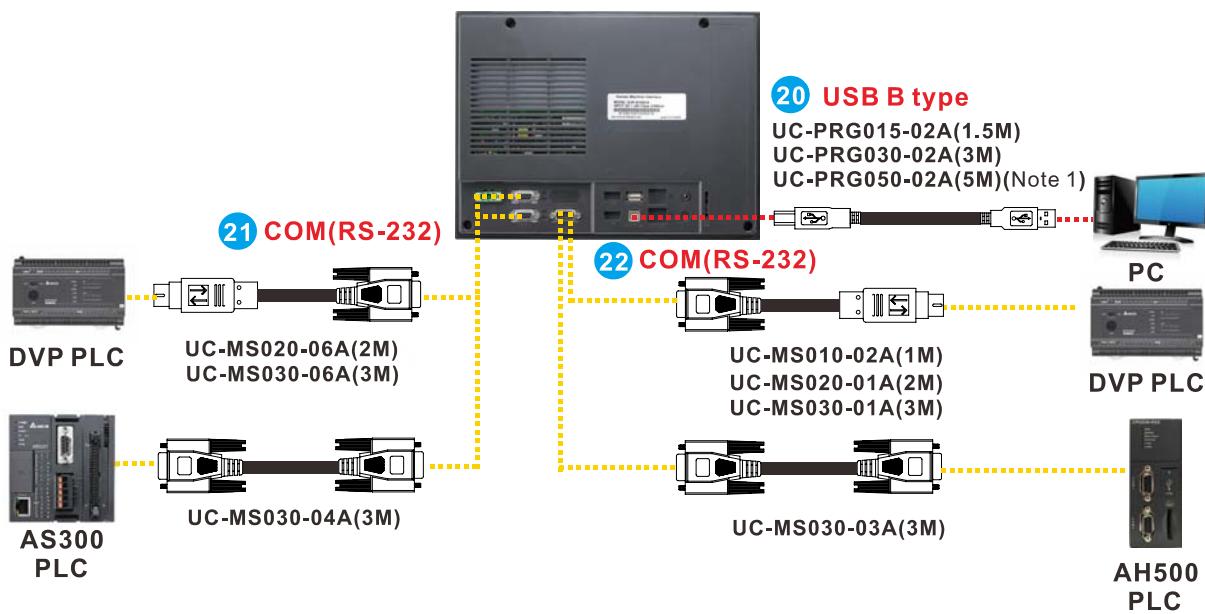
DOP-B series (DOP-B10E515)**1**

Note1: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Note2: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.18 DOP-W Series

DOP-W series (DOP-W105B, DOP-W127B)

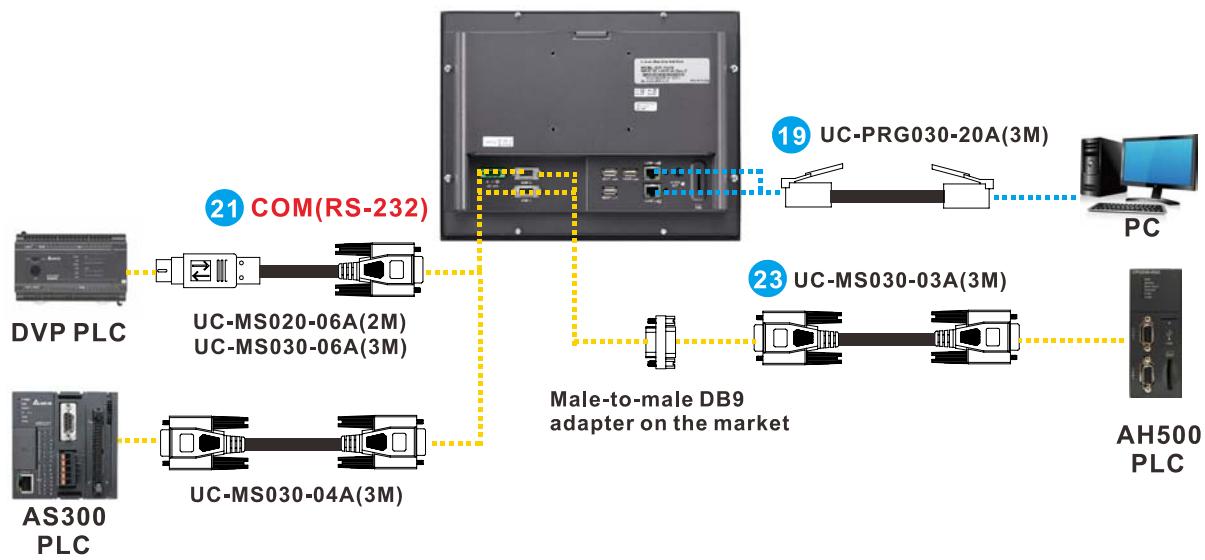


Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

Delta PLC/HMI Cable Selection Guide

DOP-W series (DOP-W157B)

1

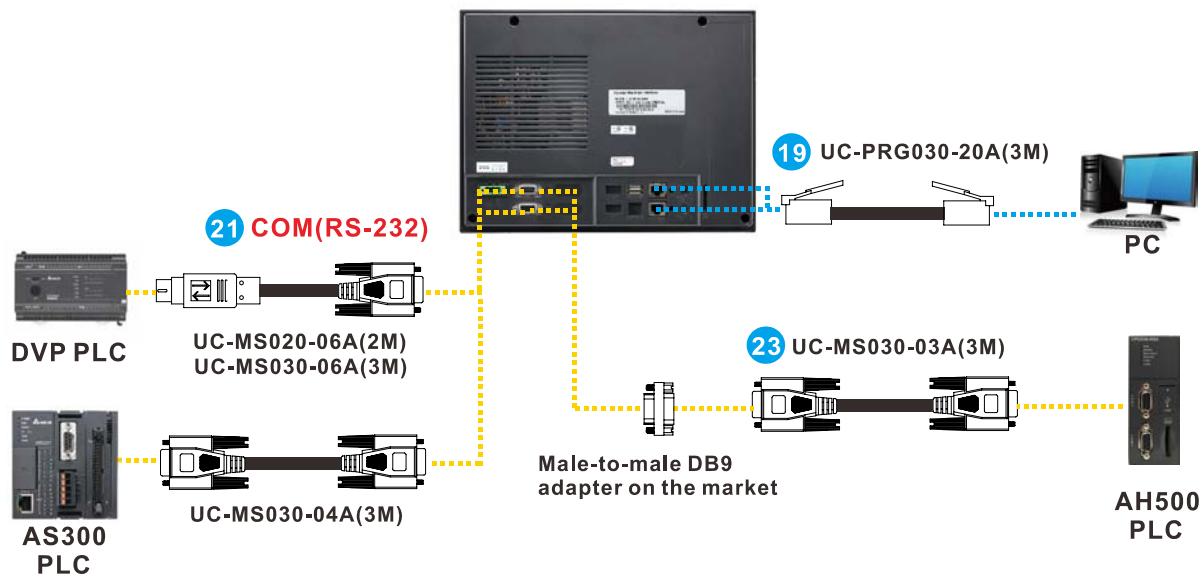

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.19 DOP Series HMIs and the Delta Machine Vision System (RS-232)

Applicable DOP series:

- **DOP-B series** (DOP-B03E211, DOP-B03S210, DOP-B03S211, DOP-B05S111, DOP-B07E415, DOP-B07E515, DOP-B07PS415, DOP-B07PS515, DOP-B07S401K, DOP-B07S410, DOP-B07S411, DOP-B07S411K, DOP-B07S415, DOP-B07S515, DOP-B08E515, DOP-B08S515, DOP-B10E515, DOP-B10E615, DOP-B10S411, DOP-B10S511, DOP-B10S615, DOP-B10VS511)
- **DOP-W series** (DOP-W105B, DOP-W127B, DOP-W157B)




Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.20 DOP Series HMIs and the Delta Machine Vision System (Ethernet)

Applicable DOP series:

- **DOP-B series** (DOP-B03E211, DOP-B07E415, DOP-B07E515, DOP-B08E515, DOP-B10E515, DOP-B10E615)
- **DOP-W series**(DOP-W105B, DOP-W127B, DOP-W157B)

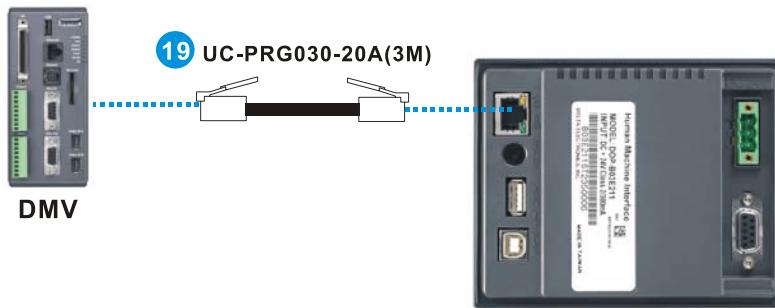

Note: Please refer to section 1.21 for more information about ①, ②, ③, etc.

1.21 Cable Models

1

COM1 (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	8-pin male min-DIN connector ↔ Female DB9 connector	PC/HMI/TP
			UC-MS010-02A (1 m) (Figure 1)	
			UC-MS020-01A (2 m) (Figure 2)	
			UC-MS030-01A (3 m) (Figure 2)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	8-pin male mini-DIN connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3A)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	8-pin male mini-DIN connector ↔ Male DB9 connector	HMI
			UC-MS020-06A (2 m) (Figure 4)	
			UC-MS030-06A (3 m) (Figure 4)	

Delta PLC/HMI Cable Selection Guide

1**2** COM2 (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

3 COM3 (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

4 Mini USB

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	Mini USB ↔ USB	PC
			UC-PRG015-01A (1.5 m) (Figure 10)	
			UC-PRG030-01A (3 m) (Figure 10)	

5 COM1/COM2 (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVPSCM12-SL (Figure 9) DVPSCM52-SL (Figure 9)	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

Delta PLC/HMI Cable Selection Guide

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

6 RS-232

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVPEN01-SL (Figure 8)	8-pin male mini-DIN connector ↔ Female DB9 connector	PC/HMI/TP
			UC-MS010-02A (1 m) (Figure 1)	
			UC-MS020-01A (2 m) (Figure 2)	
			UC-MS030-01A (3 m) (Figure 2)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVPEN01-SL (Figure 8)	8-pin male mini-DIN connector ↔ Male DB9 connector	HMI
			UC-MS020-06A (2 m) (Figure 4)	
			UC-MS030-06A (3 m) (Figure 4)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVPEN01-SL (Figure 8)	8-pin male mini-DIN connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3A)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVPEN01-SL (Figure 8)	RJ45 ↔ RJ45	PC/HMI
			UC-PRG030-20A (3M) (Figure 7)	

7

Ethernet

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	RJ45 ↔ RJ45	PC/HMI
			UC-PRG030-20A (3M) (Figure 7)	

Delta PLC/HMI Cable Selection Guide

1**8** COM3 (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-FEN01 (Figure 14)	8-pin male mini-DIN connector ↔ Female DB9 connector	PC/HMI/TP
			UC-MS010-02A (1 m) (Figure 1)	
			UC-MS020-01A (2 m) (Figure 2)	
			UC-MS030-01A (3 m) (Figure 2)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-FEN01 (Figure 14)	8-pin male mini-DIN connector ↔ Male DB9 connector	HMI
			UC-MS020-06A (2 m) (Figure 4)	
			UC-MS030-06A (3 m) (Figure 4)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-FEN01 (Figure 14)	8-pin male mini-DIN connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3A)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-FEN01 (Figure 14)	RJ45 ↔ RJ45	PC/HMI
			UC-PRG030-20A (3M) (Figure 7)	

9

COM3 (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-F232 (Figure 15)	Female DB9 connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3B)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-F232 (Figure 15)	Female DB9 connector ↔ Female DB9 connector	PC
			UC-PRG030-10A (3M) (Figure 12)	

Delta PLC/HMI Cable Selection Guide

1**10** COM3 (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-F485 (Figure 16)	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	DVP-F485 (Figure 16)	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

11 COM3 (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	Male-to-male null modem adapter	F232S (Figure 11)	Female DB9 connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3B)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	Male-to-male null modem adapter	F232S (Figure 11)	Female DB9 connector ↔ Female DB9 connector	PC
			UC-PRG030-10A (3M) (Figure 12)	

12 COM3 (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	F485S (Figure 13)	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	F485S (Figure 13)	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

Delta PLC/HMI Cable Selection Guide

1**13** COM1 (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
TP	--	--	Female DB9 connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3B)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
TP	--	--	Female DB9 connector ↔ Female DB9 connector	PC
			UC-PRG030-10A (3M) (Figure 12)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
TP	--	--	Female DB9 connector ↔ 8-pin male mini-DIN connector	DVP PLC
			UC-MS010-02A (1 m) (Figure 1)	
			UC-MS020-01A (2 m) (Figure 2)	
			UC-MS030-01A (3 m) (Figure 2)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
TP	--	--	Female DB9 connector ↔ Male DB9 connector	AH500
			UC-MS030-03A (3M) (Figure 18)	

14 USB Type-B

CPU	Adapter	Module/Interface card	Cable	Machine connected
TP	--	--	USB Type-B ↔ USB Type-A	PC
			UC-PRG015-02A (1.5 m) (Figure 19)	
			UC-PRG030-02A (3 m) (Figure 19)	

15 COM (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	--	AH10SCM-5A (Figure 21)	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

Delta PLC/HMI Cable Selection Guide

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	--	AH10SCM-5A (Figure 21)	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

16 COM (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	--	AH10EN-5A (Figure 20)	RJ45 ↔ RJ45	PC/HMI
			UC-PRG030-20A (3M) (Figure 7)	

17 COM (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	Male-to-male DB9 adapter (cable accessory)	--	Female DB9 connector ↔ USB connector	PC
			UC-PRG020-12A (2M) (Figure 3B)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	Male-to-male DB9 adapter	--	Female DB9 connector ↔ Female DB9 connector	PC
			UC-PRG030-10A (3M) (Figure 12)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	Male-to-male DB9 adapter	--	Female DB9 connector ↔ Male DB9 connector	PC/TP/HMI
			UC-MS030-03A (3M) (Figure 18)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	--	--	Male DB9 connector ↔ Male DB9 connector	DMV
			UC-MS030-04A (3M) (Figure 17)	

Delta PLC/HMI Cable Selection Guide

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
AS300	--	AS-F232 (Figure 22)	Male DB9 connector ↔ Female DB9 connector	PC/TP/HMI
			Standard cable on the marker	

CPU	Adapter	Module/Interface card	Cable	Machine connected
AS300	Male-to-male DB9 adapter	--	Female DB9 connector ↔ Male DB9 connector	DMV
			UC-MS030-03A (3M) (Figure 18)	

18

COM (RS-485)

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	--	--	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

Chapter 1 Cables for PLC Programming and Serial Communication

1

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH500	--	--	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
AS300	--	AS-F485 (Figure 22)	RS-485 ↔ USB	PC
			IFD6500 (Figure 5)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
AS300	--	AS-F485 (Figure 23)	RS-485 ↔ RS-232	PC
			IFD8500 (Figure 6)	

Delta PLC/HMI Cable Selection Guide

1**19** Ethernet

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	RJ45 ↔ RJ45	PC
			UC-PRG030-20A (3M) (Figure 7)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	RJ45 ↔ RJ45	DMV
			UC-PRG030-20A (3M) (Figure 7)	

20 USB Type-B

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	USB Type-B ↔ USB Type-A	PC
			UC-PRG015-02A (1.5 m) (Figure 19)	
			UC-PRG030-02A (3 m) (Figure 19)	
			UC-PRG050-02A (5M) (Figure 19)	

Chapter 1 Cables for PLC Programming and Serial Communication

21 COM (RS-232)**1**

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	Male DB9 connector ↔ 8-pin male mini-DIN connector	PLC
			UC-MS020-06A (2 m) (Figure 4)	
			UC-MS030-06A (3 m) (Figure 4)	

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	Male DB9 connector ↔ Male DB9 connector	AS300
			UC-MS030-04A (3M) (Figure 17)	

22 COM (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	Female DB9 connector ↔ 8-pin male mini-DIN connector	PLC
			UC-MS010-02A (1 m) (Figure 1)	
			UC-MS020-01A (2 m) (Figure 2)	
			UC-MS030-01A (3 m) (Figure 2)	

Delta PLC/HMI Cable Selection Guide

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	Female DB9 connector ↔ Male DB9 connector	AH500
			UC-MS030-03A (3 m) (Figure 18)	

23 COM (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	Male-to-male DB9 adapter	--	Female DB9 connector ↔ Male DB9 connector	AH500
			UC-MS030-03A (3 m) (Figure 18)	

24 COM (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
PLC	--	--	8-pin male mini-DIN connector ↔ Male DB9 connector	DMV
			UC-MS020-06A (2 m) (Figure 4)	
			UC-MS030-06A (3 m) (Figure 4)	

Chapter 1 Cables for PLC Programming and Serial Communication

25 COM (RS-232)**1**

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	Male DB9 connector ↔ Male DB9 connector	DMV
			UC-MS030-04A (3 m) (Figure 17)	

26 COM (RS-232)

CPU	Adapter	Module/Interface card	Cable	Machine connected
DOP	--	--	Male DB9 connector ↔ Male DB9 connector	AS300
			UC-MS030-04A (3 m) (Figure 17)	

Delta PLC/HMI Cable Selection Guide


1.22 Descriptions of Cable Models

Figure 1	UC-MS010-02A (1 m)	8-pin male mini-DIN connector (90 degrees) ↔ Female DB9 connector			
<p>8-pin male mini-DIN connector ← → Female DB9 connector</p> <table border="0" style="width: 100%; text-align: center;"> <tr> <td style="width: 30%;"> </td> <td style="width: 40%; vertical-align: top;"> Rx 4 ←————→ 3 Tx Tx 5 ←————→ 2 Rx GND 8 ←————→ 5 GND 5V 1, 2 </td> <td style="width: 30%;"> </td> </tr> </table>				Rx 4 ←————→ 3 Tx Tx 5 ←————→ 2 Rx GND 8 ←————→ 5 GND 5V 1, 2	
	Rx 4 ←————→ 3 Tx Tx 5 ←————→ 2 Rx GND 8 ←————→ 5 GND 5V 1, 2				
Figure 2	UC-MS020-01A (2 m) UC-MS030-01A (3 m)	8-pin male mini-DIN connector ↔ Female DB9 connector			
<p>8-pin male mini-DIN connector ← → Female Db9 connector</p> <table border="0" style="width: 100%; text-align: center;"> <tr> <td style="width: 30%;"> </td> <td style="width: 40%; vertical-align: top;"> Rx 4 —————— 3 Tx Tx 5 —————— 2 Rx GND 8 —————— 5 GND 5V 1, 2 </td> <td style="width: 30%;"> </td> </tr> </table>				Rx 4 —————— 3 Tx Tx 5 —————— 2 Rx GND 8 —————— 5 GND 5V 1, 2	
	Rx 4 —————— 3 Tx Tx 5 —————— 2 Rx GND 8 —————— 5 GND 5V 1, 2				

Chapter 1 Cables for PLC Programming and Serial Communication


1

Figure 3A	UC-PRG020-12A (2 m)	8-pin male mini-DIN connector ↔ USB connector
	(Accessory: Male-to-male DB9 adapter)	

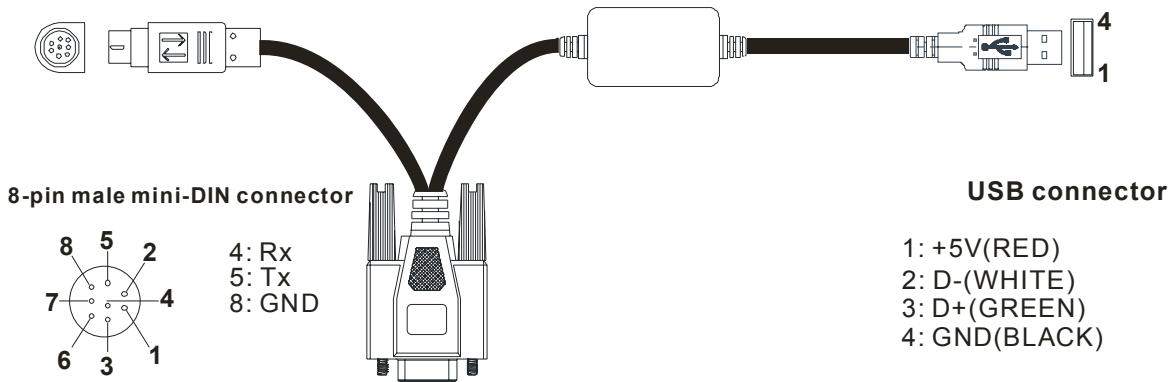

- ◆ Note: Please refer to Appendix B for more information about installing a USB driver.

Figure 3B	UC-PRG020-12A (2 m)	Female DB9 connector ↔ USB connector
	(Accessory: Male-to-male DB9 adapter)	

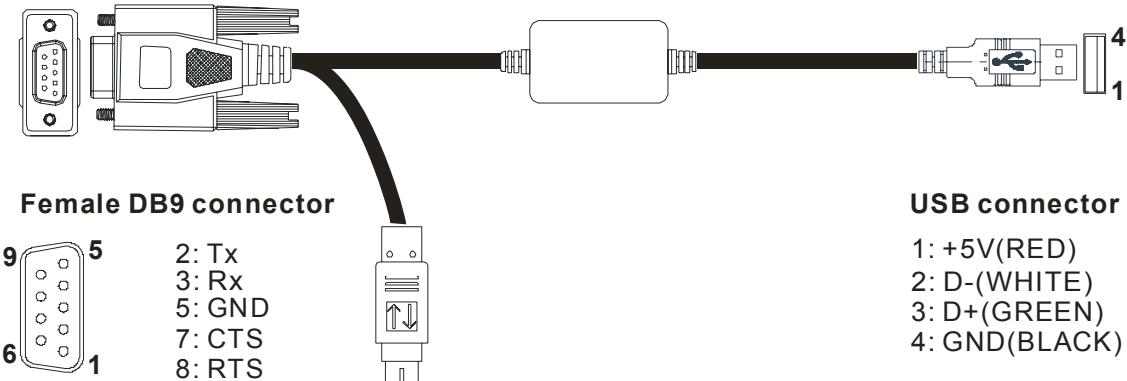

- ◆ Note: Please refer to Appendix B for more information about installing a USB driver.

Delta PLC/HMI Cable Selection Guide

1


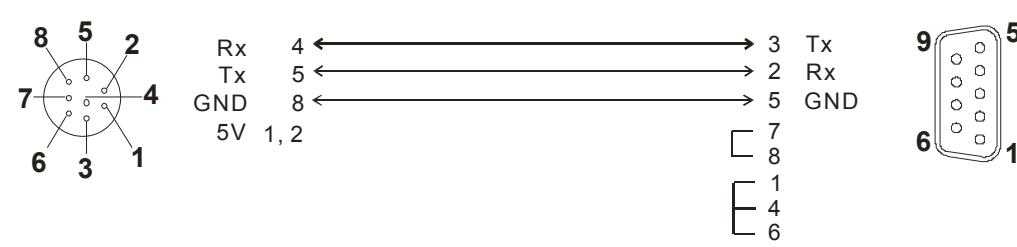
Figure 4	UC-MS020-06A (2 m) UC-MS030-06A (3 m)	8-pin male mini-DIN connector ↔ Male DB9 connector
 <p>8-pin male mini-DIN connector ← → Male DB9 connector</p> 		

Figure 5	IFD6500	RS-485 ↔ USB
 <p>RS-485 4: SG- 5: SG+</p>		


◆ Note: Please refer to Appendix B for more information about installing a USB driver.		
Figure 5	IFD6500 accessory	RJ11 ↔ RS-485

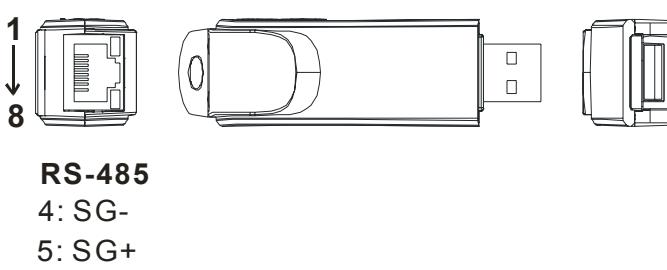



RJ11
3: SG+ (Red)
4: SG- (Green)

Chapter 1 Cables for PLC Programming and Serial Communication

1

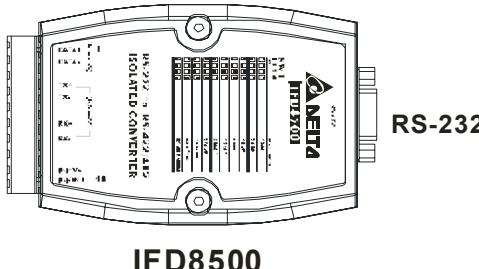Figure 6	IFD8500	RS-485 ↔ RS-232															
																	
RS-485/RS-422 & power input terminals		RS-232															
<table> <tr> <td>1: RS-485 DATA+</td> <td>6: RS-422 RX+</td> <td></td></tr> <tr> <td>2: RS-485 DATA-</td> <td>7: RS-422 RX-</td> <td>2: Rx</td></tr> <tr> <td>3: --</td> <td>8: --</td> <td>3: Tx</td></tr> <tr> <td>4: RS-422 TX+</td> <td>9: +Vs (positive power input)</td> <td>5: GND</td></tr> <tr> <td>5: RS-422 TX-</td> <td>10: GND (Negative power input)</td> <td></td></tr> </table>			1: RS-485 DATA+	6: RS-422 RX+		2: RS-485 DATA-	7: RS-422 RX-	2: Rx	3: --	8: --	3: Tx	4: RS-422 TX+	9: +Vs (positive power input)	5: GND	5: RS-422 TX-	10: GND (Negative power input)	
1: RS-485 DATA+	6: RS-422 RX+																
2: RS-485 DATA-	7: RS-422 RX-	2: Rx															
3: --	8: --	3: Tx															
4: RS-422 TX+	9: +Vs (positive power input)	5: GND															
5: RS-422 TX-	10: GND (Negative power input)																
<p>◆ Note: If the RS-485 interface is connected to a PLC, the station address set in software needs to be the same as the station address of the PLC.</p>																	
Figure 7	UC-PRG030-20A (3 m)	RJ45 ↔ RJ45															
																	

Delta PLC/HMI Cable Selection Guide

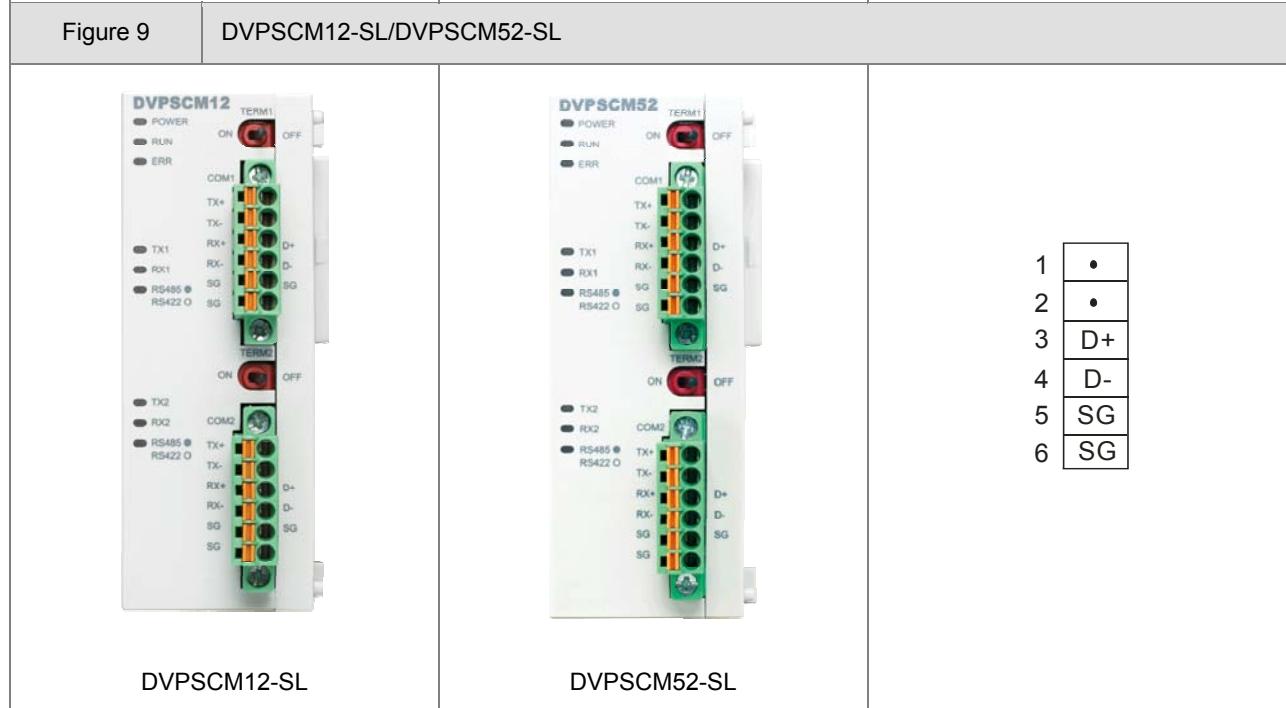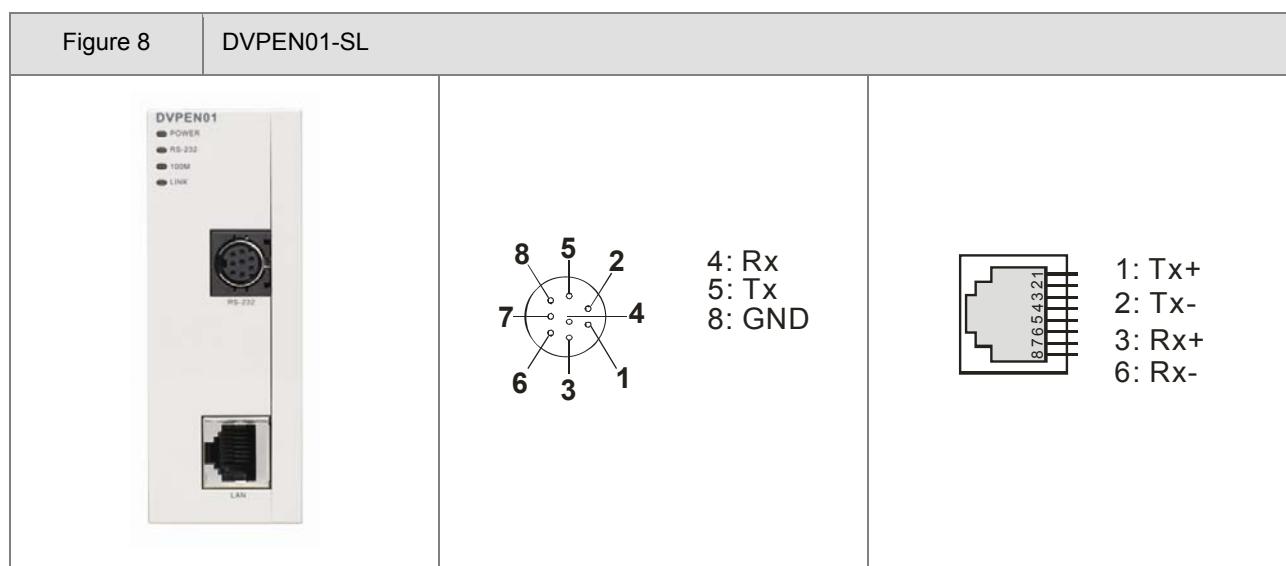1



Chapter 1 Cables for PLC Programming and Serial Communication

1

Figure 10	UC-PRG015-01A (1.5 m) UC-PRG030-01A (3 m)	Mini USB ↔ USB																				
<p style="text-align: center;">MINI USB ← → USB</p> <table style="margin-left: auto; margin-right: auto;"> <tr><td>+5V(RED)</td><td>1</td><td>←</td><td>1</td><td>+5V(RED)</td></tr> <tr><td>D-(WHITE)</td><td>2</td><td>←</td><td>2</td><td>D-(WHITE)</td></tr> <tr><td>D+(GREEN)</td><td>3</td><td>←</td><td>3</td><td>D+(GREEN)</td></tr> <tr><td>GND(BLACK)</td><td>5</td><td>←</td><td>4</td><td>GND(BLACK)</td></tr> </table>			+5V(RED)	1	←	1	+5V(RED)	D-(WHITE)	2	←	2	D-(WHITE)	D+(GREEN)	3	←	3	D+(GREEN)	GND(BLACK)	5	←	4	GND(BLACK)
+5V(RED)	1	←	1	+5V(RED)																		
D-(WHITE)	2	←	2	D-(WHITE)																		
D+(GREEN)	3	←	3	D+(GREEN)																		
GND(BLACK)	5	←	4	GND(BLACK)																		
<p style="text-align: center;">Female DB9 connector ← → Female DB9 connector</p> <table style="margin-left: auto; margin-right: auto;"> <tr><td>9</td><td>5</td><td>3 Tx</td><td>2 Rx</td><td>2</td><td>Rx</td></tr> <tr><td>5</td><td>2</td><td>2 Rx</td><td>3 Tx</td><td>3</td><td>Tx</td></tr> <tr><td>6</td><td>1</td><td>5 GND</td><td>5 GND</td><td>5</td><td>GND</td></tr> </table>			9	5	3 Tx	2 Rx	2	Rx	5	2	2 Rx	3 Tx	3	Tx	6	1	5 GND	5 GND	5	GND		
9	5	3 Tx	2 Rx	2	Rx																	
5	2	2 Rx	3 Tx	3	Tx																	
6	1	5 GND	5 GND	5	GND																	
Figure 12	UC-PRG030-10A (3 m)	Female DB9 connector ↔ Female DB9 connector																				

Delta PLC/HMI Cable Selection Guide

1

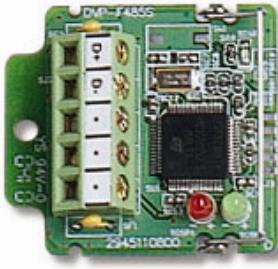
 
Figure 12	UC-PRG030-10A (3 m)	Female DB9 connector ↔ Female DB9 connector + Null modem adapter																	
		 <p>Female DB9 connector ← → Male DB9 connector</p> <table border="0"> <tr> <td>Female DB9 Pinout:</td> <td>Male DB9 Pinout:</td> </tr> <tr> <td>9 5</td> <td>3 Tx</td> <td>3 9</td> </tr> <tr> <td>2 Rx</td> <td>2 Rx</td> <td>2 5</td> </tr> <tr> <td>5 GND</td> <td>5 GND</td> <td>1 6</td> </tr> <tr> <td>6</td> <td></td> <td></td> </tr> <tr> <td>1</td> <td></td> <td></td> </tr> </table>	Female DB9 Pinout:	Male DB9 Pinout:	9 5	3 Tx	3 9	2 Rx	2 Rx	2 5	5 GND	5 GND	1 6	6			1		
Female DB9 Pinout:	Male DB9 Pinout:																		
9 5	3 Tx	3 9																	
2 Rx	2 Rx	2 5																	
5 GND	5 GND	1 6																	
6																			
1																			
Figure 13	F485S	 <p>D+ D- • • •</p> <p>D+: Signal (+ pole) D-: Signal (- pole)</p>																	
Figure 14	DVP-FEN01	 <p>8-pin male mini-DIN connector</p> <table border="0"> <tr> <td>Pinout:</td> <td>Assignment:</td> </tr> <tr> <td>8 5 2</td> <td>4: Rx</td> </tr> <tr> <td>7 4 1</td> <td>5: Tx</td> </tr> <tr> <td>6 3</td> <td>8: GND</td> </tr> </table>  <p>1: Tx+ 2: Tx- 3: Rx+ 6: Rx-</p>	Pinout:	Assignment:	8 5 2	4: Rx	7 4 1	5: Tx	6 3	8: GND									
Pinout:	Assignment:																		
8 5 2	4: Rx																		
7 4 1	5: Tx																		
6 3	8: GND																		

Chapter 1 Cables for PLC Programming and Serial Communication

1

Figure 15


F232

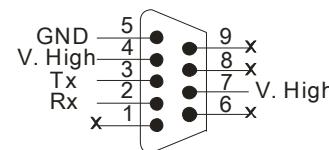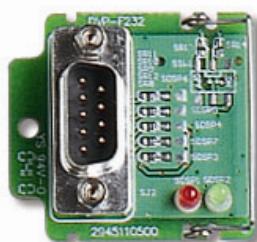

V. High: High electrical potential, i.e. logical value 1

Figure 16

 F485





D+: Signal (+ pole)

D-: Signal (- pole)

Figure 17

UC-MS030-04A (3 m)

 Male DB9 connector ↔ Male DB9 connector

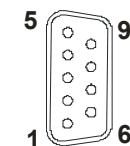**Male DB9 connector** ← → **Male DB9 connector**Rx
Tx
GNDRx
Tx
GND
GND
GND

Delta PLC/HMI Cable Selection Guide

1

Figure 18	UC-MS030-03A (3 m)	Female DB9 connector ↔ Male DB9 connector																																
 <p>Female DB9 connector ← → Male DB9 connector</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: right;">9</td> <td style="text-align: center;">5</td> <td style="text-align: left;">3 Tx</td> <td style="text-align: right;">2 Rx</td> <td style="text-align: center;">→</td> <td style="text-align: left;">2 Rx</td> <td style="text-align: right;">3 Tx</td> <td style="text-align: center;">→</td> <td style="text-align: left;">5 GND</td> </tr> <tr> <td style="text-align: right;">6</td> <td style="text-align: center;">1</td> <td style="text-align: left;">2 Rx</td> <td style="text-align: right;">3 Tx</td> <td style="text-align: center;">→</td> <td style="text-align: left;">3 Tx</td> <td style="text-align: right;">5 GND</td> <td style="text-align: center;">→</td> <td style="text-align: left;">5 GND</td> </tr> <tr> <td style="text-align: right;">5</td> <td style="text-align: center;">9</td> <td style="text-align: left;">5 GND</td> <td style="text-align: right;">6</td> <td style="text-align: center;">←</td> <td style="text-align: left;">6</td> <td style="text-align: right;">1</td> <td style="text-align: center;">←</td> <td style="text-align: left;">1</td> </tr> </table>			9	5	3 Tx	2 Rx	→	2 Rx	3 Tx	→	5 GND	6	1	2 Rx	3 Tx	→	3 Tx	5 GND	→	5 GND	5	9	5 GND	6	←	6	1	←	1					
9	5	3 Tx	2 Rx	→	2 Rx	3 Tx	→	5 GND																										
6	1	2 Rx	3 Tx	→	3 Tx	5 GND	→	5 GND																										
5	9	5 GND	6	←	6	1	←	1																										
<p>Figure 19</p> <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">UC-PRG015-02A (1.5 m)</td> </tr> </table> <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">UC-PRG030-02A (3 m)</td> </tr> </table> <table border="1" style="display: inline-table; vertical-align: middle;"> <tr> <td style="padding: 2px;">UC-PRG050-02A (5M) (only for DOP)</td> </tr> </table> <p>USB Type-B ↔ USB Type-A</p>			UC-PRG015-02A (1.5 m)	UC-PRG030-02A (3 m)	UC-PRG050-02A (5M) (only for DOP)																													
UC-PRG015-02A (1.5 m)																																		
UC-PRG030-02A (3 m)																																		
UC-PRG050-02A (5M) (only for DOP)																																		
 <p>USB Type-B ← → USB Type-A</p> <table border="1" style="margin-left: auto; margin-right: auto;"> <tr> <td style="text-align: right;">2</td> <td style="text-align: center;">3</td> <td style="text-align: left;">1 +5V(RED)</td> <td style="text-align: right;">1 →</td> <td style="text-align: left;">1 +5V(RED)</td> <td style="text-align: right;">2 D-(WHITE)</td> <td style="text-align: center;">→</td> <td style="text-align: left;">2 D-(WHITE)</td> </tr> <tr> <td style="text-align: right;">1</td> <td style="text-align: center;">4</td> <td style="text-align: left;">D-(WHITE)</td> <td style="text-align: right;">2 →</td> <td style="text-align: left;">2 D-(WHITE)</td> <td style="text-align: right;">3 D+(GREEN)</td> <td style="text-align: center;">→</td> <td style="text-align: left;">3 D+(GREEN)</td> </tr> <tr> <td style="text-align: right;">4</td> <td style="text-align: center;">1</td> <td style="text-align: left;">D+(GREEN)</td> <td style="text-align: right;">3 →</td> <td style="text-align: left;">3 D+(GREEN)</td> <td style="text-align: right;">4 GND(BLACK)</td> <td style="text-align: center;">→</td> <td style="text-align: left;">4 GND(BLACK)</td> </tr> <tr> <td style="text-align: right;">3</td> <td style="text-align: center;">2</td> <td style="text-align: left;">GND(BLACK)</td> <td style="text-align: right;">4 ←</td> <td style="text-align: left;">4 GND(BLACK)</td> <td style="text-align: right;">1</td> <td style="text-align: center;">←</td> <td style="text-align: left;">1</td> </tr> </table>			2	3	1 +5V(RED)	1 →	1 +5V(RED)	2 D-(WHITE)	→	2 D-(WHITE)	1	4	D-(WHITE)	2 →	2 D-(WHITE)	3 D+(GREEN)	→	3 D+(GREEN)	4	1	D+(GREEN)	3 →	3 D+(GREEN)	4 GND(BLACK)	→	4 GND(BLACK)	3	2	GND(BLACK)	4 ←	4 GND(BLACK)	1	←	1
2	3	1 +5V(RED)	1 →	1 +5V(RED)	2 D-(WHITE)	→	2 D-(WHITE)																											
1	4	D-(WHITE)	2 →	2 D-(WHITE)	3 D+(GREEN)	→	3 D+(GREEN)																											
4	1	D+(GREEN)	3 →	3 D+(GREEN)	4 GND(BLACK)	→	4 GND(BLACK)																											
3	2	GND(BLACK)	4 ←	4 GND(BLACK)	1	←	1																											


◆ Note: UC-PRG050-02A is used for transferring input signals between the interface panel and the controller. The cable is used exclusively for all-electric injection molding machines.

Chapter 1 Cables for PLC Programming and Serial Communication

1

Figure 20

AH10EN-5A

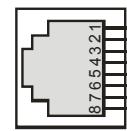

- 1: Tx+
- 2: Tx-
- 3: Rx+
- 6: Rx-

Figure 21

AH10SCM-5A



1	•
2	•
3	D+
4	D-
5	GND
6	FG

Figure 22

AS-F232



2: Rx

3: Tx

5: GND

Delta PLC/HMI Cable Selection Guide

1

Figure 23

AS-F485



3: D+

4: D-

5: SG



Chapter 2 Extension Cables for I/O Modules


Table of Contents

2.1 DVP Series Slim PLCs.....	2-2
2.1.1 DVP32SM11N.....	2-2
2.1.2 DVP32SN11TN.....	2-2
2.2 AH500 Series.....	2-3
2.2.1 AH32AM10N-5B.....	2-3
2.2.2 AH32AM10N-5C.....	2-3
2.2.3 AH64AM10N-5C.....	2-4
2.2.4 AH32AN02T-5B.....	2-5
2.2.5 AH32AN02P-5B	2-5
2.2.6 AH32AN02T-5C.....	2-6
2.2.7 AH32AN02P-5C	2-6
2.2.8 AH64AN02T-5C.....	2-7
2.2.9 AH64AN02P-5C	2-8
2.2.10 AH20MC-5A	2-9
2.2.11 AH10EMC-5A/AH10DMC-5A/AH10CMC-5A/AH10PMC-5A	2-9
2.2.12 AH10PM-5A.....	2-10
2.2.13 AH15PM-5A.....	2-10
2.2.14 AH04HC-5A.....	2-11
2.2.15 AH500 Series Main Backplanes	2-12
2.3 AS300 Series	2-13
2.3.1 AS332T-A/AS332P-A/AS324MT-A	2-13
2.3.2 AS32AM10N-A.....	2-13
2.3.3 AS32AN02T-A.....	2-14
2.3.4 AS64AM10N-A.....	2-14
2.3.5 AS64AN02T-A.....	2-15
2.4 Cable Models	2-16
2.5 Descriptions of Cable Models	2-28

Delta PLC/HMI Cable Selection Guide

2.1 DVP Series Slim PLCs**2.1.1 DVP32SM11N**


Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA

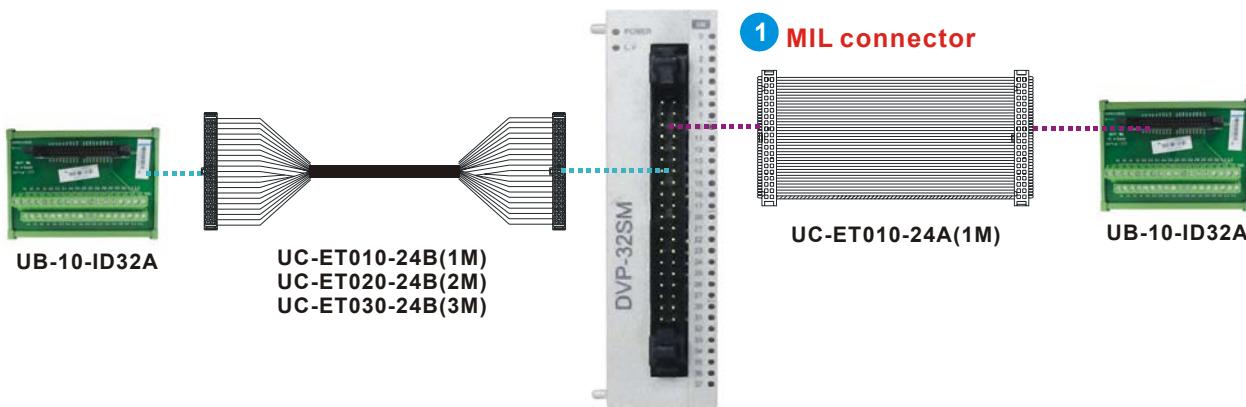

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.1.2 DVP32SN11TN

Output point type	Transistor – T (sink)
Voltage specification	12~24 V DC, 0.1 A

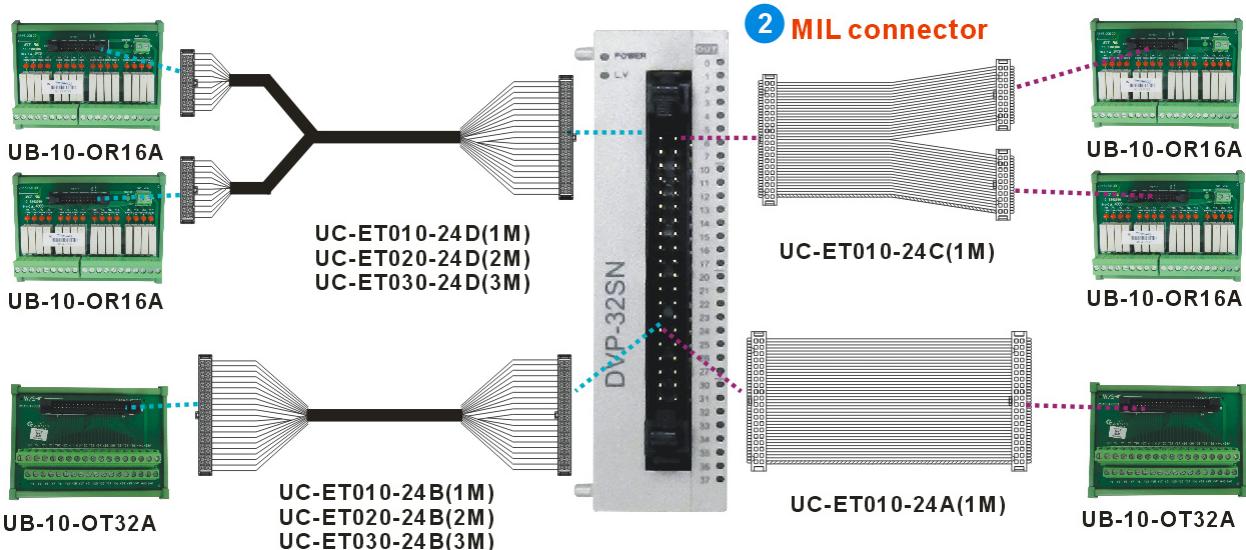


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2 AH500 Series

2.2.1 AH32AM10N-5B


Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA

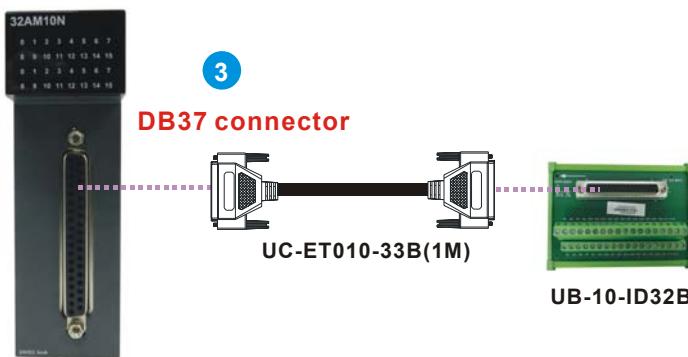

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.2 AH32AM10N-5C

Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA

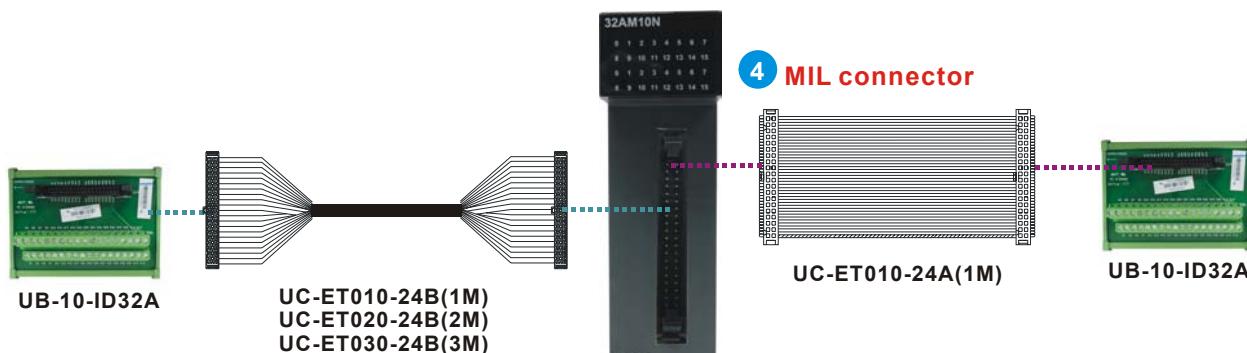


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.2.3 AH64AM10N-5C

Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA


2

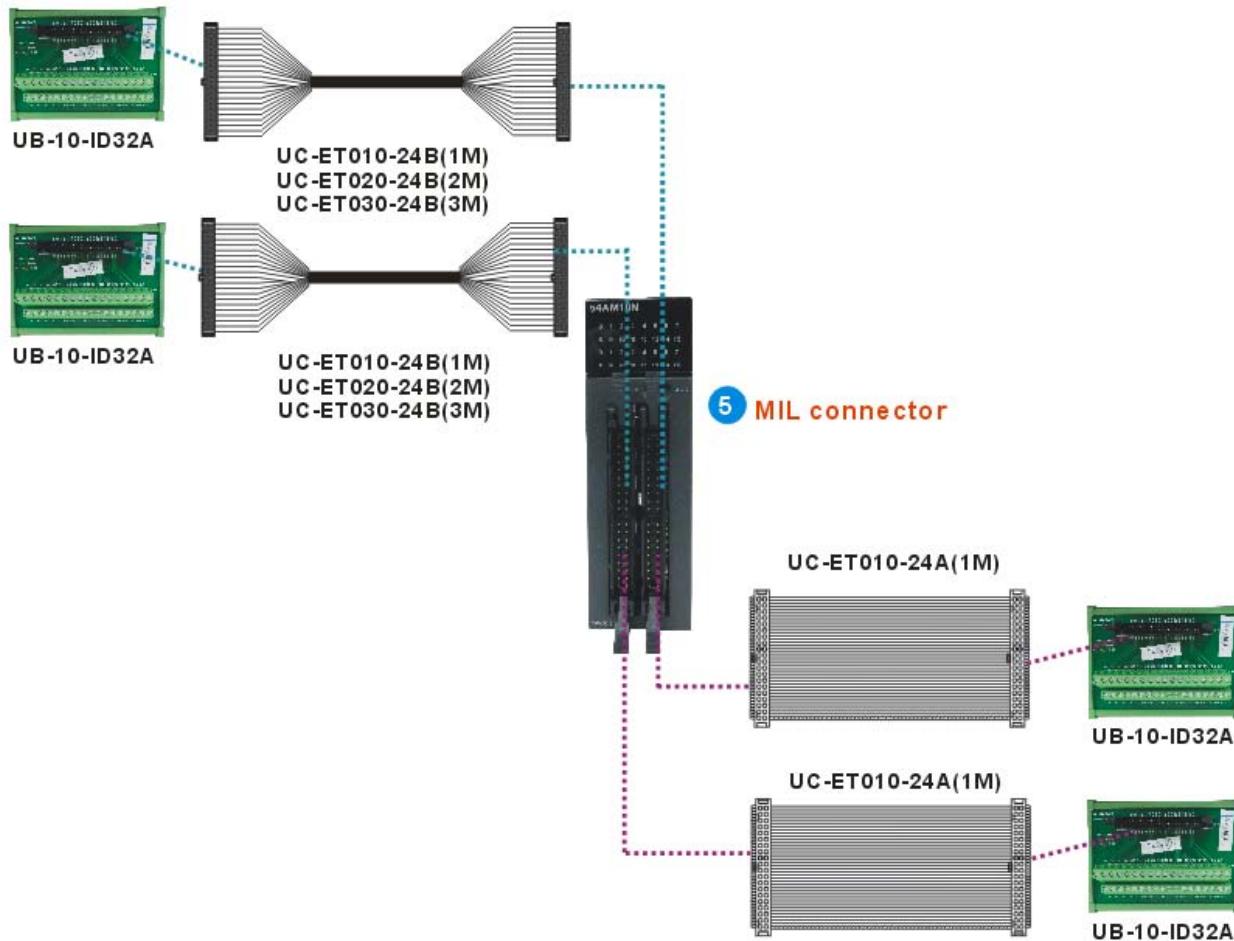

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.4 AH32AN02T-5B


Output point type	Transistor – T (sink)
Voltage specification	12~24 V DC, 0.1 A

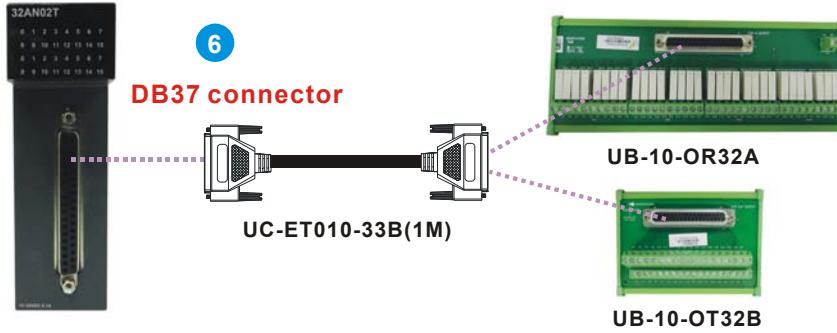

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.5 AH32AN02P-5B

Output point type	Transistor – P (source)
Voltage specification	12~24 V DC, 0.1 A

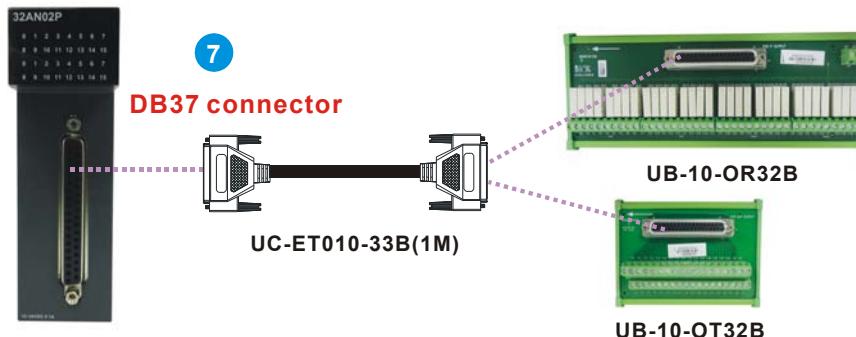


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.2.6 AH32AN02T-5C


Output point type	Transistor – T (sink)
Voltage specification	12~24 V DC, 0.1 A

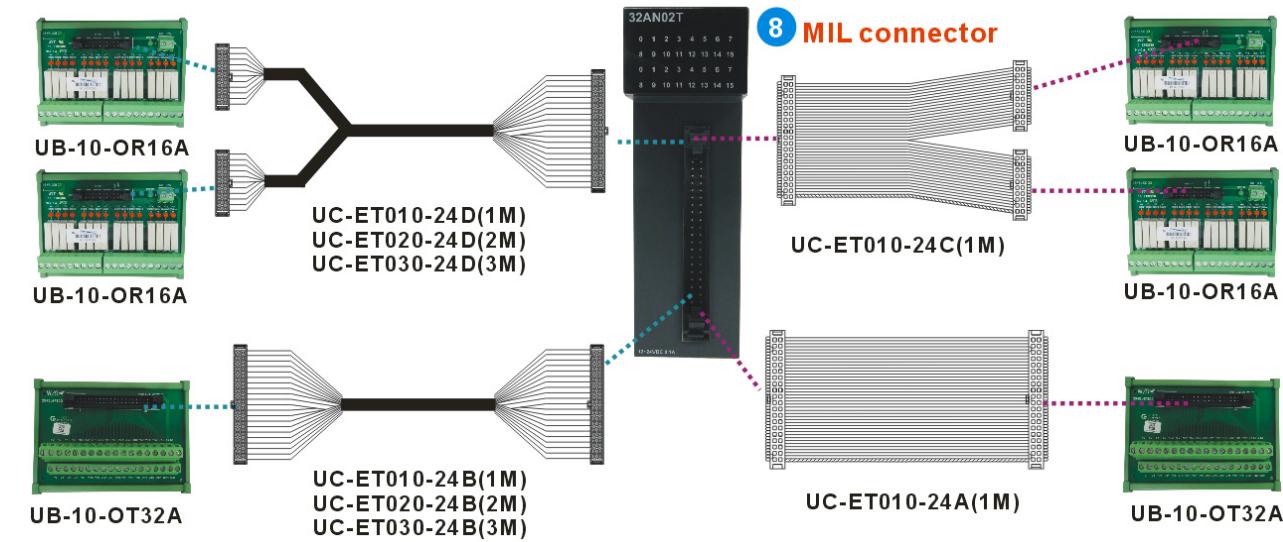

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.7 AH32AN02P-5C


Output point type	Transistor – P (source)
Voltage specification	12~24 V DC, 0.1 A

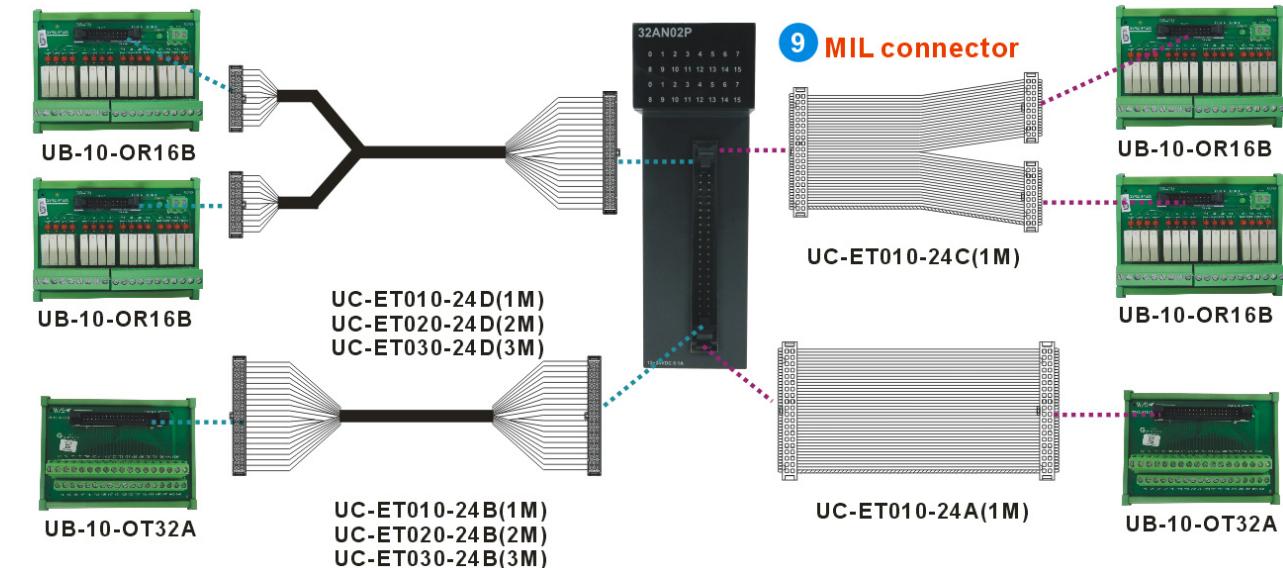

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.8 AH64AN02T-5C

Output point type	Transistor – T (sink)
Voltage specification	12~24 V DC, 0.1 A

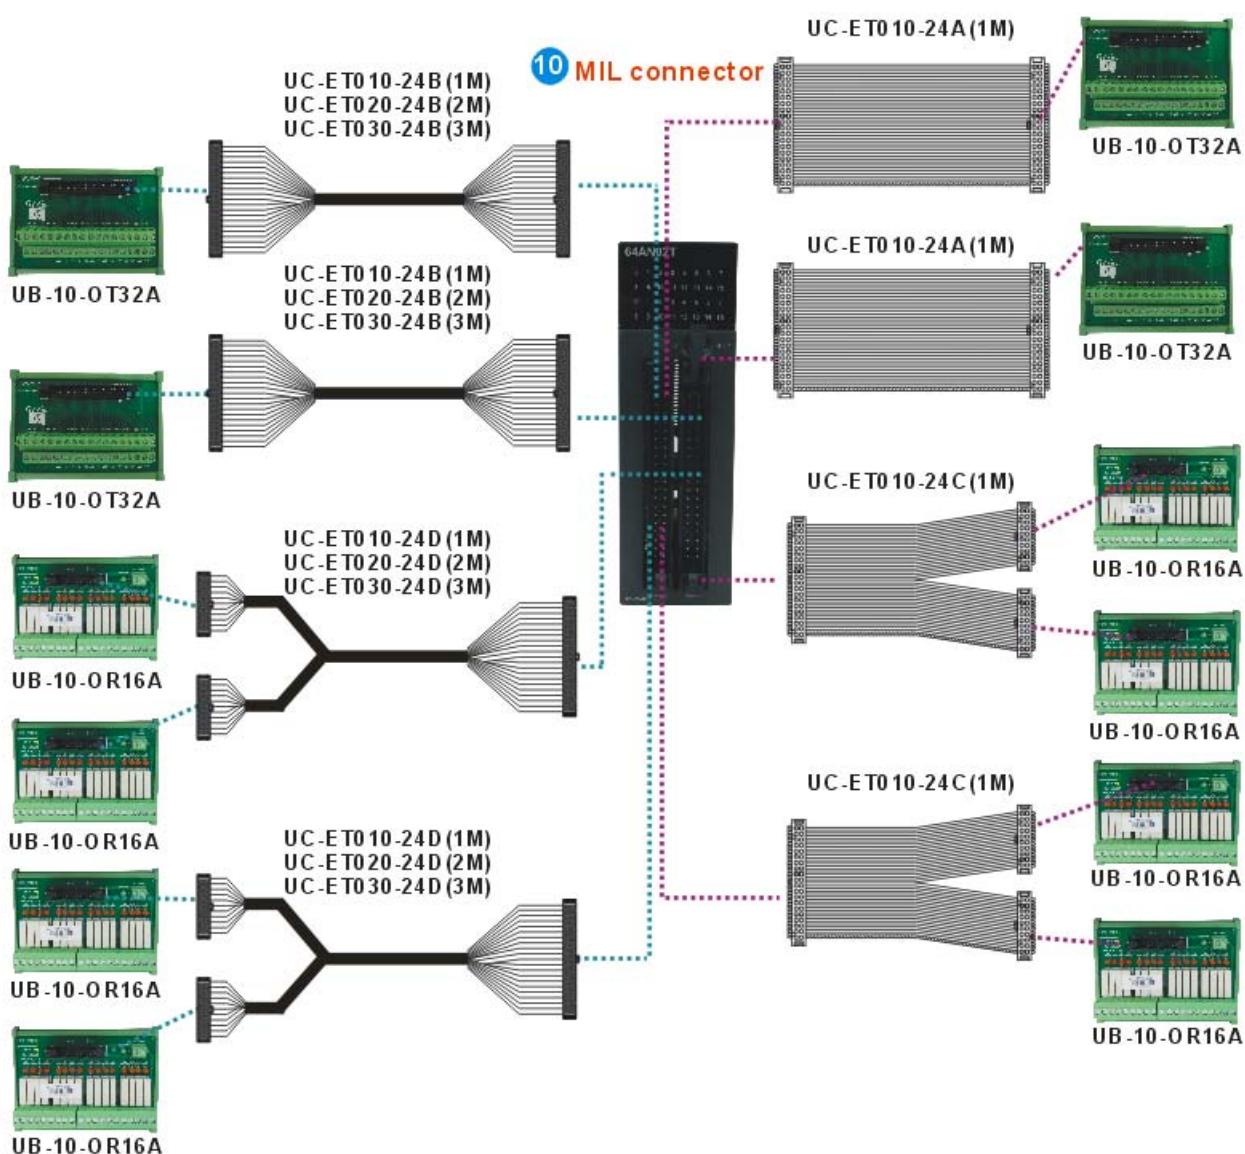


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.2.9 AH64AN02P-5C

Output point type	Transistor – P (source)
Voltage specification	12~24 V DC, 0.1 A


2

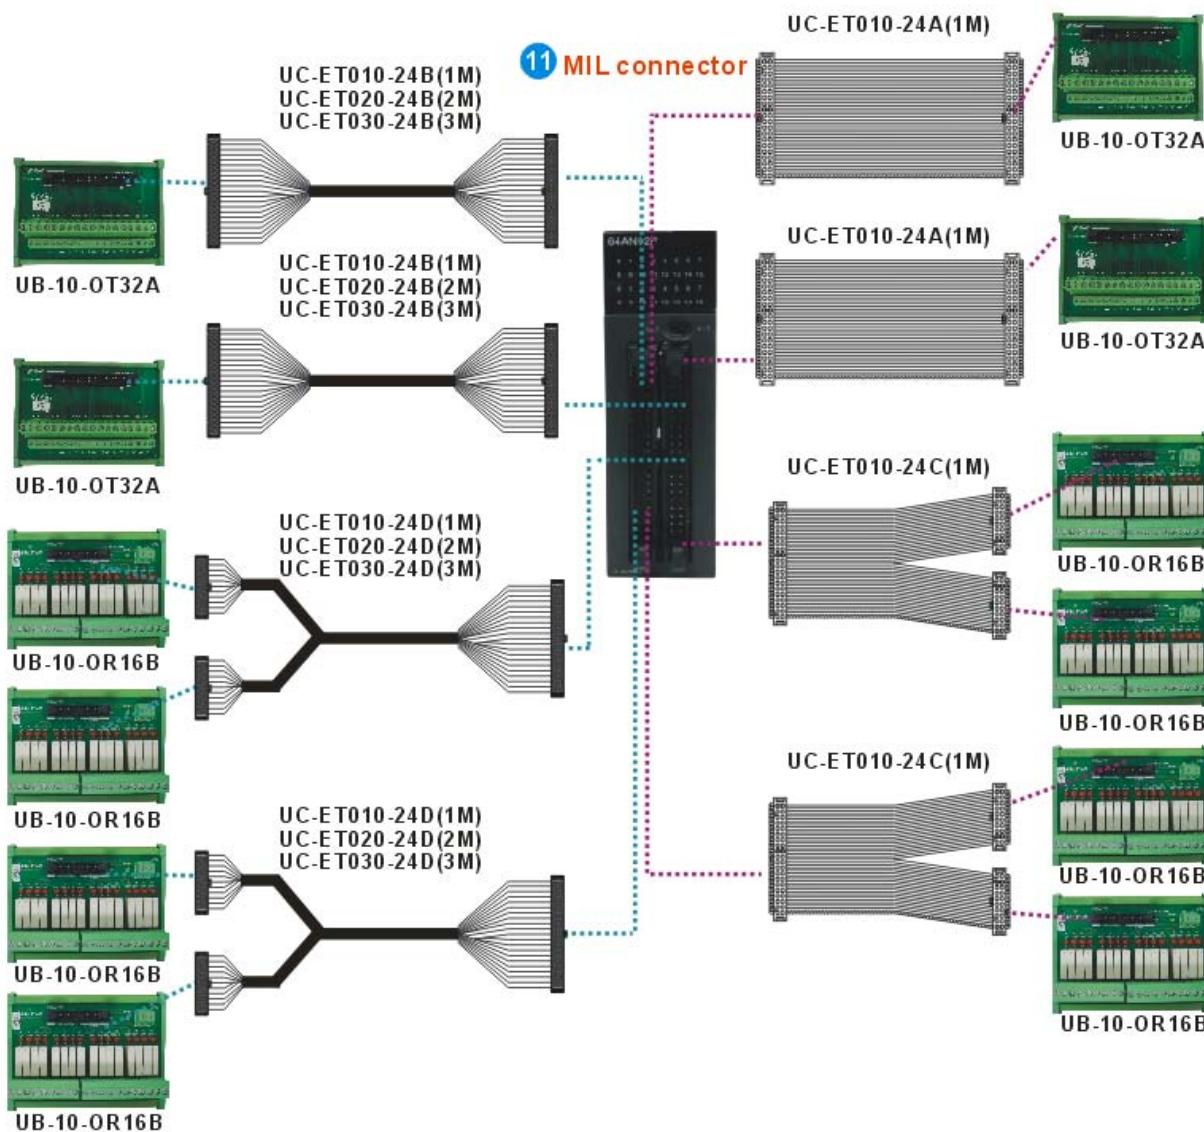

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.10 AH20MC-5A


Input point type/Voltage specification/Frequency	Differential input/5~24 V DC, 15 mA/200 kHz
Output point type/Voltage specification/Frequency	Transistor output/5~30 V DC, 40 mA/200 kHz

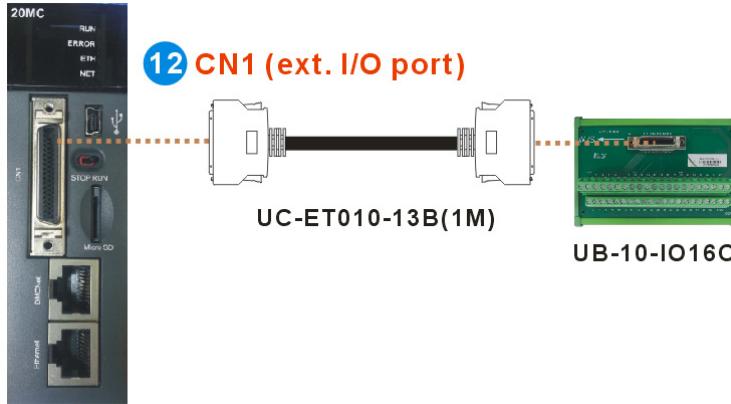

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.11 AH10EMC-5A/AH10DMC-5A/AH10CMC-5A/AH10PMC-5A

Input point type/Voltage specification/Frequency	Differential input/5 V DC, 1.5 mA/1 MHz Open collector/24 V DC, 15 mA/100 kHz
Output point type/Voltage specification/Frequency	Transistor output/5~30 V DC, 40 mA/200 kHz

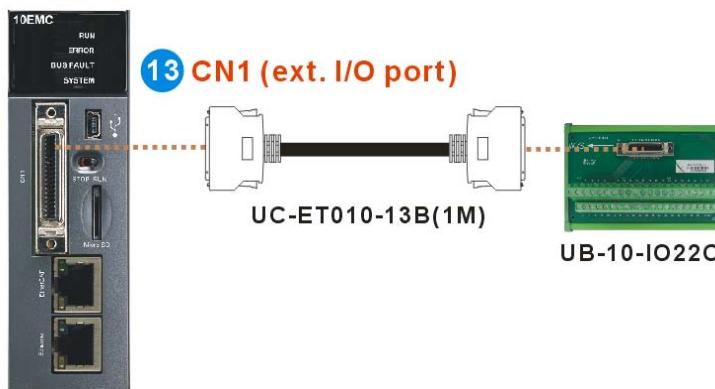


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.2.12 AH10PM-5A


Input point type/Voltage specification/Frequency	Differential input/5~24 V DC, 15 mA/200 kHz Open collector/24 V DC, 15 mA/100 kHz
Output point type/Voltage specification/Frequency	Differential output/5 V DC, 40 mA/1 MHz Transistor output/5~30 V DC, 40 mA/200 kHz

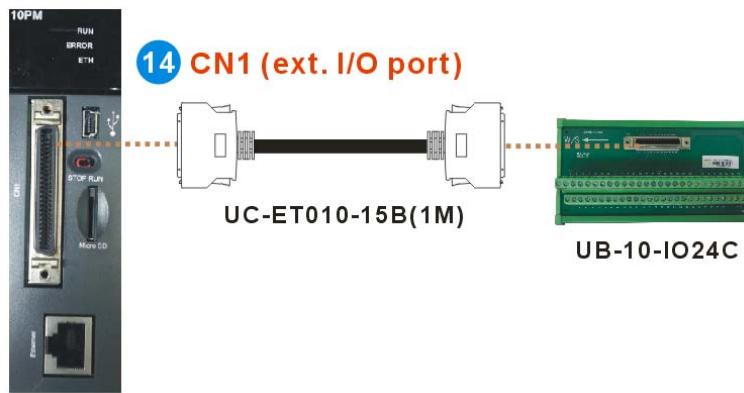

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.13 AH15PM-5A

Input point type/Voltage specification/Frequency	Differential input/5~24 V DC, 15 mA/200 kHz Open collector/24 V DC, 15 mA/100 kHz
Output point type/Voltage specification/Frequency	Differential output/5 V DC, 40 mA/1 MHz Transistor output/5~30 V DC, 40 mA/200 kHz

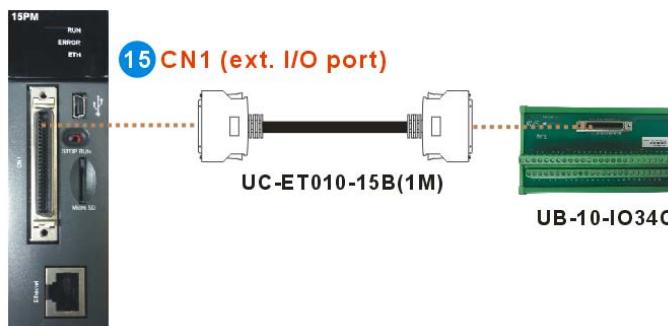


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.2.14 AH04HC-5A

Input point type/Voltage specification/Frequency	Differential input/5~24 V DC, 15 mA/200 kHz
Output point type/Voltage specification/Frequency	Transistor output/5~30 V DC, 40 mA/200 kHz

2

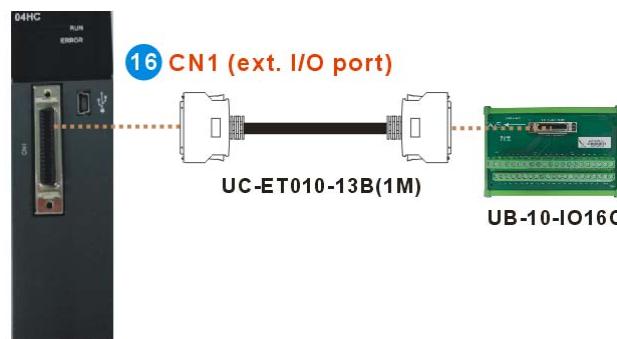


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.2.15 AH500 Series Main Backplanes

AH500 series main backplanes (AHBP04M1-5A, AHBP08M1-5A, AHBP12M1-5A)

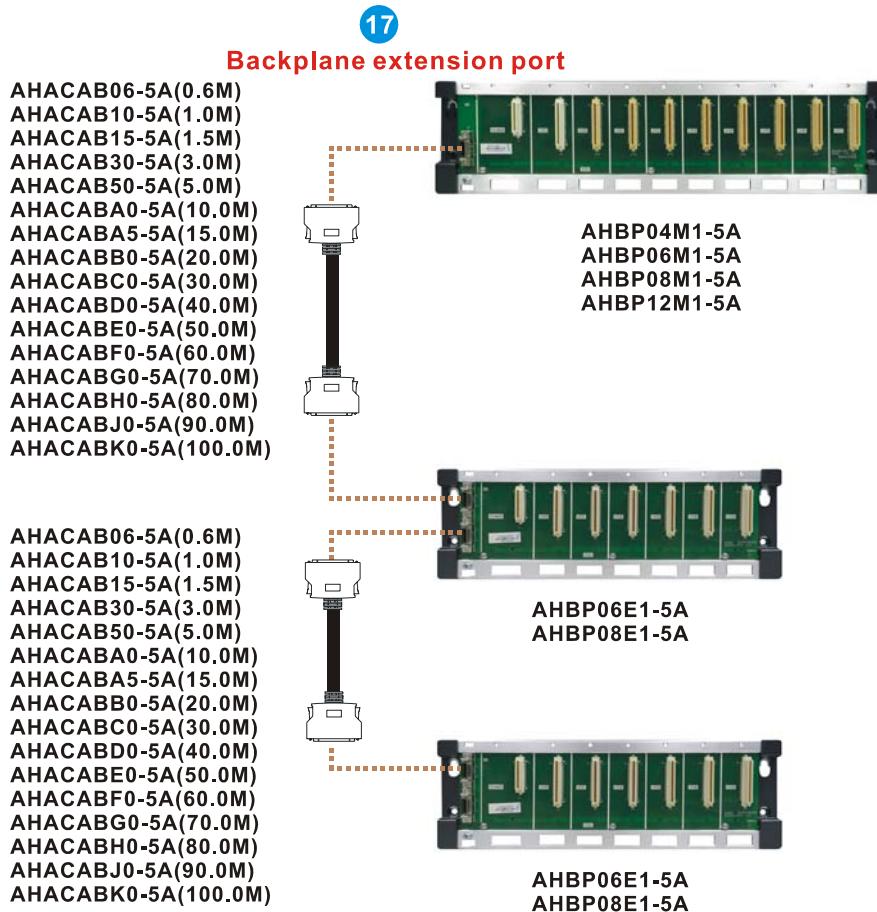


Note: Please refer to section 2.4 for more information about 1, 2, 3, etc.

2.3 AS300 Series

2.3.1 AS332T-A/AS332P-A/AS324MT-A


Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA

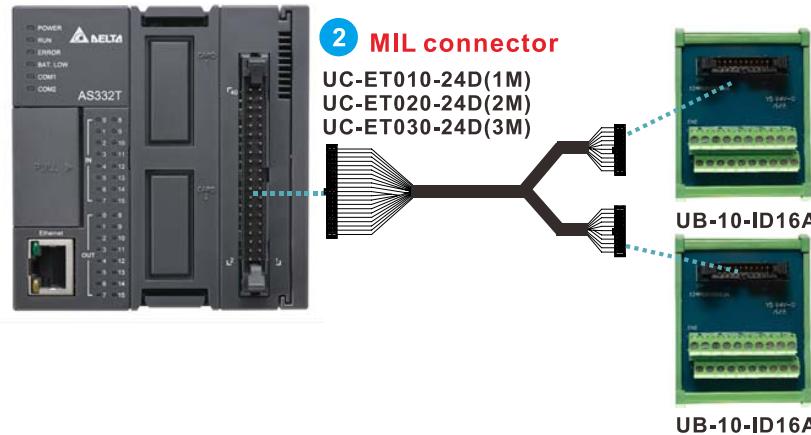

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

2.3.2 AS32AM10N-A

Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA

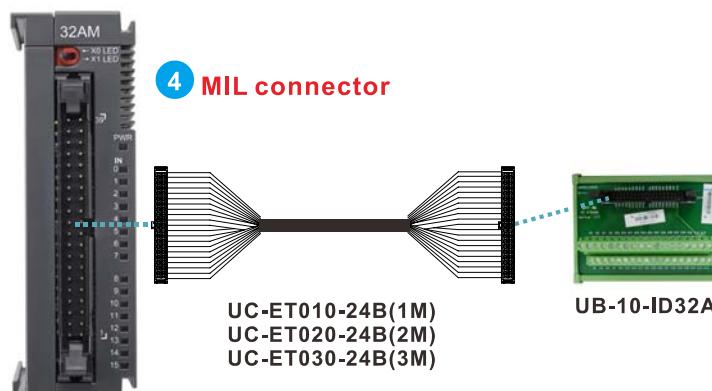


Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.3.3 AS32AN02T-A

Output point type	Transistor – T (sink)
Voltage specification	12~24 V DC, 0.1 A


2

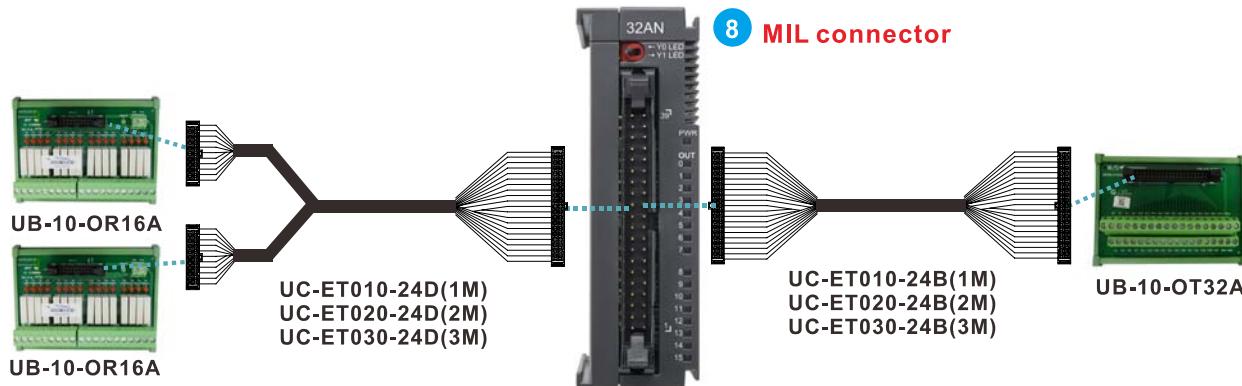

Note: Please refer to section 2.4 for more information about **1**, **2**, **3**, etc.

2.3.4 AS64AM10N-A


Input form	Direct current (sink or source)
Input current	24 V DC, 5 mA

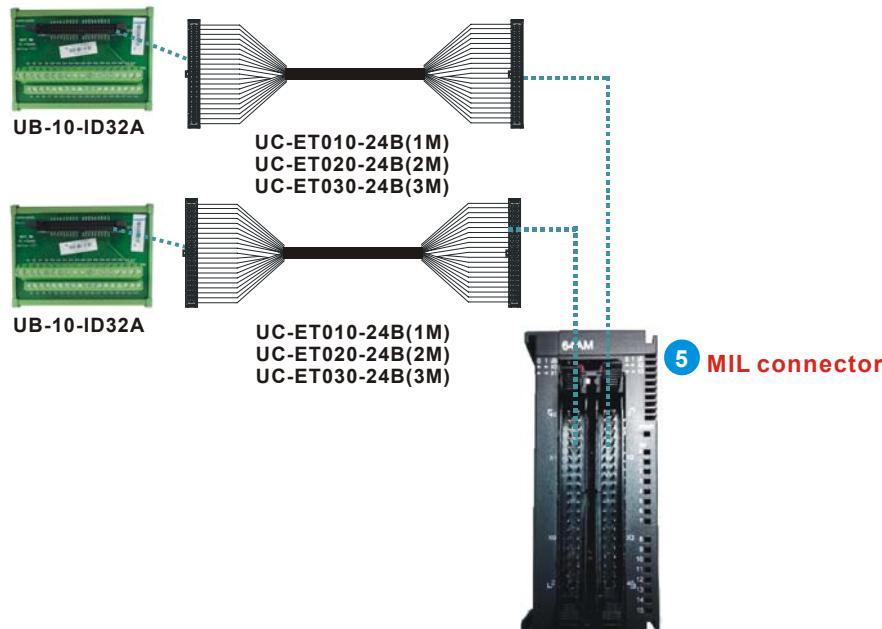

Note: Please refer to section 2.4 for more information about **1**, **2**, **3**, etc.

2.3.5 AS64AN02T-A

Output point type	Transistor – T (sink)
Voltage specification	12~24 V DC, 0.1 A

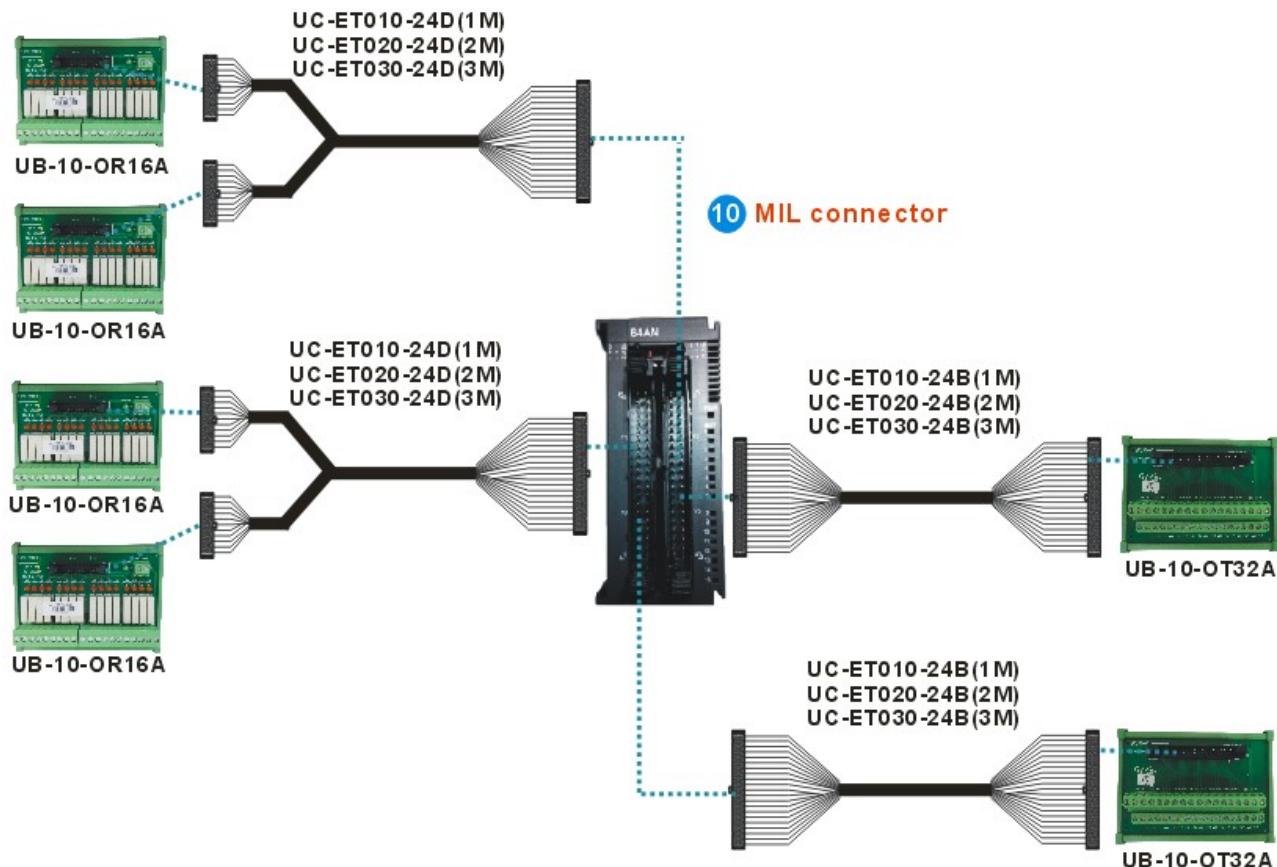

Note: Please refer to section 2.4 for more information about ①, ②, ③, etc.

Chapter 2 Extension Cables for I/O Modules

2.4 Cable Models

1 MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	DVP32SM11N	IDC 40↔ IDC 40	UB-10-ID32A (Figure 2)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

2 MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	DVP32SN11TN	IDC 40↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

Chapter 2 Extension Cables for I/O Modules

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	DVP32SN11TN	IDC 40↔ IDC 20x2	UB-10-OR16A (Figure 5)
			UC-ET010-24C (1 m) (Figure 4A) UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
AS300	--	--	IDC 40↔ IDC 20x2	UB-10-ID16A (Figure 19)
			UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

3

DB37 connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AM10N-5B	Male DB37 connector ↔ Male DB37 connector	UB-10-ID32B (Figure 7)
			UC-ET010-33B (1 m) (Figure 6)	

Chapter 2 Extension Cables for I/O Modules

4 MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AM10N-5C	IDC 40↔ IDC 40	UB-10-ID32A (Figure 2)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AS32AM10N-A	IDC 40↔ IDC 40	UB-10-ID32A (Figure 2)
			UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

5

MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH64AM10N-5C	IDC 40↔ IDC 40	UB-10-ID32A (Figure 2)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AS64AM10N-A	IDC 40↔ IDC 40	UB-10-ID32A (Figure 2)
			UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

Chapter 2 Extension Cables for I/O Modules

6 DB37 connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AN02T-5B	Male DB37 connector ↔ Male DB37 connector	UB-10-OR32A (Figure 8) UB-10-OT32B (Figure 9)
			UC-ET010-33B (1 m) (Figure 6)	

7 DB37 connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AN02P-5B	Male DB37 connector ↔ Male DB37 connector	UB-10-OR32B (Figure 10) UB-10-OT32B (Figure 9)
			UC-ET010-33B (1 m) (Figure 6)	

8

MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AN02T-5C	IDC 40 ↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AN02T-5C	IDC 40 ↔ IDC 20x2	UB-10-OR16A (Figure 5)
			UC-ET010-24C (1 m) (Figure 4A) UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AS32AN02T-A	IDC 40 ↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

Chapter 2 Extension Cables for I/O Modules

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AS32AN02T-A	IDC 40 ↔ IDC 20x2	UB-10-OR16A (Figure 5)
			UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

9 MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AN02P-5C	IDC 40 ↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH32AN02P-5C	IDC 40 ↔ IDC 20x2	UB-10-OR16B (Figure 11)
			UC-ET010-24C (1 m) (Figure 4A) UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

Chapter 2 Extension Cables for I/O Modules

10 MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH64AN02T-5C	IDC 40 ↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH64AN02T-5C	IDC 40 ↔ IDC 20x2	UB-10-OR16A (Figure 5)
			UC-ET010-24C (1 m) (Figure 4A) UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AS64AN02T-A	IDC 40 ↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

Chapter 2 Extension Cables for I/O Modules

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AS64AN02T-A	IDC 40 ↔ IDC 20x2	UB-10-OR16A (Figure 5)
			UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

11 MIL connector

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH64AN02P-5C	IDC 40 ↔ IDC 40	UB-10-OT32A (Figure 3)
			UC-ET010-24A (1 m) (Figure 1A) UC-ET010-24B (1 m) (Figure 1B) UC-ET020-24B (2 m) (Figure 1B) UC-ET030-24B (3 m) (Figure 1B)	

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH64AN02P-5C	IDC 40 ↔ IDC 20x2	UB-10-OR16B (Figure 11)
			UC-ET010-24C (1 m) (Figure 4A) UC-ET010-24D (1 m) (Figure 4B) UC-ET020-24D (2 m) (Figure 4B) UC-ET030-24D (3 m) (Figure 4B)	

Chapter 2 Extension Cables for I/O Modules

12 CN1 (ext. I/O port)

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH20MC-5A	Female MDR36 connector ↔ Female MDR36 connector	UB-10-IO16C (Figure 13)
			UC-ET010-13B (1 m) (Figure 12)	

13 CN1 (ext. I/O port)

CPU	Adapter	Module/Interface card	Cable	External terminal module
AH10EMC-5A	--	--	Female MDR36 connector ↔ Female MDR36 connector	UB-10-IO22C (Figure 14)
			UC-ET010-13B (1 m) (Figure 12)	

14 CN1 (ext. I/O port)

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH10PM-5A	Female MDR50 connector ↔ Female MDR50 connector	UB-10-IO24C (Figure 16)
			UC-ET010-15B (1 m) (Figure 15)	

Chapter 2 Extension Cables for I/O Modules

15 CN1 (ext. I/O port)

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH15PM-5A	Female MDR50 connector ↔ Female MDR50 connector	UB-10-IO34C (Figure 17)
			UC-ET010-15B (1 m) (Figure 15)	

16 CN1 (ext. I/O port)

CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AH04HC-5A	Female MDR36 connector ↔ Female MDR36 connector	UB-10-IO16C (Figure 13)
			UC-ET010-13B (1 m) (Figure 12)	

17




Backplane extension port

2



CPU	Adapter	Module/Interface card	Cable	External terminal module
--	--	AHBP04M1-5A AHBP06M1-5A AHBP08M1-5A AHBP12M1-5A	Male MDR20 connector ↔ Male MDR20 connector	AHBP06E1-5A AHBP08E1-5A
			 AHACAB06-5A (0.6 m) (Figure 18) AHACAB10-5A (1 m) (Figure 18) AHACAB15-5A (1.5 m) (Figure 18) AHACAB30-5A (3 m) (Figure 18) AHACAB50-5A (5 m) (Figure 18) AHACABA0-5A (10 m) (Figure 18) AHACABA5-5A (15 m) (Figure 18) AHACABB0-5A (20 m) (Figure 18) AHACABC0-5A (30 m) (Figure 18) AHACABD0-5A (40 m) (Figure 18) AHACABE0-5A (50 m) (Figure 18) AHACABF0-5A (60 m) (Figure 18) AHACABG0-5A (70 m) (Figure 18) AHACABH0-5A (80 m) (Figure 18) AHACABJ0-5A (90 m) (Figure 18) AHACABK0-5A (100 m) (Figure 18)	

Chapter 2 Extension Cables for I/O Modules

2.5 Descriptions of Cable Models

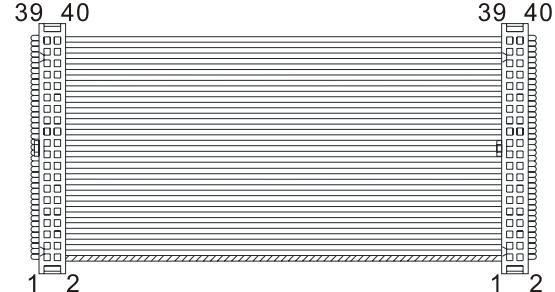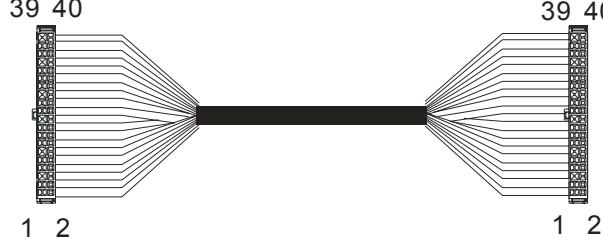 Figure 1A	UC-ET010-24A (1 m)	IDC 40 ↔ IDC 40																																																																																																																								
																																																																																																																										
Figure 1B	UC-ET010-24B (1 m) UC-ET020-24B (2 m) UC-ET030-24B (3 m)	IDC 40 ↔ IDC 40 (shield)																																																																																																																								
																																																																																																																										
AH32AM10N-5C		AH64AM10N-5C																																																																																																																								
	<table border="1"> <tbody> <tr><td>X0.0</td><td>X0.1</td></tr> <tr><td>X0.2</td><td>X0.3</td></tr> <tr><td>X0.4</td><td>X0.5</td></tr> <tr><td>X0.6</td><td>X0.7</td></tr> <tr><td>X0.8</td><td>X0.9</td></tr> <tr><td>X0.10</td><td>X0.11</td></tr> <tr><td>X0.12</td><td>X0.13</td></tr> <tr><td>X0.14</td><td>X0.15</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td></tr> <tr><td>X1.0</td><td>X1.1</td></tr> <tr><td>X1.2</td><td>X1.3</td></tr> <tr><td>X1.4</td><td>X1.5</td></tr> <tr><td>X1.6</td><td>X1.7</td></tr> <tr><td>X1.8</td><td>X1.9</td></tr> <tr><td>X1.10</td><td>X1.11</td></tr> <tr><td>X1.12</td><td>X1.13</td></tr> <tr><td>X1.14</td><td>X1.15</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td></tr> </tbody> </table>	X0.0	X0.1	X0.2	X0.3	X0.4	X0.5	X0.6	X0.7	X0.8	X0.9	X0.10	X0.11	X0.12	X0.13	X0.14	X0.15	S/S	S/S			X1.0	X1.1	X1.2	X1.3	X1.4	X1.5	X1.6	X1.7	X1.8	X1.9	X1.10	X1.11	X1.12	X1.13	X1.14	X1.15	S/S	S/S			<table border="1"> <tbody> <tr><td></td><td></td><td>X2.0</td><td>X2.1</td></tr> <tr><td>S/S</td><td>S/S</td><td>X2.2</td><td>X2.3</td></tr> <tr><td>X1.15</td><td>X1.14</td><td>X2.4</td><td>X2.5</td></tr> <tr><td>X1.13</td><td>X1.12</td><td>X2.6</td><td>X2.7</td></tr> <tr><td>X1.11</td><td>X1.10</td><td>X2.8</td><td>X2.9</td></tr> <tr><td>X1.9</td><td>X1.8</td><td>X2.10</td><td>X2.11</td></tr> <tr><td>X1.7</td><td>X1.6</td><td>X2.12</td><td>X2.13</td></tr> <tr><td>X1.5</td><td>X1.4</td><td>X2.14</td><td>X2.15</td></tr> <tr><td>X1.3</td><td>X1.2</td><td>S/S</td><td>S/S</td></tr> <tr><td>X1.1</td><td>X1.0</td><td></td><td></td></tr> <tr><td></td><td></td><td>X3.0</td><td>X3.1</td></tr> <tr><td>S/S</td><td>S/S</td><td>X3.2</td><td>X3.3</td></tr> <tr><td>X0.15</td><td>X0.14</td><td>X3.4</td><td>X3.5</td></tr> <tr><td>X0.13</td><td>X0.12</td><td>X3.6</td><td>X3.7</td></tr> <tr><td>X0.11</td><td>X0.10</td><td>X3.8</td><td>X3.9</td></tr> <tr><td>X0.9</td><td>X0.8</td><td>X3.10</td><td>X3.11</td></tr> <tr><td>X0.7</td><td>X0.6</td><td>X3.12</td><td>X3.13</td></tr> <tr><td>X0.5</td><td>X0.4</td><td>X3.14</td><td>X3.15</td></tr> <tr><td>X0.3</td><td>X0.2</td><td>S/S</td><td>S/S</td></tr> <tr><td>X0.1</td><td>X0.0</td><td></td><td></td></tr> </tbody> </table>			X2.0	X2.1	S/S	S/S	X2.2	X2.3	X1.15	X1.14	X2.4	X2.5	X1.13	X1.12	X2.6	X2.7	X1.11	X1.10	X2.8	X2.9	X1.9	X1.8	X2.10	X2.11	X1.7	X1.6	X2.12	X2.13	X1.5	X1.4	X2.14	X2.15	X1.3	X1.2	S/S	S/S	X1.1	X1.0					X3.0	X3.1	S/S	S/S	X3.2	X3.3	X0.15	X0.14	X3.4	X3.5	X0.13	X0.12	X3.6	X3.7	X0.11	X0.10	X3.8	X3.9	X0.9	X0.8	X3.10	X3.11	X0.7	X0.6	X3.12	X3.13	X0.5	X0.4	X3.14	X3.15	X0.3	X0.2	S/S	S/S	X0.1	X0.0		
X0.0	X0.1																																																																																																																									
X0.2	X0.3																																																																																																																									
X0.4	X0.5																																																																																																																									
X0.6	X0.7																																																																																																																									
X0.8	X0.9																																																																																																																									
X0.10	X0.11																																																																																																																									
X0.12	X0.13																																																																																																																									
X0.14	X0.15																																																																																																																									
S/S	S/S																																																																																																																									
X1.0	X1.1																																																																																																																									
X1.2	X1.3																																																																																																																									
X1.4	X1.5																																																																																																																									
X1.6	X1.7																																																																																																																									
X1.8	X1.9																																																																																																																									
X1.10	X1.11																																																																																																																									
X1.12	X1.13																																																																																																																									
X1.14	X1.15																																																																																																																									
S/S	S/S																																																																																																																									
		X2.0	X2.1																																																																																																																							
S/S	S/S	X2.2	X2.3																																																																																																																							
X1.15	X1.14	X2.4	X2.5																																																																																																																							
X1.13	X1.12	X2.6	X2.7																																																																																																																							
X1.11	X1.10	X2.8	X2.9																																																																																																																							
X1.9	X1.8	X2.10	X2.11																																																																																																																							
X1.7	X1.6	X2.12	X2.13																																																																																																																							
X1.5	X1.4	X2.14	X2.15																																																																																																																							
X1.3	X1.2	S/S	S/S																																																																																																																							
X1.1	X1.0																																																																																																																									
		X3.0	X3.1																																																																																																																							
S/S	S/S	X3.2	X3.3																																																																																																																							
X0.15	X0.14	X3.4	X3.5																																																																																																																							
X0.13	X0.12	X3.6	X3.7																																																																																																																							
X0.11	X0.10	X3.8	X3.9																																																																																																																							
X0.9	X0.8	X3.10	X3.11																																																																																																																							
X0.7	X0.6	X3.12	X3.13																																																																																																																							
X0.5	X0.4	X3.14	X3.15																																																																																																																							
X0.3	X0.2	S/S	S/S																																																																																																																							
X0.1	X0.0																																																																																																																									

  Chapter 2 Extension Cables for I/O Modules

AH32AN02T-5C/AH32AN02P-5C		AH64AN02T-5C/AH64AN02P-5C																																																																																																																											
 12~24VDC 0.1A		<table border="1"> <tr><td>Y0.0</td><td>Y0.1</td><td>Y2.0</td><td>Y2.1</td></tr> <tr><td>Y0.2</td><td>Y0.3</td><td>Y2.2</td><td>Y2.3</td></tr> <tr><td>Y0.4</td><td>Y0.5</td><td>Y2.4</td><td>Y2.5</td></tr> <tr><td>Y0.6</td><td>Y0.7</td><td>Y2.6</td><td>Y2.7</td></tr> <tr><td>Y0.8</td><td>Y0.9</td><td>Y2.8</td><td>Y2.9</td></tr> <tr><td>Y0.10</td><td>Y0.11</td><td>Y2.10</td><td>Y2.11</td></tr> <tr><td>Y0.12</td><td>Y0.13</td><td>Y2.12</td><td>Y2.13</td></tr> <tr><td>Y0.14</td><td>Y0.15</td><td>Y2.14</td><td>Y2.15</td></tr> <tr><td>ZP</td><td>ZP</td><td>ZP</td><td>ZP</td></tr> <tr><td>UP</td><td>UP</td><td>UP</td><td>UP</td></tr> <tr><td>Y1.0</td><td>Y1.1</td><td>Y3.0</td><td>Y3.1</td></tr> <tr><td>Y1.2</td><td>Y1.3</td><td>Y3.2</td><td>Y3.3</td></tr> <tr><td>Y1.4</td><td>Y1.5</td><td>Y3.4</td><td>Y3.5</td></tr> <tr><td>Y1.6</td><td>Y1.7</td><td>Y3.6</td><td>Y3.7</td></tr> <tr><td>Y1.8</td><td>Y1.9</td><td>Y3.8</td><td>Y3.9</td></tr> <tr><td>Y1.10</td><td>Y1.11</td><td>Y3.10</td><td>Y3.11</td></tr> <tr><td>Y1.12</td><td>Y1.13</td><td>Y3.12</td><td>Y3.13</td></tr> <tr><td>Y1.14</td><td>Y1.15</td><td>Y3.14</td><td>Y3.15</td></tr> <tr><td>ZP</td><td>ZP</td><td>ZP</td><td>ZP</td></tr> <tr><td>UP</td><td>UP</td><td>UP</td><td>UP</td></tr> </table>				Y0.0	Y0.1	Y2.0	Y2.1	Y0.2	Y0.3	Y2.2	Y2.3	Y0.4	Y0.5	Y2.4	Y2.5	Y0.6	Y0.7	Y2.6	Y2.7	Y0.8	Y0.9	Y2.8	Y2.9	Y0.10	Y0.11	Y2.10	Y2.11	Y0.12	Y0.13	Y2.12	Y2.13	Y0.14	Y0.15	Y2.14	Y2.15	ZP	ZP	ZP	ZP	UP	UP	UP	UP	Y1.0	Y1.1	Y3.0	Y3.1	Y1.2	Y1.3	Y3.2	Y3.3	Y1.4	Y1.5	Y3.4	Y3.5	Y1.6	Y1.7	Y3.6	Y3.7	Y1.8	Y1.9	Y3.8	Y3.9	Y1.10	Y1.11	Y3.10	Y3.11	Y1.12	Y1.13	Y3.12	Y3.13	Y1.14	Y1.15	Y3.14	Y3.15	ZP	ZP	ZP	ZP	UP	UP	UP	UP																																								
Y0.0	Y0.1	Y2.0	Y2.1																																																																																																																										
Y0.2	Y0.3	Y2.2	Y2.3																																																																																																																										
Y0.4	Y0.5	Y2.4	Y2.5																																																																																																																										
Y0.6	Y0.7	Y2.6	Y2.7																																																																																																																										
Y0.8	Y0.9	Y2.8	Y2.9																																																																																																																										
Y0.10	Y0.11	Y2.10	Y2.11																																																																																																																										
Y0.12	Y0.13	Y2.12	Y2.13																																																																																																																										
Y0.14	Y0.15	Y2.14	Y2.15																																																																																																																										
ZP	ZP	ZP	ZP																																																																																																																										
UP	UP	UP	UP																																																																																																																										
Y1.0	Y1.1	Y3.0	Y3.1																																																																																																																										
Y1.2	Y1.3	Y3.2	Y3.3																																																																																																																										
Y1.4	Y1.5	Y3.4	Y3.5																																																																																																																										
Y1.6	Y1.7	Y3.6	Y3.7																																																																																																																										
Y1.8	Y1.9	Y3.8	Y3.9																																																																																																																										
Y1.10	Y1.11	Y3.10	Y3.11																																																																																																																										
Y1.12	Y1.13	Y3.12	Y3.13																																																																																																																										
Y1.14	Y1.15	Y3.14	Y3.15																																																																																																																										
ZP	ZP	ZP	ZP																																																																																																																										
UP	UP	UP	UP																																																																																																																										
DVP32SM11N  12~24VDC 0.1A		DVP32SN11TN  12~24VDC 0.1A																																																																																																																											
<table border="1"> <tr><td>X0</td><td>X1</td><td>Y0</td><td>Y1</td></tr> <tr><td>X2</td><td>X3</td><td>Y2</td><td>Y3</td></tr> <tr><td>X4</td><td>X5</td><td>Y4</td><td>Y5</td></tr> <tr><td>X6</td><td>X7</td><td>Y6</td><td>Y7</td></tr> <tr><td>X10</td><td>X11</td><td>Y10</td><td>Y11</td></tr> <tr><td>X12</td><td>X13</td><td>Y12</td><td>Y13</td></tr> <tr><td>X14</td><td>X15</td><td>Y14</td><td>Y15</td></tr> <tr><td>X16</td><td>X17</td><td>Y16</td><td>Y17</td></tr> <tr><td>S/S</td><td>S/S</td><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td><td></td><td></td></tr> <tr><td>X20</td><td>X21</td><td>Y20</td><td>Y21</td></tr> <tr><td>X22</td><td>X23</td><td>Y22</td><td>Y23</td></tr> <tr><td>X24</td><td>X25</td><td>Y24</td><td>Y25</td></tr> <tr><td>X26</td><td>X27</td><td>Y26</td><td>Y27</td></tr> <tr><td>X30</td><td>X31</td><td>Y30</td><td>Y31</td></tr> <tr><td>X32</td><td>X33</td><td>Y32</td><td>Y33</td></tr> <tr><td>X34</td><td>X35</td><td>Y34</td><td>Y35</td></tr> <tr><td>X36</td><td>X37</td><td>Y36</td><td>Y37</td></tr> <tr><td>S/S</td><td>S/S</td><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td><td></td><td></td></tr> </table>		X0	X1	Y0	Y1	X2	X3	Y2	Y3	X4	X5	Y4	Y5	X6	X7	Y6	Y7	X10	X11	Y10	Y11	X12	X13	Y12	Y13	X14	X15	Y14	Y15	X16	X17	Y16	Y17	S/S	S/S	S/S	S/S					X20	X21	Y20	Y21	X22	X23	Y22	Y23	X24	X25	Y24	Y25	X26	X27	Y26	Y27	X30	X31	Y30	Y31	X32	X33	Y32	Y33	X34	X35	Y34	Y35	X36	X37	Y36	Y37	S/S	S/S	S/S	S/S					<table border="1"> <tr><td>Y0</td><td>Y1</td></tr> <tr><td>Y2</td><td>Y3</td></tr> <tr><td>Y4</td><td>Y5</td></tr> <tr><td>Y6</td><td>Y7</td></tr> <tr><td>Y10</td><td>Y11</td></tr> <tr><td>Y12</td><td>Y13</td></tr> <tr><td>Y14</td><td>Y15</td></tr> <tr><td>Y16</td><td>Y17</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td></tr> <tr><td>Y20</td><td>Y21</td></tr> <tr><td>Y22</td><td>Y23</td></tr> <tr><td>Y24</td><td>Y25</td></tr> <tr><td>Y26</td><td>Y27</td></tr> <tr><td>Y30</td><td>Y31</td></tr> <tr><td>Y32</td><td>Y33</td></tr> <tr><td>Y34</td><td>Y35</td></tr> <tr><td>Y36</td><td>Y37</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td></tr> </table>				Y0	Y1	Y2	Y3	Y4	Y5	Y6	Y7	Y10	Y11	Y12	Y13	Y14	Y15	Y16	Y17	S/S	S/S			Y20	Y21	Y22	Y23	Y24	Y25	Y26	Y27	Y30	Y31	Y32	Y33	Y34	Y35	Y36	Y37	S/S	S/S		
X0	X1	Y0	Y1																																																																																																																										
X2	X3	Y2	Y3																																																																																																																										
X4	X5	Y4	Y5																																																																																																																										
X6	X7	Y6	Y7																																																																																																																										
X10	X11	Y10	Y11																																																																																																																										
X12	X13	Y12	Y13																																																																																																																										
X14	X15	Y14	Y15																																																																																																																										
X16	X17	Y16	Y17																																																																																																																										
S/S	S/S	S/S	S/S																																																																																																																										
X20	X21	Y20	Y21																																																																																																																										
X22	X23	Y22	Y23																																																																																																																										
X24	X25	Y24	Y25																																																																																																																										
X26	X27	Y26	Y27																																																																																																																										
X30	X31	Y30	Y31																																																																																																																										
X32	X33	Y32	Y33																																																																																																																										
X34	X35	Y34	Y35																																																																																																																										
X36	X37	Y36	Y37																																																																																																																										
S/S	S/S	S/S	S/S																																																																																																																										
Y0	Y1																																																																																																																												
Y2	Y3																																																																																																																												
Y4	Y5																																																																																																																												
Y6	Y7																																																																																																																												
Y10	Y11																																																																																																																												
Y12	Y13																																																																																																																												
Y14	Y15																																																																																																																												
Y16	Y17																																																																																																																												
S/S	S/S																																																																																																																												
Y20	Y21																																																																																																																												
Y22	Y23																																																																																																																												
Y24	Y25																																																																																																																												
Y26	Y27																																																																																																																												
Y30	Y31																																																																																																																												
Y32	Y33																																																																																																																												
Y34	Y35																																																																																																																												
Y36	Y37																																																																																																																												
S/S	S/S																																																																																																																												

Chapter 2 Extension Cables for I/O Modules

AS32AM10N-A		AS32AN02T-A	
S/S	S/S	C0	C0
X1.15	X1.14	Y1.15	Y1.14
X1.13	X1.12	Y1.13	Y1.12
X1.11	X1.10	Y1.11	Y1.10
X1.9	X1.8	Y1.9	Y1.8
X1.7	X1.6	Y1.7	Y1.6
X1.5	X1.4	Y1.5	Y1.4
X1.3	X1.2	Y1.3	Y1.2
X1.1	X1.0	Y1.1	Y1.0
S/S	S/S	C0	C0
X0.15	X0.14	Y0.15	Y0.14
X0.13	X0.12	Y0.13	Y0.12
X0.11	X0.10	Y0.11	Y0.10
X0.9	X0.8	Y0.9	Y0.8
X0.7	X0.6	Y0.7	Y0.6
X0.5	X0.4	Y0.5	Y0.4
X0.3	X0.2	Y0.3	Y0.2
X0.1	X0.0	Y0.1	Y0.0

AS64AM10N-A		AS64AN02T-A	
-	-	X2.0	X2.1
S/S	S/S	X2.2	X2.3
X1.15	X1.14	X2.4	X2.5
X1.13	X1.12	X2.6	X2.7
X1.11	X1.10	X2.8	X2.9
X1.9	X1.8	X2.10	X2.11
X1.7	X1.6	X2.12	X2.13
X1.5	X1.4	X2.14	X2.15
X1.3	X1.2	S/S	S/S
X1.1	X1.0	-	-
-	-	X3.0	X3.1
S/S	S/S	X3.2	X3.3
X0.15	X0.14	X3.4	X3.5
X0.13	X0.12	X3.6	X3.7
X0.11	X0.10	X3.8	X3.9
X0.9	X0.8	X3.10	X3.11
X0.7	X0.6	X3.12	X3.13
X0.5	X0.4	X3.14	X3.15
X0.3	X0.2	S/S	S/S
X0.1	X0.0	-	-

Chapter 2 Extension Cables for I/O Modules

Figure 2 UB-10-ID32A




↑	X0	X2	X4	X6	X10	X12	X14	X16	X20	X22	X24	X26	X30	X32	X34	X36	S/S	S/S
↓	X1	X3	X5	X7	X11	X13	X15	X17	X21	X23	X25	X27	X31	X33	X35	X37	S/S	S/S

Figure 3 UB-10-OT32A



↑	Y0	Y2	Y4	Y6	Y10	Y12	Y14	Y16	Y20	Y22	Y24	Y26	Y30	Y32	Y34	Y36	+24V	+24V
↓	Y1	Y3	Y5	Y7	Y11	Y13	Y15	Y17	Y21	Y23	Y25	Y27	Y31	Y33	Y35	Y37	GND	GND




Figure 4A UC-ET010-24C (1 m) | IDC 40 ↔ IDC 20x2

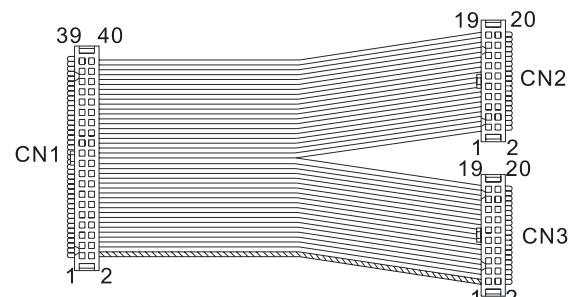

Chapter 2 Extension Cables for I/O Modules

Figure 4B	UC-ET010-24D (1 m) UC-ET020-24D (2 m) UC-ET030-24D (3 m)	IDC 40 ↔ IDC 20x2 (shield)																																																																																
2																																																																																		
	AH32AN02T-5C/AH32AN02P-5C																																																																																	
	<table border="1"> <tr><td>Y0.0</td><td>Y0.1</td></tr> <tr><td>Y0.2</td><td>Y0.3</td></tr> <tr><td>Y0.4</td><td>Y0.5</td></tr> <tr><td>Y0.6</td><td>Y0.7</td></tr> <tr><td>Y0.8</td><td>Y0.9</td></tr> <tr><td>Y0.10</td><td>Y0.11</td></tr> <tr><td>Y0.12</td><td>Y0.13</td></tr> <tr><td>Y0.14</td><td>Y0.15</td></tr> <tr><td>ZP</td><td>ZP</td></tr> <tr><td>UP</td><td>UP</td></tr> <tr><td>Y1.0</td><td>Y1.1</td></tr> <tr><td>Y1.2</td><td>Y1.3</td></tr> <tr><td>Y1.4</td><td>Y1.5</td></tr> <tr><td>Y1.6</td><td>Y1.7</td></tr> <tr><td>Y1.8</td><td>Y1.9</td></tr> <tr><td>Y1.10</td><td>Y1.11</td></tr> <tr><td>Y1.12</td><td>Y1.13</td></tr> <tr><td>Y1.14</td><td>Y1.15</td></tr> <tr><td>ZP</td><td>ZP</td></tr> <tr><td>UP</td><td>UP</td></tr> </table> <p>12~24VDC 0.1A</p>	Y0.0	Y0.1	Y0.2	Y0.3	Y0.4	Y0.5	Y0.6	Y0.7	Y0.8	Y0.9	Y0.10	Y0.11	Y0.12	Y0.13	Y0.14	Y0.15	ZP	ZP	UP	UP	Y1.0	Y1.1	Y1.2	Y1.3	Y1.4	Y1.5	Y1.6	Y1.7	Y1.8	Y1.9	Y1.10	Y1.11	Y1.12	Y1.13	Y1.14	Y1.15	ZP	ZP	UP	UP	AH64AN02T-5C/AH64AN02P-5C																																								
Y0.0	Y0.1																																																																																	
Y0.2	Y0.3																																																																																	
Y0.4	Y0.5																																																																																	
Y0.6	Y0.7																																																																																	
Y0.8	Y0.9																																																																																	
Y0.10	Y0.11																																																																																	
Y0.12	Y0.13																																																																																	
Y0.14	Y0.15																																																																																	
ZP	ZP																																																																																	
UP	UP																																																																																	
Y1.0	Y1.1																																																																																	
Y1.2	Y1.3																																																																																	
Y1.4	Y1.5																																																																																	
Y1.6	Y1.7																																																																																	
Y1.8	Y1.9																																																																																	
Y1.10	Y1.11																																																																																	
Y1.12	Y1.13																																																																																	
Y1.14	Y1.15																																																																																	
ZP	ZP																																																																																	
UP	UP																																																																																	
	<table border="1"> <tr><td>UP</td><td>UP</td><td>Y2.0</td><td>Y2.1</td></tr> <tr><td>ZP</td><td>ZP</td><td>Y2.2</td><td>Y2.3</td></tr> <tr><td>Y1.15</td><td>Y1.14</td><td>Y2.4</td><td>Y2.5</td></tr> <tr><td>Y1.13</td><td>Y1.12</td><td>Y2.6</td><td>Y2.7</td></tr> <tr><td>Y1.11</td><td>Y1.10</td><td>Y2.8</td><td>Y2.9</td></tr> <tr><td>Y1.9</td><td>Y1.8</td><td>Y2.10</td><td>Y2.11</td></tr> <tr><td>Y1.7</td><td>Y1.6</td><td>Y2.12</td><td>Y2.13</td></tr> <tr><td>Y1.5</td><td>Y1.4</td><td>Y2.14</td><td>Y2.15</td></tr> <tr><td>Y1.3</td><td>Y1.2</td><td>ZP</td><td>ZP</td></tr> <tr><td>Y1.1</td><td>Y1.0</td><td>UP</td><td>UP</td></tr> <tr><td>UP</td><td>UP</td><td>Y3.0</td><td>Y3.1</td></tr> <tr><td>ZP</td><td>ZP</td><td>Y3.2</td><td>Y3.3</td></tr> <tr><td>Y0.15</td><td>Y0.14</td><td>Y3.4</td><td>Y3.5</td></tr> <tr><td>Y0.13</td><td>Y0.12</td><td>Y3.6</td><td>Y3.7</td></tr> <tr><td>Y0.11</td><td>Y0.10</td><td>Y3.8</td><td>Y3.9</td></tr> <tr><td>Y0.9</td><td>Y0.8</td><td>Y3.10</td><td>Y3.11</td></tr> <tr><td>Y0.7</td><td>Y0.6</td><td>Y3.12</td><td>Y3.13</td></tr> <tr><td>Y0.5</td><td>Y0.4</td><td>Y3.14</td><td>Y3.15</td></tr> <tr><td>Y0.3</td><td>Y0.2</td><td>ZP</td><td>ZP</td></tr> <tr><td>Y0.1</td><td>Y0.0</td><td>UP</td><td>UP</td></tr> </table> <p>24VDC 3.2mA</p>	UP	UP	Y2.0	Y2.1	ZP	ZP	Y2.2	Y2.3	Y1.15	Y1.14	Y2.4	Y2.5	Y1.13	Y1.12	Y2.6	Y2.7	Y1.11	Y1.10	Y2.8	Y2.9	Y1.9	Y1.8	Y2.10	Y2.11	Y1.7	Y1.6	Y2.12	Y2.13	Y1.5	Y1.4	Y2.14	Y2.15	Y1.3	Y1.2	ZP	ZP	Y1.1	Y1.0	UP	UP	UP	UP	Y3.0	Y3.1	ZP	ZP	Y3.2	Y3.3	Y0.15	Y0.14	Y3.4	Y3.5	Y0.13	Y0.12	Y3.6	Y3.7	Y0.11	Y0.10	Y3.8	Y3.9	Y0.9	Y0.8	Y3.10	Y3.11	Y0.7	Y0.6	Y3.12	Y3.13	Y0.5	Y0.4	Y3.14	Y3.15	Y0.3	Y0.2	ZP	ZP	Y0.1	Y0.0	UP	UP	
UP	UP	Y2.0	Y2.1																																																																															
ZP	ZP	Y2.2	Y2.3																																																																															
Y1.15	Y1.14	Y2.4	Y2.5																																																																															
Y1.13	Y1.12	Y2.6	Y2.7																																																																															
Y1.11	Y1.10	Y2.8	Y2.9																																																																															
Y1.9	Y1.8	Y2.10	Y2.11																																																																															
Y1.7	Y1.6	Y2.12	Y2.13																																																																															
Y1.5	Y1.4	Y2.14	Y2.15																																																																															
Y1.3	Y1.2	ZP	ZP																																																																															
Y1.1	Y1.0	UP	UP																																																																															
UP	UP	Y3.0	Y3.1																																																																															
ZP	ZP	Y3.2	Y3.3																																																																															
Y0.15	Y0.14	Y3.4	Y3.5																																																																															
Y0.13	Y0.12	Y3.6	Y3.7																																																																															
Y0.11	Y0.10	Y3.8	Y3.9																																																																															
Y0.9	Y0.8	Y3.10	Y3.11																																																																															
Y0.7	Y0.6	Y3.12	Y3.13																																																																															
Y0.5	Y0.4	Y3.14	Y3.15																																																																															
Y0.3	Y0.2	ZP	ZP																																																																															
Y0.1	Y0.0	UP	UP																																																																															

   Chapter 2 Extension Cables for I/O Modules


DVP32SN11TN		AS32AN02T-A																																																																																	
	<table border="1"> <tr><td>Y0</td><td>Y1</td></tr> <tr><td>Y2</td><td>Y3</td></tr> <tr><td>Y4</td><td>Y5</td></tr> <tr><td>Y6</td><td>Y7</td></tr> <tr><td>Y10</td><td>Y11</td></tr> <tr><td>Y12</td><td>Y13</td></tr> <tr><td>Y14</td><td>Y15</td></tr> <tr><td>Y16</td><td>Y17</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td></tr> <tr><td>Y20</td><td>Y21</td></tr> <tr><td>Y22</td><td>Y23</td></tr> <tr><td>Y24</td><td>Y25</td></tr> <tr><td>Y26</td><td>Y27</td></tr> <tr><td>Y30</td><td>Y31</td></tr> <tr><td>Y32</td><td>Y33</td></tr> <tr><td>Y34</td><td>Y35</td></tr> <tr><td>Y36</td><td>Y37</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td></td><td></td></tr> </table>	Y0	Y1	Y2	Y3	Y4	Y5	Y6	Y7	Y10	Y11	Y12	Y13	Y14	Y15	Y16	Y17	S/S	S/S			Y20	Y21	Y22	Y23	Y24	Y25	Y26	Y27	Y30	Y31	Y32	Y33	Y34	Y35	Y36	Y37	S/S	S/S				<table border="1"> <tr><td>C0</td><td>C0</td></tr> <tr><td>Y1.15</td><td>Y1.14</td></tr> <tr><td>Y1.13</td><td>Y1.12</td></tr> <tr><td>Y1.11</td><td>Y1.10</td></tr> <tr><td>Y1.9</td><td>Y1.8</td></tr> <tr><td>Y1.7</td><td>Y1.6</td></tr> <tr><td>Y1.5</td><td>Y1.4</td></tr> <tr><td>Y1.3</td><td>Y1.2</td></tr> <tr><td>Y1.1</td><td>Y1.0</td></tr> <tr><td></td><td></td></tr> <tr><td>C0</td><td>C0</td></tr> <tr><td>Y0.15</td><td>Y0.14</td></tr> <tr><td>Y0.13</td><td>Y0.12</td></tr> <tr><td>Y0.11</td><td>Y0.10</td></tr> <tr><td>Y0.9</td><td>Y0.8</td></tr> <tr><td>Y0.7</td><td>Y0.6</td></tr> <tr><td>Y0.5</td><td>Y0.4</td></tr> <tr><td>Y0.3</td><td>Y0.2</td></tr> <tr><td>Y0.1</td><td>Y0.0</td></tr> </table>	C0	C0	Y1.15	Y1.14	Y1.13	Y1.12	Y1.11	Y1.10	Y1.9	Y1.8	Y1.7	Y1.6	Y1.5	Y1.4	Y1.3	Y1.2	Y1.1	Y1.0			C0	C0	Y0.15	Y0.14	Y0.13	Y0.12	Y0.11	Y0.10	Y0.9	Y0.8	Y0.7	Y0.6	Y0.5	Y0.4	Y0.3	Y0.2	Y0.1	Y0.0		
Y0	Y1																																																																																		
Y2	Y3																																																																																		
Y4	Y5																																																																																		
Y6	Y7																																																																																		
Y10	Y11																																																																																		
Y12	Y13																																																																																		
Y14	Y15																																																																																		
Y16	Y17																																																																																		
S/S	S/S																																																																																		
Y20	Y21																																																																																		
Y22	Y23																																																																																		
Y24	Y25																																																																																		
Y26	Y27																																																																																		
Y30	Y31																																																																																		
Y32	Y33																																																																																		
Y34	Y35																																																																																		
Y36	Y37																																																																																		
S/S	S/S																																																																																		
C0	C0																																																																																		
Y1.15	Y1.14																																																																																		
Y1.13	Y1.12																																																																																		
Y1.11	Y1.10																																																																																		
Y1.9	Y1.8																																																																																		
Y1.7	Y1.6																																																																																		
Y1.5	Y1.4																																																																																		
Y1.3	Y1.2																																																																																		
Y1.1	Y1.0																																																																																		
C0	C0																																																																																		
Y0.15	Y0.14																																																																																		
Y0.13	Y0.12																																																																																		
Y0.11	Y0.10																																																																																		
Y0.9	Y0.8																																																																																		
Y0.7	Y0.6																																																																																		
Y0.5	Y0.4																																																																																		
Y0.3	Y0.2																																																																																		
Y0.1	Y0.0																																																																																		
AS332T-A		AS332P-A																																																																																	
	<table border="1"> <tr><td>-</td><td>-</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td>X0.15</td><td>X0.14</td></tr> <tr><td>X0.13</td><td>X0.12</td></tr> <tr><td>X0.11</td><td>X0.10</td></tr> <tr><td>X0.9</td><td>X0.8</td></tr> <tr><td>X0.7</td><td>X0.6</td></tr> <tr><td>X0.5</td><td>X0.4</td></tr> <tr><td>X0.3</td><td>X0.2</td></tr> <tr><td>X0.1</td><td>X0.0</td></tr> <tr><td>-</td><td>-</td></tr> <tr><td>C0</td><td>C0</td></tr> <tr><td>Y0.15</td><td>Y0.14</td></tr> <tr><td>Y0.13</td><td>Y0.12</td></tr> <tr><td>Y0.11</td><td>Y0.10</td></tr> <tr><td>Y0.9</td><td>Y0.8</td></tr> <tr><td>Y0.7</td><td>Y0.6</td></tr> <tr><td>Y0.5</td><td>Y0.4</td></tr> <tr><td>Y0.3</td><td>Y0.2</td></tr> <tr><td>Y0.1</td><td>Y0.0</td></tr> </table>	-	-	S/S	S/S	X0.15	X0.14	X0.13	X0.12	X0.11	X0.10	X0.9	X0.8	X0.7	X0.6	X0.5	X0.4	X0.3	X0.2	X0.1	X0.0	-	-	C0	C0	Y0.15	Y0.14	Y0.13	Y0.12	Y0.11	Y0.10	Y0.9	Y0.8	Y0.7	Y0.6	Y0.5	Y0.4	Y0.3	Y0.2	Y0.1	Y0.0		<table border="1"> <tr><td>-</td><td>-</td></tr> <tr><td>S/S</td><td>S/S</td></tr> <tr><td>X0.15</td><td>X0.14</td></tr> <tr><td>X0.13</td><td>X0.12</td></tr> <tr><td>X0.11</td><td>X0.10</td></tr> <tr><td>X0.9</td><td>X0.8</td></tr> <tr><td>X0.7</td><td>X0.6</td></tr> <tr><td>X0.5</td><td>X0.4</td></tr> <tr><td>X0.3</td><td>X0.2</td></tr> <tr><td>X0.1</td><td>X0.0</td></tr> <tr><td>C0</td><td>C0</td></tr> <tr><td>-</td><td>-</td></tr> <tr><td>Y0.15</td><td>Y0.14</td></tr> <tr><td>Y0.13</td><td>Y0.12</td></tr> <tr><td>Y0.11</td><td>Y0.10</td></tr> <tr><td>Y0.9</td><td>Y0.8</td></tr> <tr><td>Y0.7</td><td>Y0.6</td></tr> <tr><td>Y0.5</td><td>Y0.4</td></tr> <tr><td>Y0.3</td><td>Y0.2</td></tr> <tr><td>Y0.1</td><td>Y0.0</td></tr> </table>	-	-	S/S	S/S	X0.15	X0.14	X0.13	X0.12	X0.11	X0.10	X0.9	X0.8	X0.7	X0.6	X0.5	X0.4	X0.3	X0.2	X0.1	X0.0	C0	C0	-	-	Y0.15	Y0.14	Y0.13	Y0.12	Y0.11	Y0.10	Y0.9	Y0.8	Y0.7	Y0.6	Y0.5	Y0.4	Y0.3	Y0.2	Y0.1	Y0.0
-	-																																																																																		
S/S	S/S																																																																																		
X0.15	X0.14																																																																																		
X0.13	X0.12																																																																																		
X0.11	X0.10																																																																																		
X0.9	X0.8																																																																																		
X0.7	X0.6																																																																																		
X0.5	X0.4																																																																																		
X0.3	X0.2																																																																																		
X0.1	X0.0																																																																																		
-	-																																																																																		
C0	C0																																																																																		
Y0.15	Y0.14																																																																																		
Y0.13	Y0.12																																																																																		
Y0.11	Y0.10																																																																																		
Y0.9	Y0.8																																																																																		
Y0.7	Y0.6																																																																																		
Y0.5	Y0.4																																																																																		
Y0.3	Y0.2																																																																																		
Y0.1	Y0.0																																																																																		
-	-																																																																																		
S/S	S/S																																																																																		
X0.15	X0.14																																																																																		
X0.13	X0.12																																																																																		
X0.11	X0.10																																																																																		
X0.9	X0.8																																																																																		
X0.7	X0.6																																																																																		
X0.5	X0.4																																																																																		
X0.3	X0.2																																																																																		
X0.1	X0.0																																																																																		
C0	C0																																																																																		
-	-																																																																																		
Y0.15	Y0.14																																																																																		
Y0.13	Y0.12																																																																																		
Y0.11	Y0.10																																																																																		
Y0.9	Y0.8																																																																																		
Y0.7	Y0.6																																																																																		
Y0.5	Y0.4																																																																																		
Y0.3	Y0.2																																																																																		
Y0.1	Y0.0																																																																																		

Chapter 2 Extension Cables for I/O Modules


AS324MT-A	
S/S	S/S
X0.11	X0.10
X0.9	X0.8
X0.7	X0.6
X0.5	X0.4
SG0	SG0
X0.3-	X0.3+
X0.2-	X0.2+
X0.1-	X0.1+
X0.0-	X0.0+
C0	C0
Y0.11	Y0.10
Y0.9	Y0.8
Y0.7	Y0.6
Y0.5	Y0.4
SG1	SG1
Y0.3-	Y0.3+
Y0.2-	Y0.2+
Y0.1-	Y0.1+
Y0.0-	Y0.0+

2	Figure 5	UB-10-OR16A																	
C0	Y0	Y1	Y2	Y3	C1	Y4	Y5	Y6	Y7	C2	Y10	Y11	Y12	Y13	C3	Y14	Y15	GND	+24V

Chapter 2 Extension Cables for I/O Modules

 Figure 6	UC-ET010-33B (1 m)	Male DB37 connector ↔ Male DB37 connector																																																																												
																																																																														
	AH32AM10N-5B	AH32AN02T-5B/AH32AN02P-5B																																																																												
	<table border="1"><tr><td>X0.0</td><td>X0.1</td></tr><tr><td>X0.2</td><td>X0.3</td></tr><tr><td>X0.4</td><td>X0.5</td></tr><tr><td>X0.6</td><td>X0.7</td></tr><tr><td>X0.8</td><td>X0.9</td></tr><tr><td>X0.10</td><td>X0.11</td></tr><tr><td>X0.12</td><td>X0.13</td></tr><tr><td>X0.14</td><td>X0.15</td></tr><tr><td>S/S</td><td>S/S</td></tr><tr><td></td><td>X1.0</td></tr><tr><td>X1.1</td><td>X1.2</td></tr><tr><td>X1.3</td><td>X1.4</td></tr><tr><td>X1.5</td><td>X1.6</td></tr><tr><td>X1.7</td><td>X1.8</td></tr><tr><td>X1.9</td><td>X1.10</td></tr><tr><td>X1.11</td><td>X1.12</td></tr><tr><td>X1.13</td><td>X1.14</td></tr><tr><td>X1.15</td><td>S/S</td></tr><tr><td>S/S</td><td></td></tr></table>	X0.0	X0.1	X0.2	X0.3	X0.4	X0.5	X0.6	X0.7	X0.8	X0.9	X0.10	X0.11	X0.12	X0.13	X0.14	X0.15	S/S	S/S		X1.0	X1.1	X1.2	X1.3	X1.4	X1.5	X1.6	X1.7	X1.8	X1.9	X1.10	X1.11	X1.12	X1.13	X1.14	X1.15	S/S	S/S		<table border="1"><tr><td>X0.0</td><td>X0.1</td></tr><tr><td>X0.2</td><td>X0.3</td></tr><tr><td>X0.4</td><td>X0.5</td></tr><tr><td>X0.6</td><td>X0.7</td></tr><tr><td>X0.8</td><td>X0.9</td></tr><tr><td>X0.10</td><td>X0.11</td></tr><tr><td>X0.12</td><td>X0.13</td></tr><tr><td>X0.14</td><td>X0.15</td></tr><tr><td>ZP</td><td>ZP</td></tr><tr><td>UP</td><td>X1.0</td></tr><tr><td>X1.1</td><td>X1.2</td></tr><tr><td>X1.3</td><td>X1.4</td></tr><tr><td>X1.5</td><td>X1.6</td></tr><tr><td>X1.7</td><td>X1.8</td></tr><tr><td>X1.9</td><td>X1.10</td></tr><tr><td>X1.11</td><td>X1.12</td></tr><tr><td>X1.13</td><td>X1.14</td></tr><tr><td>X1.15</td><td>ZP</td></tr><tr><td>UP</td><td></td></tr></table>	X0.0	X0.1	X0.2	X0.3	X0.4	X0.5	X0.6	X0.7	X0.8	X0.9	X0.10	X0.11	X0.12	X0.13	X0.14	X0.15	ZP	ZP	UP	X1.0	X1.1	X1.2	X1.3	X1.4	X1.5	X1.6	X1.7	X1.8	X1.9	X1.10	X1.11	X1.12	X1.13	X1.14	X1.15	ZP	UP	
X0.0	X0.1																																																																													
X0.2	X0.3																																																																													
X0.4	X0.5																																																																													
X0.6	X0.7																																																																													
X0.8	X0.9																																																																													
X0.10	X0.11																																																																													
X0.12	X0.13																																																																													
X0.14	X0.15																																																																													
S/S	S/S																																																																													
	X1.0																																																																													
X1.1	X1.2																																																																													
X1.3	X1.4																																																																													
X1.5	X1.6																																																																													
X1.7	X1.8																																																																													
X1.9	X1.10																																																																													
X1.11	X1.12																																																																													
X1.13	X1.14																																																																													
X1.15	S/S																																																																													
S/S																																																																														
X0.0	X0.1																																																																													
X0.2	X0.3																																																																													
X0.4	X0.5																																																																													
X0.6	X0.7																																																																													
X0.8	X0.9																																																																													
X0.10	X0.11																																																																													
X0.12	X0.13																																																																													
X0.14	X0.15																																																																													
ZP	ZP																																																																													
UP	X1.0																																																																													
X1.1	X1.2																																																																													
X1.3	X1.4																																																																													
X1.5	X1.6																																																																													
X1.7	X1.8																																																																													
X1.9	X1.10																																																																													
X1.11	X1.12																																																																													
X1.13	X1.14																																																																													
X1.15	ZP																																																																													
UP																																																																														
Figure 7	UB-10-ID32B	 <table border="1"><tr><td>↑</td><td>X0</td><td>X2</td><td>X4</td><td>X6</td><td>X10</td><td>X12</td><td>X14</td><td>X16</td><td>X20</td><td>X22</td><td>X24</td><td>X26</td><td>X30</td><td>X32</td><td>X34</td><td>X36</td><td>S/S</td><td>S/S</td></tr><tr><td>↓</td><td>X1</td><td>X3</td><td>X5</td><td>X7</td><td>X11</td><td>X13</td><td>X15</td><td>X17</td><td>X21</td><td>X23</td><td>X25</td><td>X27</td><td>X31</td><td>X33</td><td>X35</td><td>X37</td><td>S/S</td><td>S/S</td></tr></table>	↑	X0	X2	X4	X6	X10	X12	X14	X16	X20	X22	X24	X26	X30	X32	X34	X36	S/S	S/S	↓	X1	X3	X5	X7	X11	X13	X15	X17	X21	X23	X25	X27	X31	X33	X35	X37	S/S	S/S																																						
↑	X0	X2	X4	X6	X10	X12	X14	X16	X20	X22	X24	X26	X30	X32	X34	X36	S/S	S/S																																																												
↓	X1	X3	X5	X7	X11	X13	X15	X17	X21	X23	X25	X27	X31	X33	X35	X37	S/S	S/S																																																												

Chapter 2 Extension Cables for I/O Modules

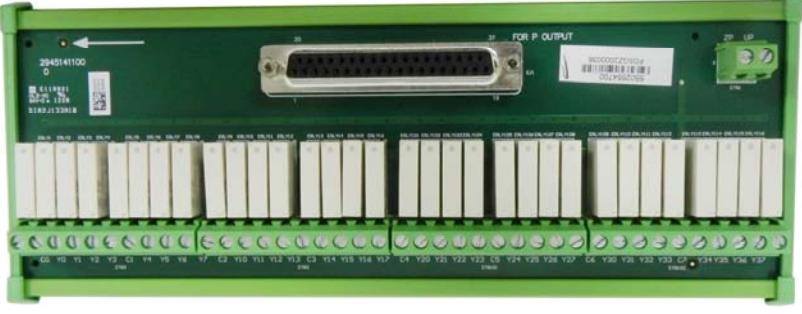Figure 8	UB-10-OR32A																																										
																																											
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Pin 1</td><td>C0</td><td>Y0</td><td>Y1</td><td>Y2</td><td>Y3</td><td>C1</td><td>Y4</td><td>Y5</td><td>Y6</td><td>Y7</td><td>C2</td><td>Y10</td><td>Y11</td><td>Y12</td><td>Y13</td><td>C3</td><td>Y14</td><td>Y15</td><td>Y16</td><td>Y17</td></tr> <tr> <td>Pin 21</td><td>C4</td><td>Y20</td><td>Y21</td><td>Y22</td><td>Y23</td><td>C5</td><td>Y24</td><td>Y25</td><td>Y26</td><td>Y27</td><td>C6</td><td>Y30</td><td>Y31</td><td>Y32</td><td>Y33</td><td>C7</td><td>Y34</td><td>Y35</td><td>Y36</td><td>Y37</td></tr> </table>		Pin 1	C0	Y0	Y1	Y2	Y3	C1	Y4	Y5	Y6	Y7	C2	Y10	Y11	Y12	Y13	C3	Y14	Y15	Y16	Y17	Pin 21	C4	Y20	Y21	Y22	Y23	C5	Y24	Y25	Y26	Y27	C6	Y30	Y31	Y32	Y33	C7	Y34	Y35	Y36	Y37
Pin 1	C0	Y0	Y1	Y2	Y3	C1	Y4	Y5	Y6	Y7	C2	Y10	Y11	Y12	Y13	C3	Y14	Y15	Y16	Y17																							
Pin 21	C4	Y20	Y21	Y22	Y23	C5	Y24	Y25	Y26	Y27	C6	Y30	Y31	Y32	Y33	C7	Y34	Y35	Y36	Y37																							
																																											
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>↑</td><td>Y0</td><td>Y2</td><td>Y4</td><td>Y6</td><td>Y10</td><td>Y12</td><td>Y14</td><td>Y16</td><td>Y20</td><td>Y22</td><td>Y24</td><td>Y26</td><td>Y30</td><td>Y32</td><td>Y34</td><td>Y36</td><td>UP</td><td>UP</td></tr> <tr> <td>↓</td><td>Y1</td><td>Y3</td><td>Y5</td><td>Y7</td><td>Y11</td><td>Y13</td><td>Y15</td><td>Y17</td><td>Y21</td><td>Y23</td><td>Y25</td><td>Y27</td><td>Y31</td><td>Y33</td><td>Y35</td><td>Y37</td><td>ZP</td><td>ZP</td></tr> </table>		↑	Y0	Y2	Y4	Y6	Y10	Y12	Y14	Y16	Y20	Y22	Y24	Y26	Y30	Y32	Y34	Y36	UP	UP	↓	Y1	Y3	Y5	Y7	Y11	Y13	Y15	Y17	Y21	Y23	Y25	Y27	Y31	Y33	Y35	Y37	ZP	ZP				
↑	Y0	Y2	Y4	Y6	Y10	Y12	Y14	Y16	Y20	Y22	Y24	Y26	Y30	Y32	Y34	Y36	UP	UP																									
↓	Y1	Y3	Y5	Y7	Y11	Y13	Y15	Y17	Y21	Y23	Y25	Y27	Y31	Y33	Y35	Y37	ZP	ZP																									
Figure 10	UB-10-OR32B																																										
																																											
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td>Pin 1</td><td>C0</td><td>Y0</td><td>Y1</td><td>Y2</td><td>Y3</td><td>C1</td><td>Y4</td><td>Y5</td><td>Y6</td><td>Y7</td><td>C2</td><td>Y10</td><td>Y11</td><td>Y12</td><td>Y13</td><td>C3</td><td>Y14</td><td>Y15</td><td>Y16</td><td>Y17</td></tr> <tr> <td>Pin 21</td><td>C4</td><td>Y20</td><td>Y21</td><td>Y22</td><td>Y23</td><td>C5</td><td>Y24</td><td>Y25</td><td>Y26</td><td>Y27</td><td>C6</td><td>Y30</td><td>Y31</td><td>Y32</td><td>Y33</td><td>C7</td><td>Y34</td><td>Y35</td><td>Y36</td><td>Y37</td></tr> </table>		Pin 1	C0	Y0	Y1	Y2	Y3	C1	Y4	Y5	Y6	Y7	C2	Y10	Y11	Y12	Y13	C3	Y14	Y15	Y16	Y17	Pin 21	C4	Y20	Y21	Y22	Y23	C5	Y24	Y25	Y26	Y27	C6	Y30	Y31	Y32	Y33	C7	Y34	Y35	Y36	Y37
Pin 1	C0	Y0	Y1	Y2	Y3	C1	Y4	Y5	Y6	Y7	C2	Y10	Y11	Y12	Y13	C3	Y14	Y15	Y16	Y17																							
Pin 21	C4	Y20	Y21	Y22	Y23	C5	Y24	Y25	Y26	Y27	C6	Y30	Y31	Y32	Y33	C7	Y34	Y35	Y36	Y37																							

Chapter 2 Extension Cables for I/O Modules

Figure 11 UB-10-OR16B




C0	Y0	Y1	Y2	Y3	C1	Y4	Y5	Y6	Y7	C2	Y10	Y11	Y12	Y13	C3	Y14	Y15	Y16	Y17	GND	+24V
----	----	----	----	----	----	----	----	----	----	----	-----	-----	-----	-----	----	-----	-----	-----	-----	-----	------

Figure 12 UC-ET010-13B (1M) Female MDR36 connector ↔ Female MDR36 connector




AH20MC-5A

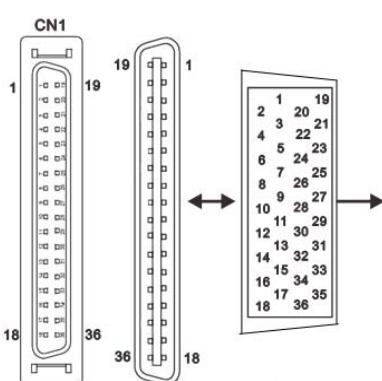

2	C2	1	C3	20	Y0.10	19	Y0.11
4	C0	3	C1	22	Y0.8	21	Y0.9
6	N/C	5	N/C	24	N/C	23	N/C
8	X0.15-	7	X0.3-	26	X0.15+	25	X0.3+
10	X0.2-	9	X0.14-	28	X0.2+	27	X0.14+
12	X0.12-	11	X0.13-	30	X0.12+	29	X0.13+
14	X0.11-	13	X0.1-	32	X0.11+	31	X0.1+
16	X0.0-	15	X0.10-	34	X0.0+	33	X0.10+
18	X0.8-	17	X0.9-	36	X0.8+	35	X0.9+

AH10EMC-5A

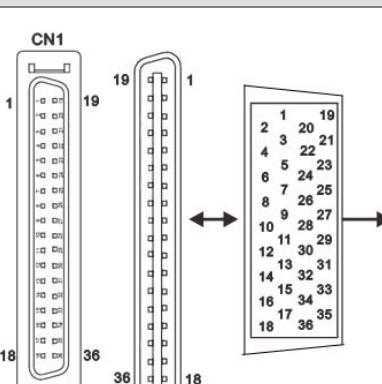

2	COM	1	COM	20	Y0.10	19	Y0.11
4	COM	3	COM	22	Y0.8	21	Y0.9
6	X1.5	5	S/S	24	X1.2	23	X1.3
8	X1.4	7	S/S	26	X1.0	25	X1.1
10	X0.3	9	S/S	28	X0.14	27	X0.15
12	X0.2	11	S/S	30	X0.12	29	X0.13
14	X0.11-	13	X0.1-	32	X0.11+	31	X0.1+
16	X0.0-	15	X0.10-	34	X0.0+	33	X0.10+
18	X0.8-	17	X0.9-	36	X0.8+	35	X0.9+

Chapter 2 Extension Cables for I/O Modules

AH04HC-5A										
			2	C2	1	C3	20	Y0.10	19	Y0.11
			4	C0	3	C1	22	Y0.8	21	Y0.9
			6	N/C	5	N/C	24	N/C	23	N/C
			8	X0.15-	7	X0.3-	26	X0.15+	25	X0.3+
			10	X0.2-	9	X0.14-	28	X0.2+	27	X0.14+
			12	X0.12-	11	X0.13-	30	X0.12+	29	X0.13+
			14	X0.11-	13	X0.1-	32	X0.11+	31	X0.1+
			16	X0.0-	15	X0.10-	34	X0.0+	33	X0.10+
			18	X0.8-	17	X0.9-	36	X0.8+	35	X0.9+

Figure 13 UB-10-IO16C





↑	C3	C2	C1	C0	N/C	N/C	X0.3-	X0.15-	X0.14-	X0.2-	X0.13-	X0.12-	X0.1-	X0.11-	X0.10-	X0.0-	X0.9-	X0.8-	24G	24G	FE
↓	Y0.11	Y0.10	Y0.9	Y0.8	N/C	N/C	X0.3+	X0.15+	X0.14+	X0.2+	X0.13+	X0.12+	X0.1+	X0.11+	X0.10+	X0.0+	X0.9+	X0.8+	N/C	24V	24V

Figure 14 UB-10-IO22C



↑	COM	COM	COM	COM	S/S	X1.5	S/S	X1.4	S/S	X0.3	S/S	X0.2	X0.1-	X0.11-	X0.10-	X0.0-	X0.9-	X0.8-	24G	24G	FE
↓	Y0.11	Y0.10	Y0.9	Y0.8	X1.3	X1.2	X1.1	X1.0	X0.15	X0.14	X0.13	X0.12	X0.1+	X0.11+	X0.10+	X0.0+	X0.9+	X0.8+	N/C	24V	24V

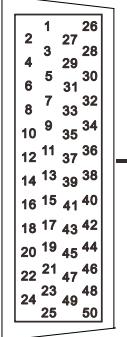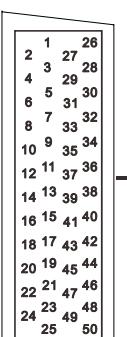Figure 15	UC-ET010-15B (1 m)	Female MDR50 connector ↔ Female MDR50 connector						
								
AH10PM-5A								
1	CN1 26 1 50 25							
2	2	C2	1	C3	27	Y0.10	26	Y0.11
4	4	C0	3	C1	29	Y0.8	28	Y0.9
6	6	Y0.7-	5	N/A	31	Y0.7+	30	N/A
8	8	Y0.5-	7	Y0.6-	33	Y0.5+	32	Y0.6+
10	10	Y0.3-	9	Y0.4-	35	Y0.3+	34	Y0.4+
12	12	Y0.1-	11	Y0.2-	37	Y0.1+	36	Y0.2+
14	14	N/A	13	Y0.0-	39	N/A	38	Y0.0+
16	16	X0.15	15	N/A	41	X0.14	40	S/S
18	18	X0.11	17	X0.13	43	X0.10	42	X0.12
20	20	N/A	19	X0.9	45	N/A	44	X0.8
22	22	X0.3-	21	N/A	47	X0.3+	46	N/A
24	24	X0.1-	23	X0.2-	49	X0.1+	48	X0.2+
		25	X0.0-				50	X0.0+
AH15PM-5A								
1	CN1 26 1 50 25							
2	2	Y0.9	1	Y0.11	27	Y0.8	26	Y0.10
4	4	Y0.7-	3	COM	29	Y0.6+	28	Y0.7+
6	6	Y0.5-	5	Y0.6-	31	Y0.4+	30	Y0.5+
8	8	Y0.3-	7	Y0.4-	33	Y0.2+	32	Y0.3+
10	10	Y0.1-	9	Y0.2-	35	Y0.0+	34	Y0.1+
12	12	X1.5	11	Y0.0-	37	X1.4	36	S/S
14	14	X1.1	13	X1.3	39	X1.0	38	X1.2
16	16	X0.13	15	X0.15	41	X0.12	40	X0.14
18	18	X0.9-	17	X0.11	43	X0.9+	42	X0.10
20	20	X0.7	19	X0.8-	45	X0.6	44	X0.8+
22	22	X0.3-	21	X0.5	47	X0.3+	46	X0.4
24	24	X0.1-	23	X0.2-	49	X0.1+	48	X0.2+
		25	X0.0-				50	X0.0+


Chapter 2 Extension Cables for I/O Modules

2	Figure 16	UB-10-IO24C																																			
																																					
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10px; text-align: center;">↑</td> <td>C3</td><td>C2</td><td>C1</td><td>C0</td><td>N/C</td><td>Y0.7-</td><td>Y0.6-</td><td>Y0.5-</td><td>Y0.4-</td><td>Y0.3-</td><td>Y0.2-</td><td>Y0.1-</td><td>Y0.0-</td><td>N/C</td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td>N/C</td><td>X0.15</td><td>X0.13</td><td>X0.11</td><td>X0.9</td><td>N/C</td><td>N/C</td><td>X0.3-</td><td>X0.2-</td><td>X0.1-</td><td>X0.0-</td><td>24G</td><td>24G</td><td>FE</td> </tr> </table>			↑	C3	C2	C1	C0	N/C	Y0.7-	Y0.6-	Y0.5-	Y0.4-	Y0.3-	Y0.2-	Y0.1-	Y0.0-	N/C							N/C	X0.15	X0.13	X0.11	X0.9	N/C	N/C	X0.3-	X0.2-	X0.1-	X0.0-	24G	24G	FE
↑	C3	C2	C1	C0	N/C	Y0.7-	Y0.6-	Y0.5-	Y0.4-	Y0.3-	Y0.2-	Y0.1-	Y0.0-	N/C																							
						N/C	X0.15	X0.13	X0.11	X0.9	N/C	N/C	X0.3-	X0.2-	X0.1-	X0.0-	24G	24G	FE																		
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10px; text-align: center;">↓</td> <td>Y0.11</td><td>Y0.10</td><td>Y0.9</td><td>Y0.8</td><td>N/C</td><td>Y0.7+</td><td>Y0.6+</td><td>Y0.5+</td><td>Y0.4+</td><td>Y0.3+</td><td>Y0.2+</td><td>Y0.1+</td><td>Y0.0+</td><td>N/C</td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td>S/S</td><td>X0.14</td><td>X0.12</td><td>X0.10</td><td>X0.8</td><td>N/C</td><td>N/C</td><td>X0.3+</td><td>X0.2+</td><td>X0.1+</td><td>X0.0+</td><td>N/C</td><td>24V</td><td>24V</td> </tr> </table>			↓	Y0.11	Y0.10	Y0.9	Y0.8	N/C	Y0.7+	Y0.6+	Y0.5+	Y0.4+	Y0.3+	Y0.2+	Y0.1+	Y0.0+	N/C							S/S	X0.14	X0.12	X0.10	X0.8	N/C	N/C	X0.3+	X0.2+	X0.1+	X0.0+	N/C	24V	24V
↓	Y0.11	Y0.10	Y0.9	Y0.8	N/C	Y0.7+	Y0.6+	Y0.5+	Y0.4+	Y0.3+	Y0.2+	Y0.1+	Y0.0+	N/C																							
						S/S	X0.14	X0.12	X0.10	X0.8	N/C	N/C	X0.3+	X0.2+	X0.1+	X0.0+	N/C	24V	24V																		
Figure 17																																					

2	Figure 17	UB-10-IO34C																																				
																																						
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10px; text-align: center;">↑</td> <td>Y0.11</td><td>Y0.9</td><td>COM</td><td>Y0.7-</td><td>Y0.6-</td><td>Y0.5-</td><td>Y0.4-</td><td>Y0.3-</td><td>Y0.2-</td><td>Y0.1-</td><td>Y0.0-</td><td>X1.5</td><td>X1.3</td><td>X1.1</td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>X0.15</td><td>X0.13</td><td>X0.11</td><td>X0.9-</td><td>X0.8-</td><td>X0.7</td><td>X0.5</td><td>X0.3-</td><td>X0.2-</td><td>X0.1-</td><td>X0.0-</td><td>24G</td><td>24G</td><td>FE</td> </tr> </table>			↑	Y0.11	Y0.9	COM	Y0.7-	Y0.6-	Y0.5-	Y0.4-	Y0.3-	Y0.2-	Y0.1-	Y0.0-	X1.5	X1.3	X1.1								X0.15	X0.13	X0.11	X0.9-	X0.8-	X0.7	X0.5	X0.3-	X0.2-	X0.1-	X0.0-	24G	24G	FE
↑	Y0.11	Y0.9	COM	Y0.7-	Y0.6-	Y0.5-	Y0.4-	Y0.3-	Y0.2-	Y0.1-	Y0.0-	X1.5	X1.3	X1.1																								
							X0.15	X0.13	X0.11	X0.9-	X0.8-	X0.7	X0.5	X0.3-	X0.2-	X0.1-	X0.0-	24G	24G	FE																		
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10px; text-align: center;">↓</td> <td>Y0.10</td><td>Y0.8</td><td>Y0.7+</td><td>Y0.6+</td><td>Y0.5+</td><td>Y0.4+</td><td>Y0.3+</td><td>Y0.2+</td><td>Y0.1+</td><td>Y0.0+</td><td>S/S</td><td>X1.4</td><td>X1.2</td><td>X1.0</td> </tr> <tr> <td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>X0.14</td><td>X0.12</td><td>X0.10</td><td>X0.9+</td><td>X0.8+</td><td>X0.6</td><td>X0.4</td><td>X0.3+</td><td>X0.2+</td><td>X0.1+</td><td>X0.0+</td><td>N/C</td><td>24V</td><td>24V</td> </tr> </table>			↓	Y0.10	Y0.8	Y0.7+	Y0.6+	Y0.5+	Y0.4+	Y0.3+	Y0.2+	Y0.1+	Y0.0+	S/S	X1.4	X1.2	X1.0								X0.14	X0.12	X0.10	X0.9+	X0.8+	X0.6	X0.4	X0.3+	X0.2+	X0.1+	X0.0+	N/C	24V	24V
↓	Y0.10	Y0.8	Y0.7+	Y0.6+	Y0.5+	Y0.4+	Y0.3+	Y0.2+	Y0.1+	Y0.0+	S/S	X1.4	X1.2	X1.0																								
							X0.14	X0.12	X0.10	X0.9+	X0.8+	X0.6	X0.4	X0.3+	X0.2+	X0.1+	X0.0+	N/C	24V	24V																		
Figure 17																																						

Chapter 2 Extension Cables for I/O Modules

Figure 18	AHACAB06-5A (0.6 m)	Male MDR20 connector ↔ Male MDR20 connector
	AHACAB10-5A (1 m)	
	AHACAB15-5A (1.5 m)	
	AHACAB30-5A (3 m)	
	AHACAB50-5A (5 m)	
	AHACABA0-5A (10 m)	
	AHACABA5-5A (15 m)	
	AHACABB0-5A (20 m)	
	AHACABC0-5A (30 m)	
	AHACABD0-5A (40 m)	
	AHACABE0-5A (50 m)	
	AHACABF0-5A (60 m)	
	AHACABG0-5A (70 m)	
	AHACABH0-5A (80 m)	
	AHACABJ0-5A (90 m)	
	AHACABK0-5A (100 m)	

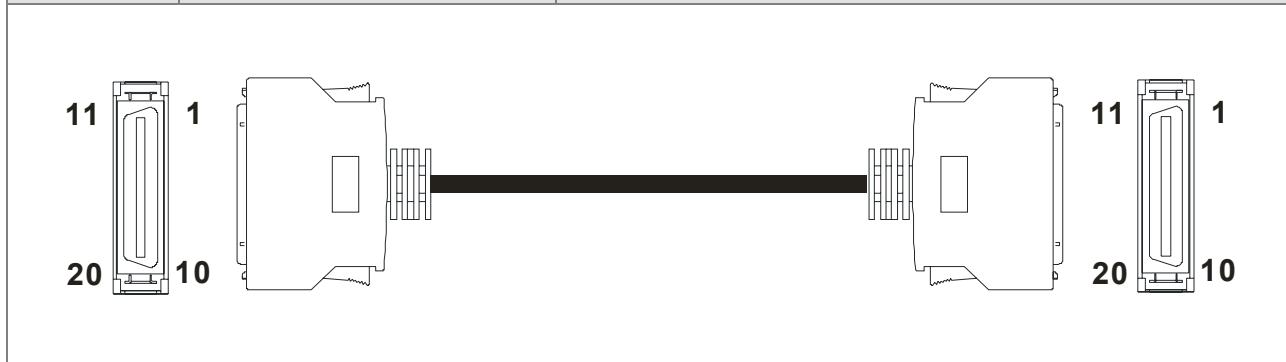

Chapter 2 Extension Cables for I/O Modules

Figure 19		UB-10-ID16A																																																									
2																																																											
AS332T-A																																																											
<table border="1"> <thead> <tr> <th></th><th>X0.0</th><th>X0.2</th><th>X0.4</th><th>X0.6</th><th>X0.8</th><th>X0.10</th><th>X0.12</th><th>X0.14</th><th>S/S</th><th>-</th><th></th></tr> </thead> <tbody> <tr> <td>↑</td><td>Y0.0</td><td>Y0.2</td><td>Y0.4</td><td>Y0.6</td><td>Y0.8</td><td>Y0.10</td><td>Y0.12</td><td>Y0.14</td><td>C0</td><td>-</td><td></td></tr> <tr> <td>↓</td><td>X0.1</td><td>X0.3</td><td>X0.5</td><td>X0.7</td><td>X0.9</td><td>X0.11</td><td>X0.13</td><td>X0.15</td><td>S/S</td><td>-</td><td></td></tr> <tr> <td></td><td>Y0.1</td><td>Y0.3</td><td>Y0.5</td><td>Y0.7</td><td>Y0.9</td><td>Y0.11</td><td>Y0.13</td><td>Y0.15</td><td>C0</td><td>-</td><td></td></tr> </tbody> </table>													X0.0	X0.2	X0.4	X0.6	X0.8	X0.10	X0.12	X0.14	S/S	-		↑	Y0.0	Y0.2	Y0.4	Y0.6	Y0.8	Y0.10	Y0.12	Y0.14	C0	-		↓	X0.1	X0.3	X0.5	X0.7	X0.9	X0.11	X0.13	X0.15	S/S	-			Y0.1	Y0.3	Y0.5	Y0.7	Y0.9	Y0.11	Y0.13	Y0.15	C0	-	
	X0.0	X0.2	X0.4	X0.6	X0.8	X0.10	X0.12	X0.14	S/S	-																																																	
↑	Y0.0	Y0.2	Y0.4	Y0.6	Y0.8	Y0.10	Y0.12	Y0.14	C0	-																																																	
↓	X0.1	X0.3	X0.5	X0.7	X0.9	X0.11	X0.13	X0.15	S/S	-																																																	
	Y0.1	Y0.3	Y0.5	Y0.7	Y0.9	Y0.11	Y0.13	Y0.15	C0	-																																																	
AS332P-A																																																											
<table border="1"> <thead> <tr> <th></th><th>X0.0</th><th>X0.2</th><th>X0.4</th><th>X0.6</th><th>X0.8</th><th>X0.10</th><th>X0.12</th><th>X0.14</th><th>S/S</th><th>-</th><th></th></tr> </thead> <tbody> <tr> <td>↑</td><td>Y0.0</td><td>Y0.2</td><td>Y0.4</td><td>Y0.6</td><td>Y0.8</td><td>Y0.10</td><td>Y0.12</td><td>Y0.14</td><td>-</td><td>C0</td><td></td></tr> <tr> <td>↓</td><td>X0.1</td><td>X0.3</td><td>X0.5</td><td>X0.7</td><td>X0.9</td><td>X0.11</td><td>X0.13</td><td>X0.15</td><td>S/S</td><td>-</td><td></td></tr> <tr> <td></td><td>Y0.1</td><td>Y0.3</td><td>Y0.5</td><td>Y0.7</td><td>Y0.9</td><td>Y0.11</td><td>Y0.13</td><td>Y0.15</td><td>-</td><td>C0</td><td></td></tr> </tbody> </table>													X0.0	X0.2	X0.4	X0.6	X0.8	X0.10	X0.12	X0.14	S/S	-		↑	Y0.0	Y0.2	Y0.4	Y0.6	Y0.8	Y0.10	Y0.12	Y0.14	-	C0		↓	X0.1	X0.3	X0.5	X0.7	X0.9	X0.11	X0.13	X0.15	S/S	-			Y0.1	Y0.3	Y0.5	Y0.7	Y0.9	Y0.11	Y0.13	Y0.15	-	C0	
	X0.0	X0.2	X0.4	X0.6	X0.8	X0.10	X0.12	X0.14	S/S	-																																																	
↑	Y0.0	Y0.2	Y0.4	Y0.6	Y0.8	Y0.10	Y0.12	Y0.14	-	C0																																																	
↓	X0.1	X0.3	X0.5	X0.7	X0.9	X0.11	X0.13	X0.15	S/S	-																																																	
	Y0.1	Y0.3	Y0.5	Y0.7	Y0.9	Y0.11	Y0.13	Y0.15	-	C0																																																	
AS324MT-A																																																											
<table border="1"> <thead> <tr> <th></th><th>X0.0+</th><th>X0.1+</th><th>X0.2+</th><th>X0.3+</th><th>SG0</th><th>X0.4</th><th>X0.6</th><th>X0.8</th><th>X0.10</th><th>S/S</th><th></th></tr> </thead> <tbody> <tr> <td>↑</td><td>Y0.0+</td><td>Y0.1+</td><td>Y0.2+</td><td>Y0.3+</td><td>SG1</td><td>Y0.4</td><td>Y0.6</td><td>Y0.8</td><td>Y0.10</td><td>C0</td><td></td></tr> <tr> <td>↓</td><td>X0.0-</td><td>X0.1-</td><td>X0.2-</td><td>X0.3-</td><td>SG0</td><td>X0.5</td><td>X0.7</td><td>X0.9</td><td>X0.11</td><td>S/S</td><td></td></tr> <tr> <td></td><td>Y0.0-</td><td>Y0.1-</td><td>Y0.2-</td><td>Y0.3-</td><td>SG1</td><td>Y0.5</td><td>Y0.7</td><td>Y0.9</td><td>Y0.11</td><td>C0</td><td></td></tr> </tbody> </table>													X0.0+	X0.1+	X0.2+	X0.3+	SG0	X0.4	X0.6	X0.8	X0.10	S/S		↑	Y0.0+	Y0.1+	Y0.2+	Y0.3+	SG1	Y0.4	Y0.6	Y0.8	Y0.10	C0		↓	X0.0-	X0.1-	X0.2-	X0.3-	SG0	X0.5	X0.7	X0.9	X0.11	S/S			Y0.0-	Y0.1-	Y0.2-	Y0.3-	SG1	Y0.5	Y0.7	Y0.9	Y0.11	C0	
	X0.0+	X0.1+	X0.2+	X0.3+	SG0	X0.4	X0.6	X0.8	X0.10	S/S																																																	
↑	Y0.0+	Y0.1+	Y0.2+	Y0.3+	SG1	Y0.4	Y0.6	Y0.8	Y0.10	C0																																																	
↓	X0.0-	X0.1-	X0.2-	X0.3-	SG0	X0.5	X0.7	X0.9	X0.11	S/S																																																	
	Y0.0-	Y0.1-	Y0.2-	Y0.3-	SG1	Y0.5	Y0.7	Y0.9	Y0.11	C0																																																	

3

Chapter 3 Motion Control Cables


Table of Contents

3.1 CANopen Motion Control Cables	3-2
3.1.1 DVP-MC Series (DVP10MC11T)	3-2
3.1.2 DVP-PM Series.....	3-3
3.2 DMCNET Motion Control Cables.....	3-4
3.2.1 AH20MC-5A	3-4
3.3 EtherCAT Motion Control Cables	3-6
3.3.1 AH10EMC-5A.....	3-6
3.4 Cable Models	3-7
3.5 Descriptions of Cable Models.....	3-9

Delta PLC/HMI Cable Selection Guide

3.1 CANopen Motion Control Cables

3.1.1 DVP-MC Series (DVP10MC11T)

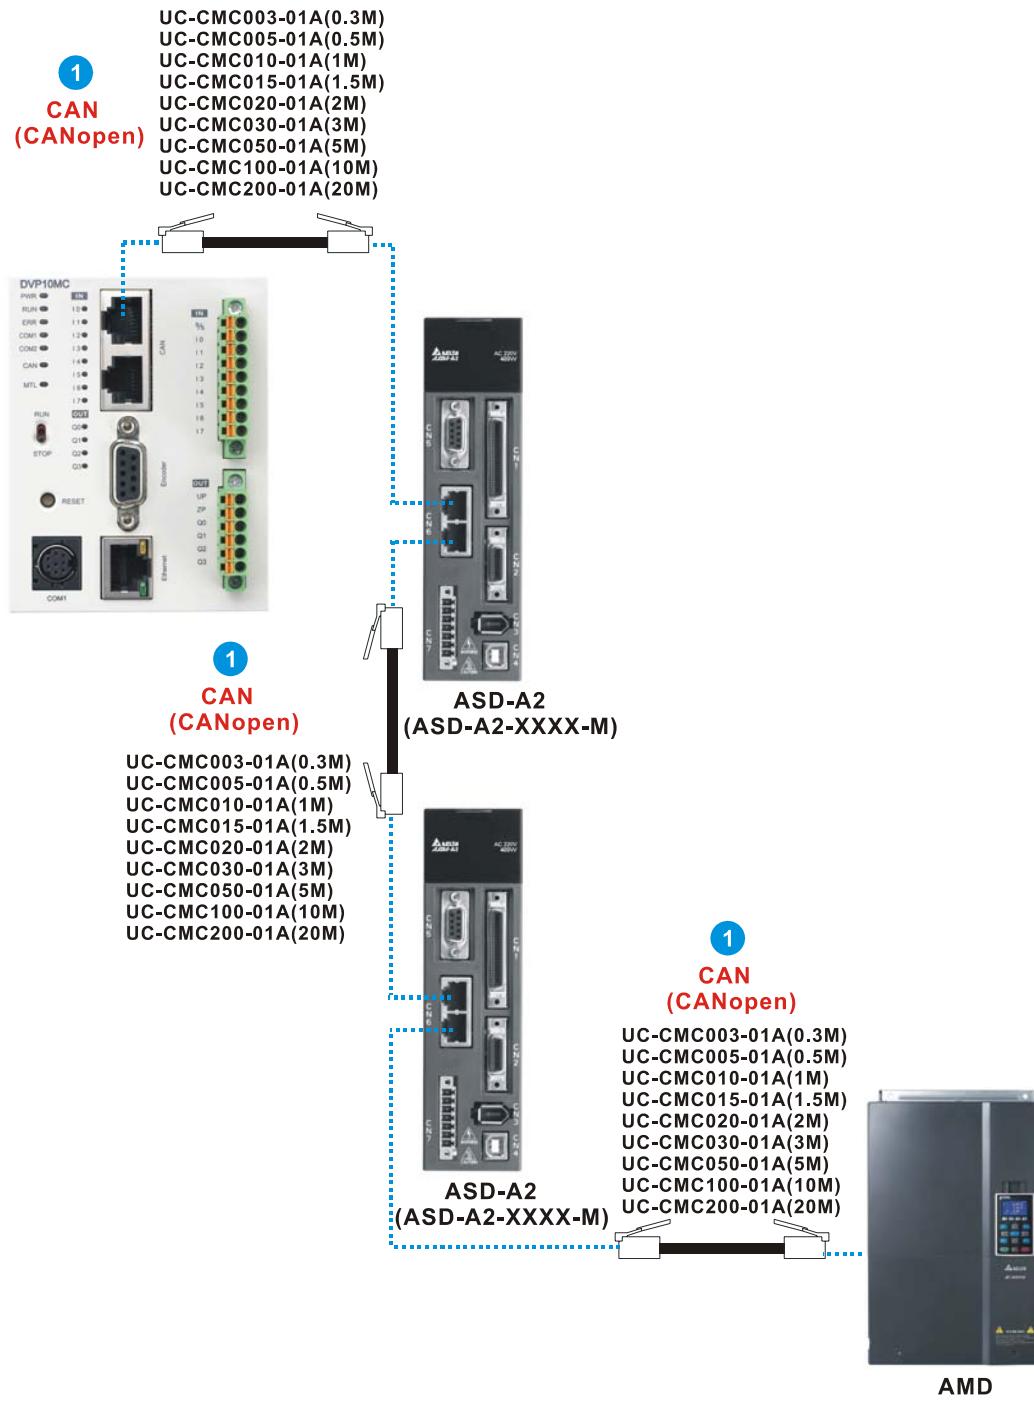


Note 1: Please refer to section 3.4 for more information about ①, ②, ③, etc.

Note 2: It is suggested that users connect the terminator TAP-TR01 to each end of a CANopen cable. The resistance of TAP-TR01 is 121 Ω. Please refer to Chapter 4 for more information.

3.1.2 DVP-PM Series

DVP-PM Series (DVP10PM00M, DVP20PM00D, DVP20PM00M)

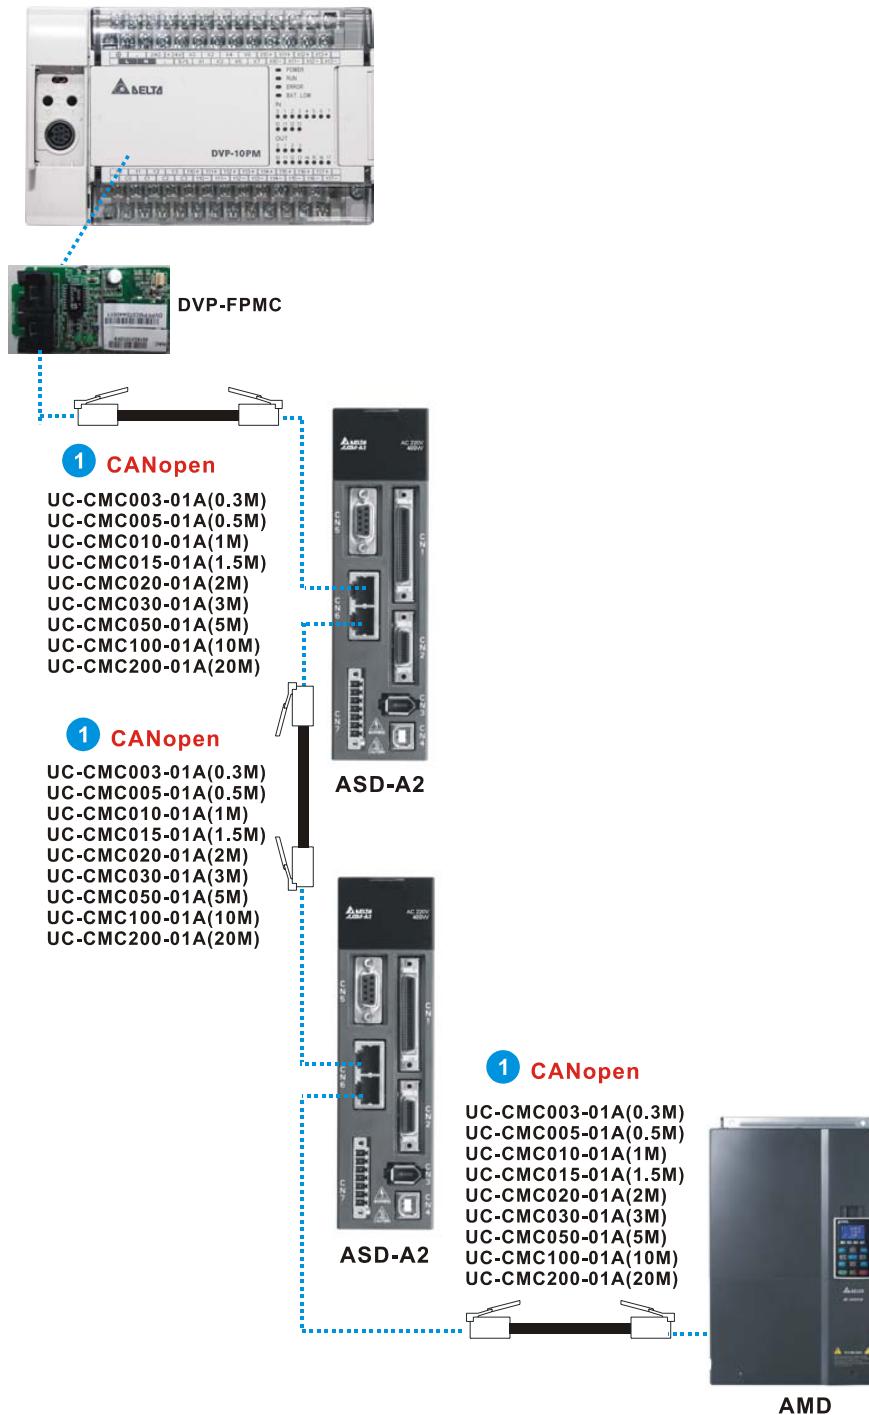


Note 1: Please refer to section 3.4 for more information about 1, 2, 3, etc.

Note 2: It is suggested that users connect the terminator TAP-TR01 to each end of a CANopen cable. The resistance of TAP-TR01 is 121 Ω. Please refer to Chapter 4 for more information.

Delta PLC/HMI Cable Selection Guide

3.2 DMCNET Motion Control Cables

3.2.1 AH20MC-5A

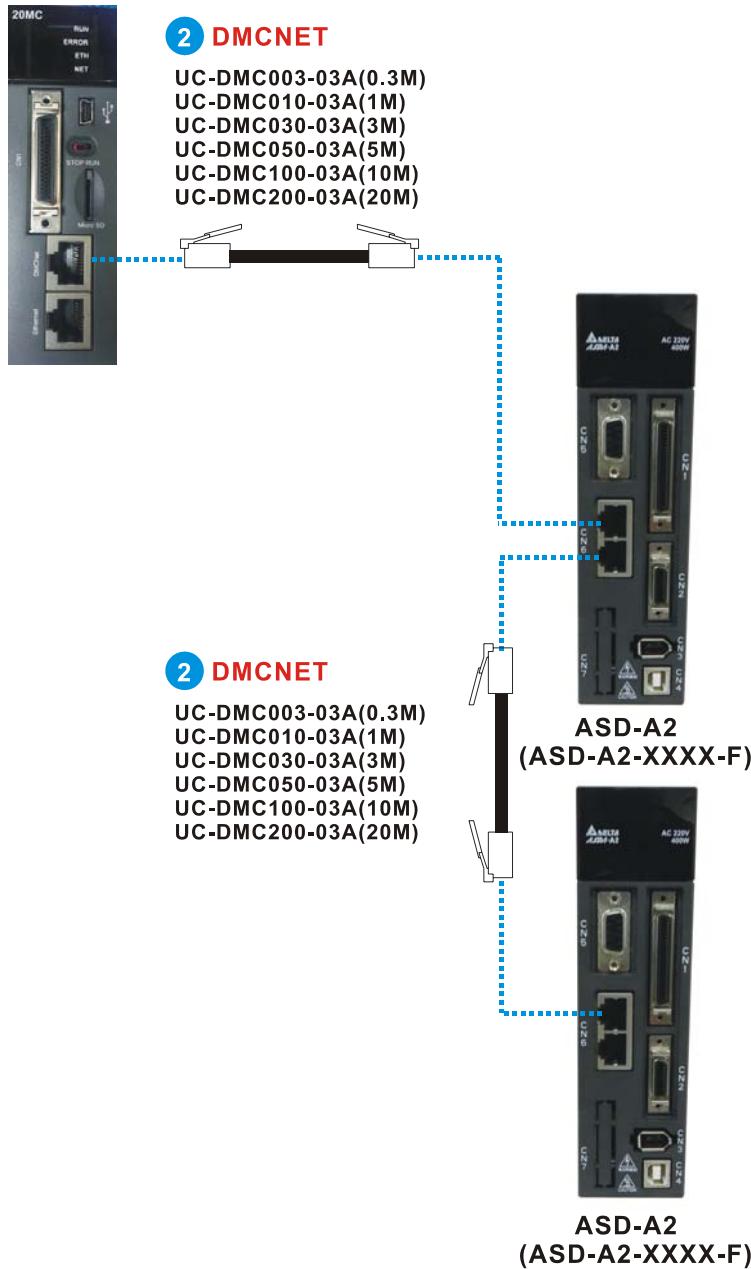


Note 1: Please refer to section 3.4 for more information about ①, ②, ③, etc.

Note 2:


1. If a DMCNET cable is long (longer than five meters in general), it is suggested that users connect a terminator to each end of the cable to prevent unstable signals from causing a servo drive to operate abnormally. An RJ45 adapter with one male connector and two female connectors is used to connect a terminator to the starting end of a DMCNET cable.

Chapter 3 Motion Control Cables

2. If a DMCNET cable is shorter than five meters, only the terminal end of the cable needs to be connected to a terminator.
3. The resistance of the terminator TAP-TR02 is 150 Ω. The RJ45 adapter UN-03EN-04A is shown below.

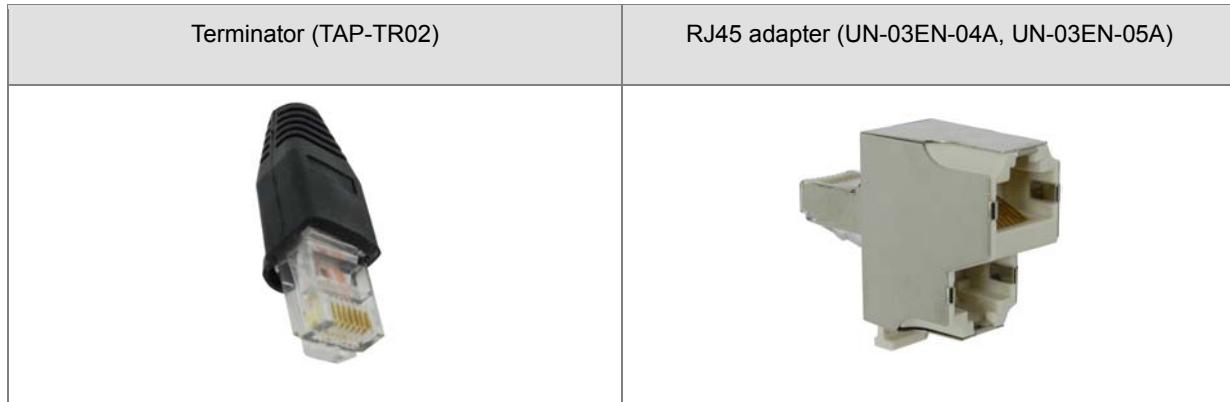


4. Please refer to the figures below for more information about connecting terminators to the starting end and the terminal end of a cable.

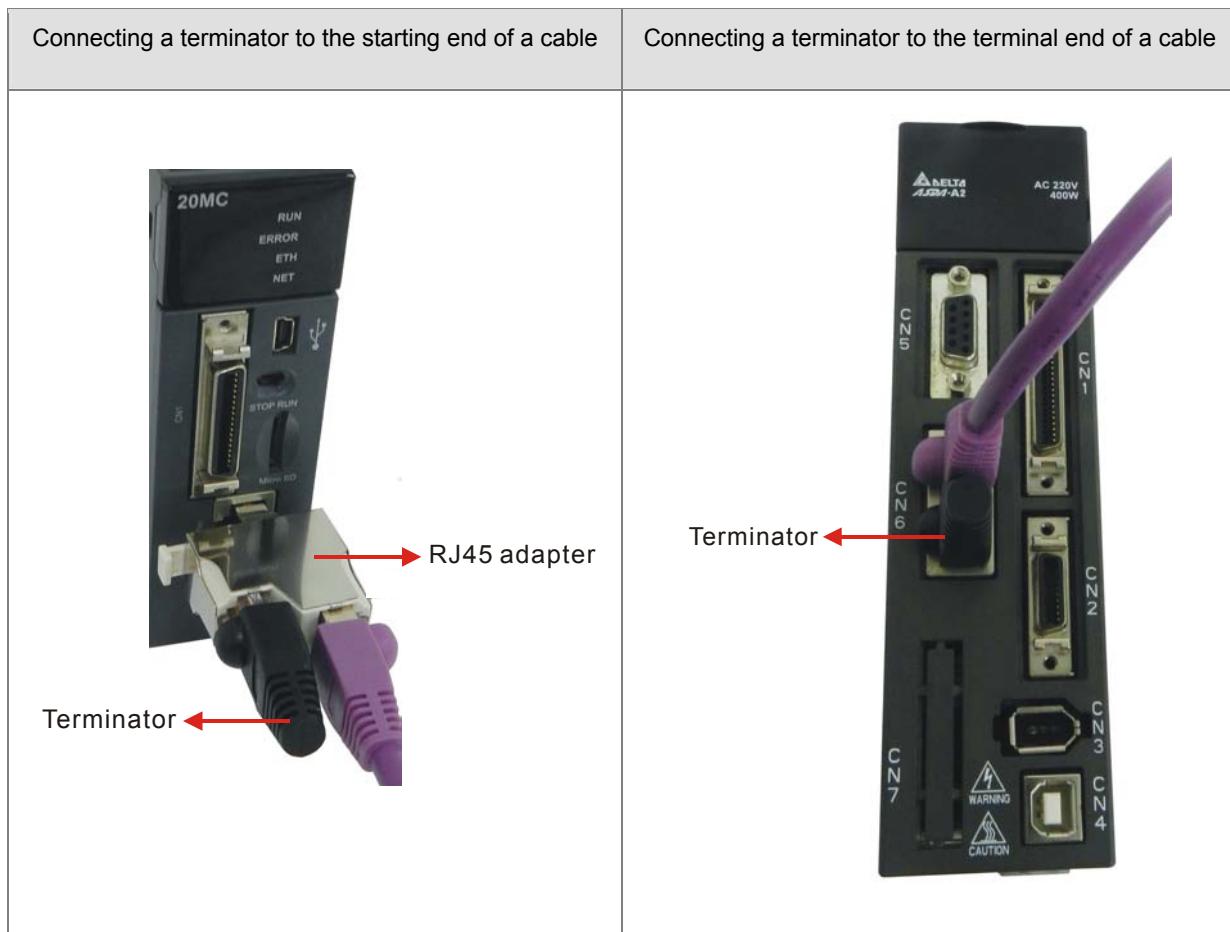

Delta PLC/HMI Cable Selection Guide

3.3 EtherCAT Motion Control Cables

3.3.1 AH10EMC-5A

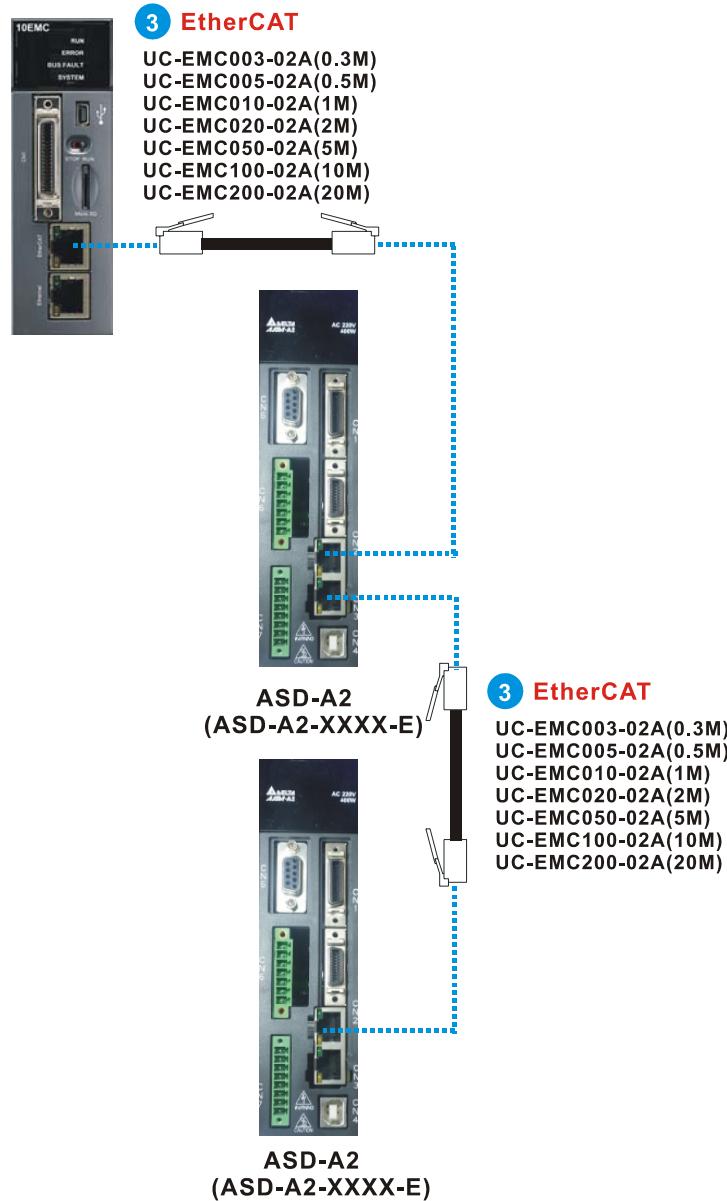

Note: Please refer to section 3.4 for more information about ①, ②, ③, etc.

3.4 Cable Models

1

CANopen

CPU	Adapter	Module/Interface card	Cable	Machine connected
DVP10MC11T	--	--	RJ45 ↔ RJ45	AMD/ASD
			UC-CMC003-01A (0.3 m) (Figure 1) UC-CMC005-01A (0.5 m) (Figure 1) UC-CMC010-01A (1 m) (Figure 1) UC-CMC015-01A (1.5 m) (Figure 1) UC-CMC020-01A (2 m) (Figure 1) UC-CMC030-01A (3 m) (Figure 1) UC-CMC050-01A (5 m) (Figure 1) UC-CMC100-01A (10 m) (Figure 1) UC-CMC200-01A (20 m) (Figure 1)	 

2

DMCNET

CPU	Adapter	Module/Interface card	Cable	Machine connected
--	--	AH20MC-5A	RJ45 ↔ RJ45	ASD
			UC-CMC003-01A (0.3 m) (Figure 1) UC-CMC005-01A (0.5 m) (Figure 1) UC-CMC010-01A (1 m) (Figure 1) UC-CMC015-01A (1.5 m) (Figure 1) UC-CMC020-01A (2 m) (Figure 1) UC-CMC030-01A (3 m) (Figure 1) UC-CMC050-01A (5 m) (Figure 1) UC-CMC100-01A (10 m) (Figure 1) UC-CMC200-01A (20 m) (Figure 1)	 

Delta PLC/HMI Cable Selection Guide

3 EtherCAT

CPU	Adapter	Module/Interface card	Cable	Machine connected
AH10EMC-5A	--	--	RJ45 ↔ RJ45	ASD
			UC-EMC003-02A (0.3 m) (Figure 2) UC-EMC005-02A (0.5 m) (Figure 2) UC-EMC010-02A (1 m) (Figure 2) UC-EMC020-02A (2 m) (Figure 2) UC-EMC050-02A (5 m) (Figure 2) UC-EMC100-02A (10 m) (Figure 2) UC-EMC200-02A (20 m) (Figure 2)	

3.5 Descriptions of Cable Models

Figure 1	UC-CMC003-01A (0.3 m)	RJ45 ↔ RJ45	
	UC-CMC005-01A (0.5 m)		
	UC-CMC010-01A (1 m)		
	UC-CMC015-01A (1.5 m)		
	UC-CMC020-01A (2 m)		
	UC-CMC030-01A (3 m)		
	UC-CMC050-01A (5 m)		
	UC-CMC100-01A (10 m)		
	UC-CMC200-01A (20 m)		
			
<p>1 (Black): CAN+ 5 (Blue): CAN+</p> <p>2 (Orange): CAN- 6 (White): CAN-</p> <p>3 (Brown): CAN_GND 7 (Yellow): CAN_GND</p> <p>4 (Gray): -- 8 (Green): --</p>			
DMCNET			
<p>1 (Black): DMCNET_D1+ 5 (Blue): --</p> <p>2 (Orange): DMCNET_D1- 6 (White): DMCNET_D2-</p> <p>3 (Brown): DMCNET_D2+ 7 (Yellow): --</p> <p>4 (Gray): -- 8 (Green): --</p>			

Delta PLC/HMI Cable Selection Guide

Figure 2	UC-EMC003-02A (0.3 m)	
	UC-EMC005-02A (0.5 m)	
	UC-EMC010-02A (1 m)	
	UC-EMC020-02A (2 m)	RJ45 ↔ RJ45
	UC-EMC050-02A (5 m)	
	UC-EMC100-02A (10 m)	
	UC-EMC200-02A (20 m)	
		
<p>1: EtherCAT_TX+ (Orange/White) 2: EtherCAT_TX- (Orange) 3: EtherCAT_RX+ (Green/White) 6: EtherCAT_RX- (Green)</p>		




Chapter 4 Networking Cables

Table of Contents

4.1 CANopen Communication	4-2
4.1.1 Applicable CANopen Models	4-2
4.1.2 Specifications Related to CANopen Communication	4-3
4.1.3 Terminator	4-6
4.2 PROFIBUS DP Communication	4-8
4.2.1 Applicable PROFIBUS DP Models.....	4-9
4.2.2 Specifications Related to PROFIBUS DP Communication	4-9
4.3 DeviceNet Communication.....	4-11
4.3.1 Applicable DeviceNet Models	4-11
4.3.2 Specifications Related to DeviceNet	4-12
4.3.3 Terminator	4-14

4.1 CANopen Communication

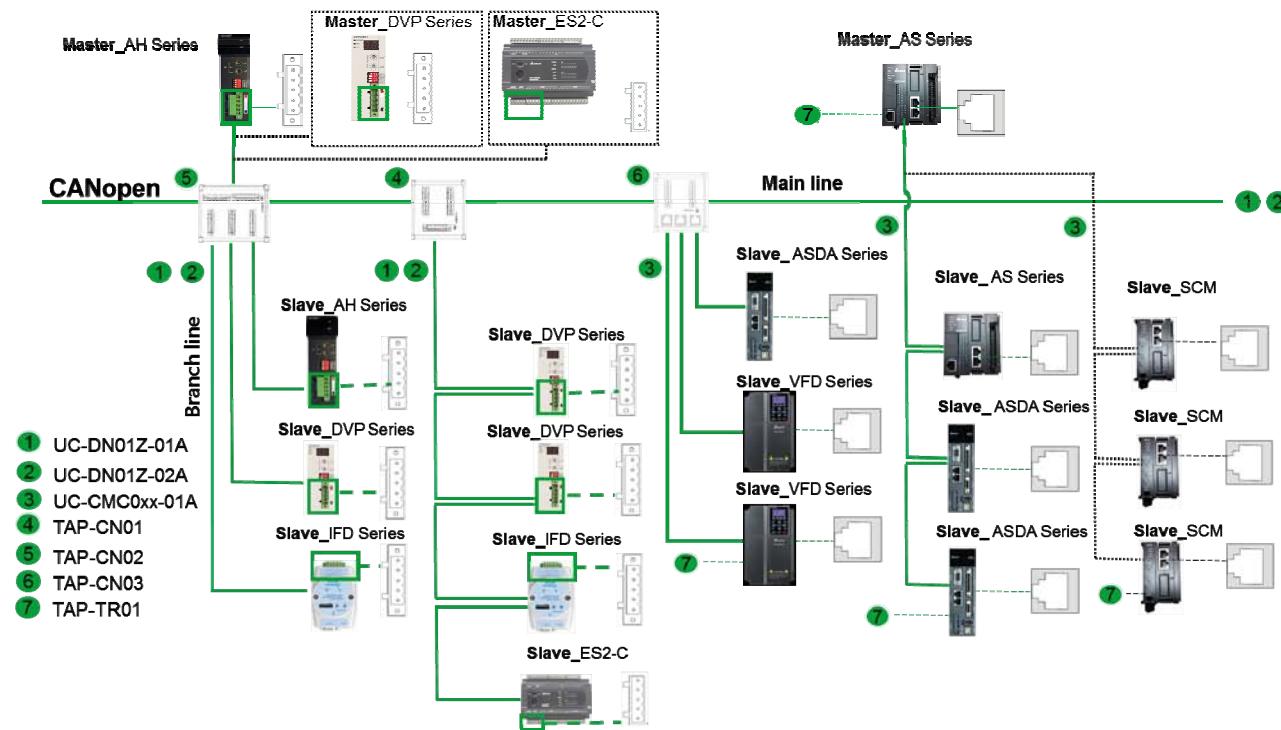

Note: CANopen suggests that users connect a terminator to each end of a CANopen cable to main the stability of signals.

Please refer to section 4.1.3 for more information about a terminator.

4.1.1 Applicable CANopen Models


Communication port	Classification	Model	Connector	Cable	Distribution box
	Master_AH series	AH10COPM-5A	--	①	④ ⑤
	Master_DVP series	DVPCOPM-SL	--	①	④ ⑤
	Slave_AH series	AH10COPM-5A	--	②	⑤
	Slave_DVP series	DVPCP02-H2	--	②	④ ⑤
	Slave_IFD series	IFD9503	--	②	④ ⑤
	Master_ES2-C	DVP32ES200RC, DVP32ES200TC	--	①	④ ⑤
	Slave_ES2-C	DVP32ES200RC, DVP32ES200TC	--	②	④ ⑤

Communication port	Classification	Model	Connector	Cable	Distribution box
	Slave_VFD series	VFD-C2000 series, VFD-CP2000 series, VFD-CH200 series, VFD-C200 series, VFD-E series	--	3	6
	Slave_ASDA series	ASDA-A2 series	--	3	6
	Master_AS series	AS332T-A, AS332P-A, AS324MT-A	--	3	--
	Slave_SCM	AS00SCM-A	--	3	--

4.1.2 Specifications Related to CANopen Communication


- 5-pin connector (CANopen)

Pinout		
Pin	Signal	Description
1	GND	0 V DC
2	CAN-	Signal -
3	SHLD	Shielded cable
4	CAN+	Signal +
5	Reserved	Reserved

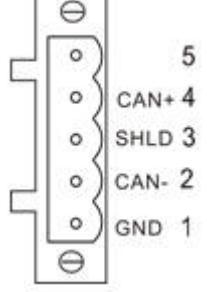

- 5-pin connector (ES2-C)


Pinout		
Pin	Signal	Description
1	CAN+	Signal +
2	CAN-	Signal -
3	SG	0 V DC
4	D+	RS-485 +
5	D-	RS-485 -

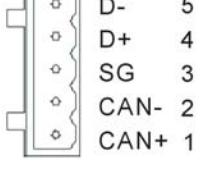

Delta PLC/HMI Cable Selection Guide

- RJ45 connector

Pinout		
Pin	Signal	Description
1	CAN+	Signal +
2	CAN-	Signal -
3	CAN_GND	0 V DC
4	RESE_1	Reserved
5	RESE_2	Reserved
6	CAN_SHLD	Shielded cable
7	CAN_GND	0 V DC
8	RESE_3	Reserved

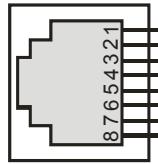

- Cable

		Model	Length	AWG
1		UC-DN01Z-01A	305 m	2#15, 2#18 SHLD PVC (Thick)
2		UC-DN01Z-02A	305 m	2#22, 2#24 SHLD PVC (Thin)
3		UC-CMC003-01A	0.3 m	4#26, 1#24 PVC (Thin)
3		UC-CMC005-01A	0.5 m	4#26, 1#24 PVC (Thin)
3		UC-CMC010-01A	1.0 m	4#26, 1#24 PVC (Thin)
3		UC-CMC015-01A	1.5 m	4#26, 1#24 PVC (Thin)
3		UC-CMC020-01A	2.0 m	4#26, 1#24 PVC (Thin)
3		UC-CMC030-01A	3.0 m	4#26, 1#24 PVC (Thin)
3		UC-CMC050-01A	5.0 m	4#26, 1#24 PVC (Thin)
3		UC-CMC100-01A	10.0 m	4#26, 1#24 PVC (Thin)
3		UC-CMC200-01A	20.0 m	4#26, 1#24 PVC (Thin)

Note 1: The cable is sold by the meter. Max. ordering quantity: 305 meters(1 roll). Min. ordering quantity: 1 meter.



Note 2: ① UC-DN01Z-01A and ② UC-DN01Z-02A can be used as main cables or branch cables. The maximum communication distances that the two cables support are different. The maximum communication lengths that the two cables support under different CANopen transmission rates are shown below.

CANopen transmission rate (bit/s)	125 K	250 K	500 K	1 M
Maximum communication distance of UC-DN01Z-01A (m)	500	250	100	40
Maximum communication distance of UC-DN01Z-02A (m)	100	100	100	40




Note 3: CANopen stipulates the maximum communication distances of transmission rates. The relation between transmission rates and maximum communication distances is shown below.

Transmission rate (bit/s)	10 K	20 K	50 K	125 K	250 K	500 K	800 K	1 M
Maximum communication distance (m)	5000	2500	1000	500	250	100	50	40

- Distribution box

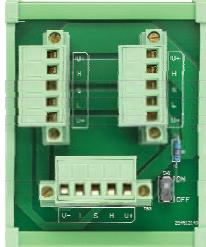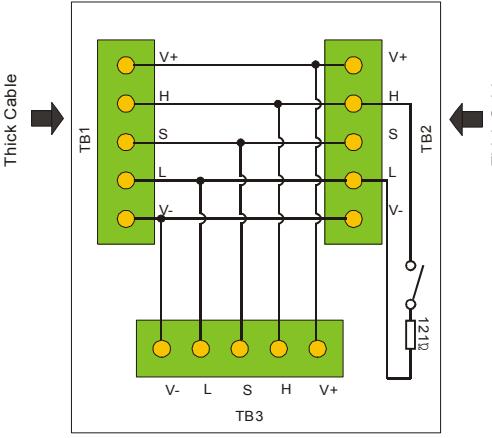Model		Circuitry	
④ TAP-CN01			

Delta PLC/HMI Cable Selection Guide

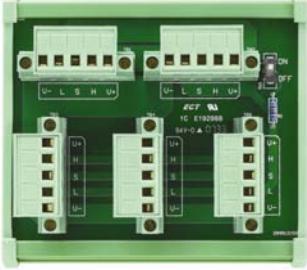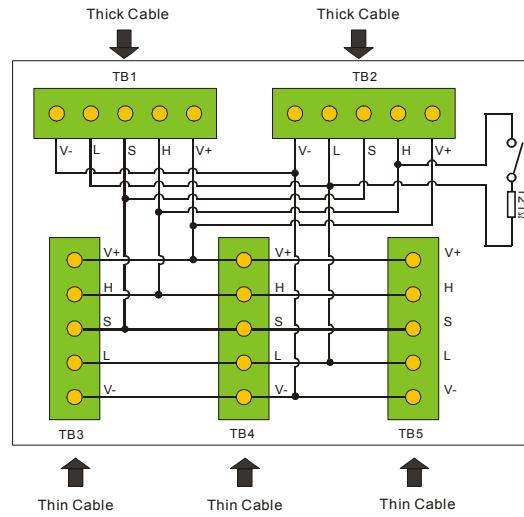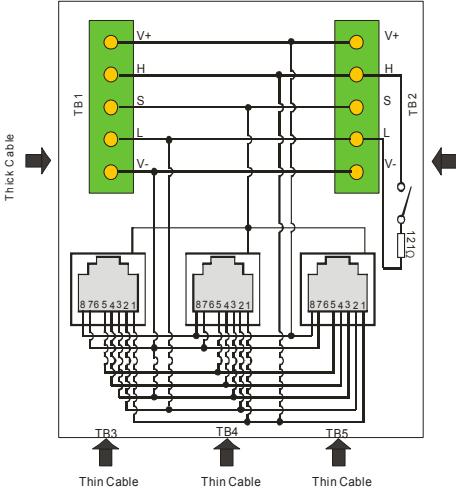Model	Circuitry
5 TAP-CN02 	
6 TAP-CN03 	
Connector	Removable terminal block (5.08 mm)
Terminator	121 Ω

4.1.3 Terminator


CANopen suggests that users connect a terminator to each end of a CANopen cable. A terminator functions as the impedance matching of communication signals. It can minimize the phenomenon that signal reflection interferes with normal signal transmission. The resistance of a terminator is 121Ω (1/4 watts).

Chapter 4 Networking Cables

1. Terminator connected to the starting end of a cable: The terminator in a distribution box can be used, that is, the terminator switch on a distribution box can be set to ON.
2. Terminator connected to the terminal end of a cable: The terminator TAP-TR01 needs to be connected.
 - The resistance of the terminator TAP-TR01 is 121Ω . TAP-TR01 is shown below.




4.2 PROFIBUS DP Communication

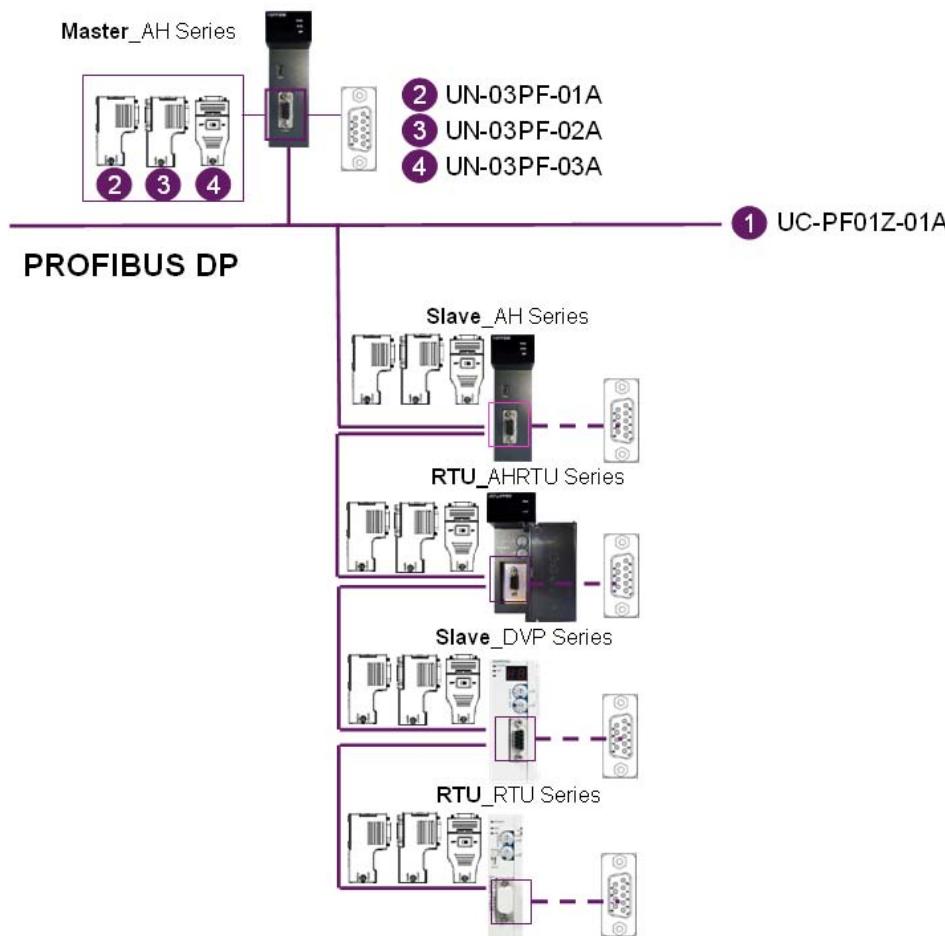

Note: If there are more than 32 pieces of hardware equipment in a network, or the communication length to which a communication rate corresponds is longer than the length specified (in the table below), the RS-485 repeater IFD5710 can be used to make the connection between cables longer.


Communication rate (bps)	9.6 K	19.2 K	93.75 K	187.5 K	500 K	1.5 M	3 M	6 M	12 M
Length (m)	1200			1000	400	200	100		

 4.2.1 Applicable PROFIBUS DP Models

Communication port	Classification	Model	Connector	Cable	Distribution box
	Master_AH series	AH10PFBM-5A	2 3 4	1	--
	Master_DVP series	--	--	--	--
	Slave_AH series	AH10PFBS-5A	2 3 4	1	--
	Slave_DVP series	DVPPF01-S, DVPPF02-SL, DVPPF02-H2	2 3 4	1	--
	RTU_AHRTU series	AHRTU-PFBS-5A	2 3 4	1	--
	RTU_RTU series	RTU-PD01	2 3 4	1	--

4.2.2 Specifications Related to PROFIBUS DP Communication

- Pinout

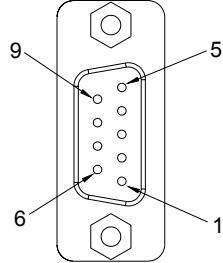Pin	Signal	Description	
1	N/C	--	
2	N/C	--	
3	Rxd/Txd-P	Receiving/Transmitting data (Positive pole)	
4	N/C	--	
5	DGND	Data reference potential	
6	VP	Providing positive voltage	
7	N/C	--	
8	Rxd/Txd-N	Receiving/Transmitting data (negative pole)	
9	N/C	--	

Delta PLC/HMI Cable Selection Guide

- Connector

	2	3	4
Model			
Connector	Male DB9 connector	Male DB9 connector	Male DB9 connector
Programming connector	--	Female DB9 connector	--
Terminator ^{*1}	120 Ω	120 Ω	120 Ω


^{*1}: If connectors are connected to both ends of a PROFIBUS network, please set the connector switches to ON. If connectors are not connected to both ends of a PROFIBUS network, please set the connector switches to OFF.

- Cable

1		Model	Length	Diameter
		UC-PF01Z-01A	200 m	1PR #22 AWG FRFPE FRPE

Note: The cable is sold by the meter. Max. ordering quantity: 305 meters(1 roll). Min. ordering quantity: 1 meter.

4.3 DeviceNet Communication

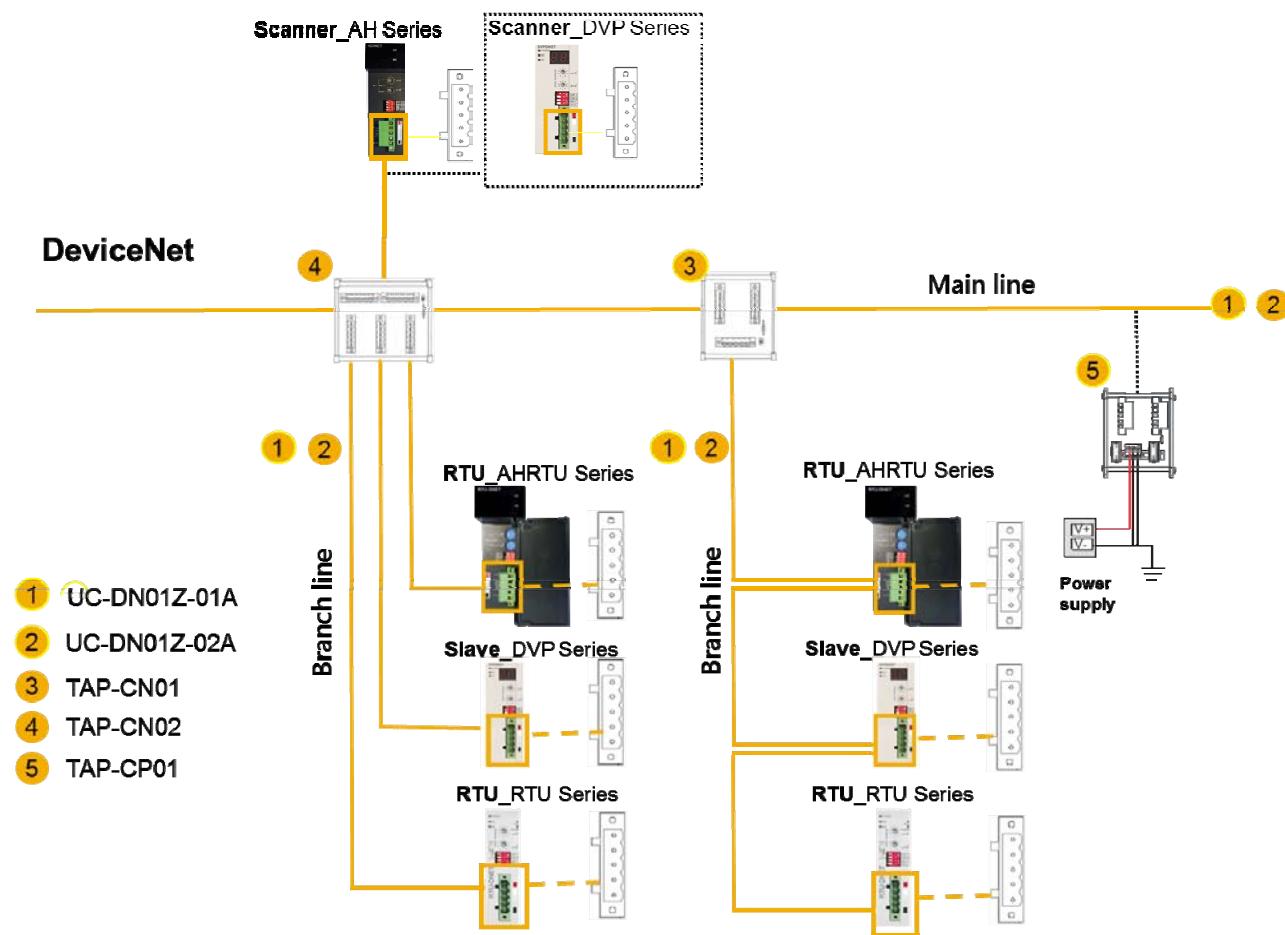

Note: DeviceNet requires that users connect a terminator to each end of a DeviceNet cable. The resistance of the terminators connected is 121Ω (1/4 watts). Please refer to section 4.3.3 for more information about a terminator.

4.3.1 Applicable DeviceNet Models


Communication port	Classification	Model	Cable	Distribution box
	Scanner_AH series	AH10DNET-5A	1 2	3 4 5
	Scanner_DVP series	DVPDNET-SL	1 2	3 4 5
	Slave_AH series	--	--	--
	Slave_DVP series	DVPDT01-S, DVPDT02-H2, RTU-DNET	1 2	3 4 5
	RTU_AHRTU series	AHRTU-DNET-5A, AH10EMC-5A	1 2	3 4 5
	RTU_RTU series	RTU-DNET	1 2	3 4 5

Delta PLC/HMI Cable Selection Guide

4.3.2 Specifications Related to DeviceNet

- Pinout

Pin	Signal	Color	Description	
1	V-	Black	0 V DC	
2	CAN_L	Blue	Signal	
3	SHIELD	-	Shielded cable	
4	CAN_H	White	Signal +	
5	V+	Red	24 V DC	

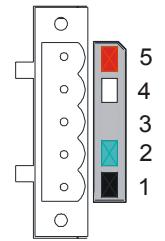

- Cable

		Model	Length	AWG
1		UC-DN01Z-01A	305 m	2#15, 2#18 SHLD PVC (Thick)
2		UC-DN01Z-02A	305 m	2#22, 2#24 SHLD PVC (Thin)

Note 1: The cable is sold by the meter. Max. ordering quantity: 305 meters(1 roll). Min. ordering quantity: 1 meter.




Note 2: ① UC-DN01Z-01A and ② UC-DN01Z-02A can be used as main cables or branch cables. The maximum communication distances that the two cables support are different. The maximum communication lengths that the two cables support under different DeviceNet transmission rates are shown below.

DeviceNet transmission rate (bit/s)	125 K	250 K	500 K
Maximum communication distance of UC-DN01Z-01A (m)	500	250	100
Maximum communication distance of UC-DN01Z-02A (m)	100	100	100

Note 2: DeviceNet stipulates the maximum communication distances of transmission rates. The relation between transmission rates and maximum communication distances is shown below.

Transmission rate (bit/s)	10 K	20 K	50 K	125 K	250 K	500 K
Maximum communication distance (m)	5000	2500	1000	500	250	100

- Distribution box

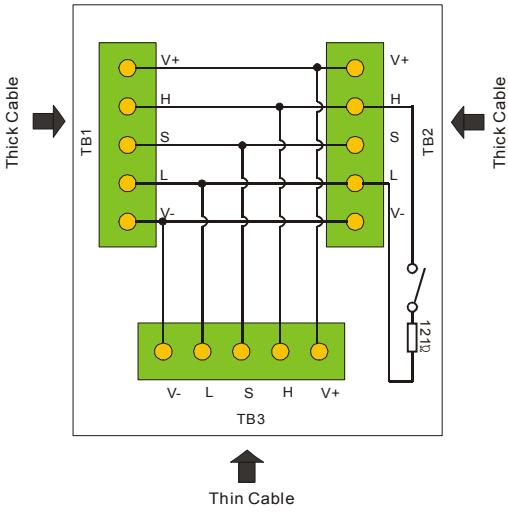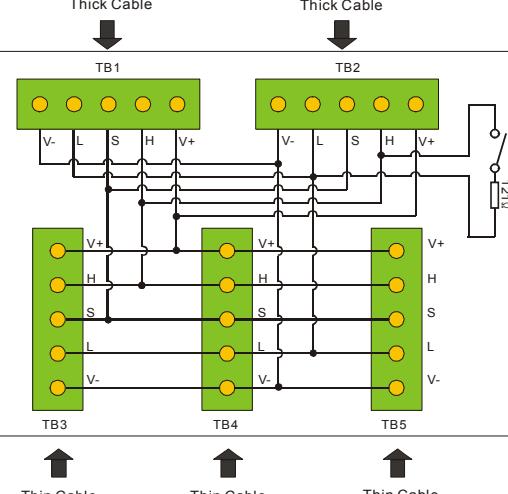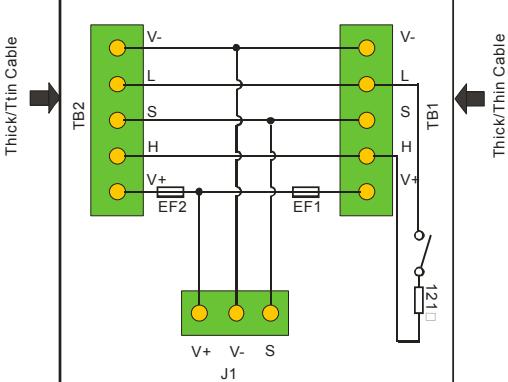
Model	Circuitry
3 TAP-CN01	
4 TAP-CN02	
5 TAP-CP01 (Power supply distribution box)	
Connector	Removable terminal block (5.08 mm)
Terminator	121Ω

Delta PLC/HMI Cable Selection Guide

4.3.3 Terminator

DeviceNet requires that users connect a terminator to each end of a DeviceNet cable. The resistance of the terminators connected is 121Ω (1/4 watts).

1. Terminator connected to the starting end of a cable: The terminator in a distribution box can be used, that is, the terminator switch on a distribution box can be set to ON.
2. Terminator connected to the terminal end of a cable: A terminator needs to be connected. The resistance of the terminator is 121Ω (1/4 watts).

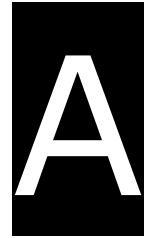

Appendix A Cable Table

Table of Contents

A.1 Cable Table.....	A-2
--------------------------------	------------

Delta PLC/HMI Cable Selection Guide

A.1 Cable Table

Type	Model	Purpose
Cables for PLC programming and serial communication	UC-PRG015-01A	Programming cable for PLC (mini USB) to PC, 1.5 m
	UC-PRG015-02A	Programming cable for TP(USB B type) to PC, 1.5 m
	UC-PRG020-12A	Programming cable for PLC (DB9 female/8-pin mini-DIN male) to PC, 2 m
	UC-PRG030-01A	Programming cable for PLC (mini USB) to PC, 3 m
	UC-PRG030-02A	Programming cable for TP (USB Type-B) to PC, 3 m
	UC-PRG030-10A	Programming cable for PLC/HMI/TP (DB9 female) to PC, 3 m
	UC-PRG030-20A	Programming cable for PLC/HMI (RJ45) to PC, 3 m
	UC-PRG050-02A	Programming cable for DOP (USB Type-B) to PC, 5 m
	UC-MS010-02A	Communication cable for PLC (8-pin mini-DIN male) to PC, 1 m
	UC-MS020-01A	Communication cable for PLC (8-pin mini-DIN male) to PC, 2 m
	UC-MS020-06A	Communication cable for PLC (8-pin mini-DIN male) to HMI, 2 m
	UC-MS030-01A	Communication cable for PLC (8-pin mini-DIN male) to PC, 3 m
	UC-MS030-06A	Communication cable for PLC (8-pin mini-DIN male) to HMI, 3 m
	UC-MS030-03A	Communication cable for TP (DB9 female) to AH500 PLC, 3 m
	UC-MS030-04A	Communication cable for AH500 PLC (DB9 male) to DMV, 3 m
Extension cables for I/O modules	UC-ET010-13B	I/O extension cable for external terminal module (HDC), 1 m
	UC-ET010-15B	I/O extension cable for external terminal module (HDC), 1 m
	UC-ET010-24A	I/O extension cable for external terminal module (MIL connector IDC40 to IDC40), 1 m
	UC-ET010-24B	I/O extension cable for external terminal module (MIL connector IDC40 to IDC40), 1 m (shield)
	UC-ET010-24C	I/O extension cable for external terminal module (MIL connector IDC40 to IDC20x2), 1 m
	UC-ET010-24D	I/O extension cable for external terminal module (MIL connector IDC40 to IDC20x2), 1 m (shield)
	UC-ET010-33B	I/O extension cable for external terminal module (DB37), 1 m

Appendix A Cable Table

Type	Model	Purpose
Extension cables for I/O modules	UC-ET020-24B	I/O extension cable for external terminal module (MIL connector IDC40 to IDC40), 2 m (shield)
	UC-ET020-24D	I/O extension cable for external terminal module (MIL connector IDC40 to IDC20x2), 2 m (shield)
	UC-ET030-24B	I/O extension cable for external terminal module (MIL connector IDC40 to IDC40), 3 m (shield)
	UC-ET030-24D	I/O extension cable for external terminal module (MIL connector IDC40 to IDC20x2), 3 m (shield)
	AHACAB06-5A	I/O extension cable for extension backplane, 0.6 m
	AHACAB10-5A	I/O extension cable for extension backplane, 1 m
	AHACAB15-5A	I/O extension cable for extension backplane, 1.5 m
	AHACAB30-5A	I/O extension cable for extension backplane, 3 m
	AHACAB50-5A	I/O extension cable for extension backplane, 5 m
	AHACABA0-5A	I/O extension cable for extension backplane, 10 m
	AHACABA5-5A	I/O extension cable for extension backplane, 15 m
	AHACABB0-5A	I/O extension cable for extension backplane, 20 m
	AHACABC0-5A	I/O extension cable for extension backplane, 30 m
	AHACABD0-5A	I/O extension cable for extension backplane, 40 m
	AHACABE0-5A	I/O extension cable for extension backplane, 50 m
	AHACABF0-5A	I/O extension cable for extension backplane, 60 m
	AHACABG0-5A	I/O extension cable for extension backplane, 70 m
	AHACABH0-5A	I/O extension cable for extension backplane, 80 m
	AHACABJ0-5A	I/O extension cable for extension backplane, 90 m
	AHACABK0-5A	I/O extension cable for extension backplane, 100 m

Appendix A Cable Table

Type	Model	Purpose
Motion control cables	UC-CMC003-01A	CANopen communication cable, 0.3 m
	UC-CMC005-01A	CANopen communication cable, 0.5 m
	UC-CMC010-01A	CANopen communication cable, 1 m
	UC-CMC015-01A	CANopen communication cable, 1.5 m
	UC-CMC020-01A	CANopen communication cable, 2 m
	UC-CMC030-01A	CANopen communication cable, 3 m
	UC-CMC050-01A	CANopen communication cable, 5 m
	UC-CMC100-01A	CANopen communication cable, 10 m
	UC-CMC200-01A	CANopen communication cable, 20 m
	UC-EMC003-02A	EtherCAT communication cable, 0.3 m
	UC-EMC005-02A	EtherCAT communication cable, 0.5 m
	UC-EMC010-02A	EtherCAT communication cable, 1 m
	UC-EMC020-02A	EtherCAT communication cable, 2 m
	UC-EMC050-02A	EtherCAT communication cable, 5 m
	UC-EMC100-02A	EtherCAT communication cable, 10 m
	UC-EMC200-02A	EtherCAT communication cable, 20 m
Networking cables	UC-CMC003-01A	CANopen communication cable, 0.3 m
	UC-CMC005-01A	CANopen communication cable, 0.5 m
	UC-CMC010-01A	CANopen communication cable, 1 m
	UC-CMC015-01A	CANopen communication cable, 1.5 m
	UC-CMC020-01A	CANopen communication cable, 2 m
	UC-CMC030-01A	CANopen communication cable, 3 m
	UC-CMC050-01A	CANopen communication cable, 5 m
	UC-CMC100-01A	CANopen communication cable, 10 m
	UC-CMC200-01A	CANopen communication cable, 20 m
	UC-DN01Z-01A	DeviceNet communication cable, 305 m


Appendix A Cable Table

Type	Model	Purpose
	UC-DN01Z-02A	DeviceNet communication cable, 305 m
	UC-PF01Z-01A	PROFIBUS communication cable, 305 m
External terminal modules	UB-10-ID16A	External terminal module for digital input module(MIL connector)
	UB-10-ID32A	External terminal module for digital input module(MIL connector)
	UB-10-ID32B	External terminal module for digital input modules (DB37 connector)
	UB-10-OR16A	External terminal module for digital output modules (16-point relay output, MIL connector)
	UB-10-OR16B	External terminal module for digital output modules (16-point relay output, MIL connector)
	UB-10-OR32A	External terminal module for digital output modules (32-point relay output, DB37 connector)
	UB-10-OR32B	External terminal module for digital output modules (32-point relay output, DB37 connector)
	UB-10-OT32A	External terminal module for digital output modules (transistor output, MIL connector)
	UB-10-OT32B	External terminal module for digital output modules (transistor output, DB37 connector)
	UB-10-IO16C	External terminal module for motion control modules (HDC)
	UB-10-IO22C	External terminal module for motion control modules (HDC)
	UB-10-IO24C	External terminal module for motion control modules (HDC)
	UB-10-IO34C	External terminal module for motion control modules (HDC)
Adapters / Connector	TAP-CN01	DeviceNet/CANopen distribution Box, 1 to 2
	TAP-CN02	DeviceNet/CANopen distribution Box, 1 to 4
	TAP-CN03	DeviceNet/CANopen distribution Box, 1 to 4, RJ45 adapter
	TAP-CP01	Power supply distribution box
	UN-03EN-04A	RJ45 adapter
	UN-03PF-01A	PROFIBUS connector
	UN-03PF-02A	PROFIBUS connector
	UN-03PF-03A	PROFIBUS connector
Terminators	TAP-TR01	Terminator, 121 Ω
	TAP-TR02	Terminator, 150 Ω

Appendix A Cable Table

MEMO

A

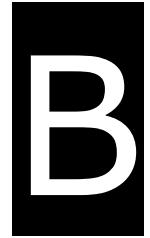

Appendix B USB Driver

Table of Contents





B.1	Installing the UC-PRG020-12A/IFD6500 Driver	B-2
------------	--	------------

Delta PLC/HMI Cable Selection Guide

B.1 Installing the UC-PRG020-12A/IFD6500 Driver

Double-click the executable file CP210xVCPIinstaller_x86.exe or CP210xVCPIinstaller_x64.exe, and then follow the steps below. (If a 32-bit Windows operating system is used, CP210xVCPIinstaller_x86.exe should be double-clicked. If a 64-bit Windows operating system is used, CP210xVCPIinstaller_x64.exe should be double-clicked.)

Please download the UC-PRG020-12A/IFD6500 driver from the official website of Delta (<http://www.deltaww.com/>).

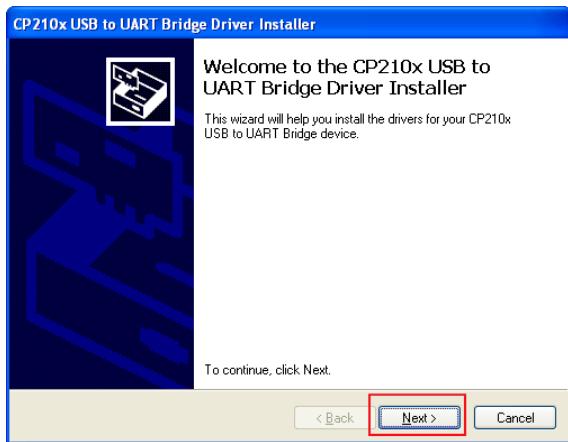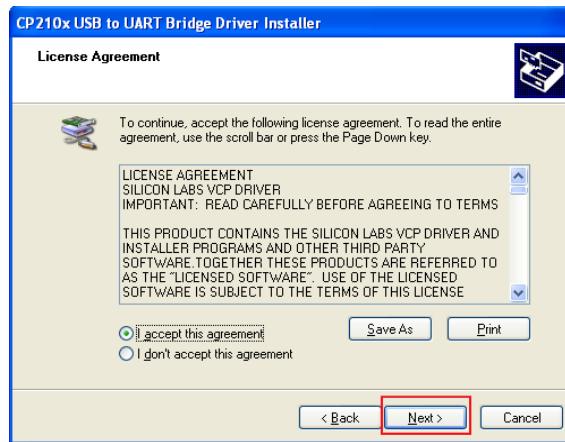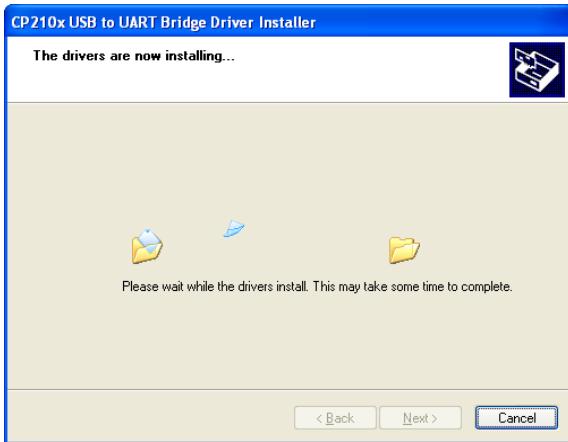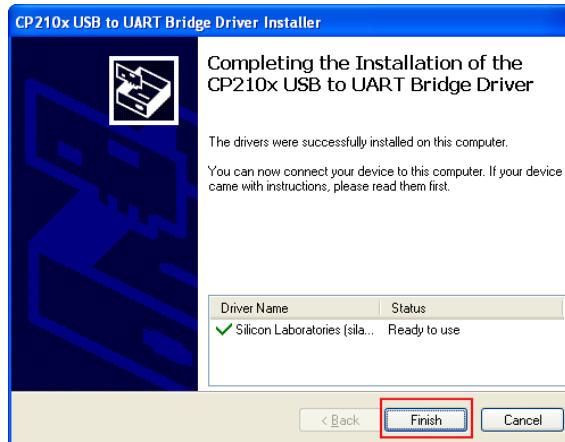Step 1**Step 2****Step 3****Step 4****Step 5**

After UC-PRG020-12A/IFD6500 is connected to the computer, **Silicon Labs CP210x USB to UART Bridge (COMx)** will appear in the **Device Manager** window. **COMx** represents the communication port connected to UC-PRG020-12A/IFD6500.